Troubleshoot ASAv Installation Failure on vMware ESXi

Contents

Introduction Prerequisites Requirements Components Used Problem: ASAv Installation Failure on vMware ESXi Solution Result

Introduction

This document describes how to overcome a Cisco Adaptive Security Virtual Appliance (ASAv) boot loop on vMware Elastic Sky X (ESXi) due to error message "Error: Platform type has not been configured" and "Error: Invalid platform name () read from OVF". The purpose of this document is to explain the best way to solve these issues and to be able to successfully install ASAv on vMware ESXi.

Prerequisites

Requirements

Cisco recommends that you have basic knowledge of vMware.

Components Used

The information in this document is based on vMware ESXi 6.0.0 for ASAv versions 9.6.2.

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, make sure that you understand the potential impact of any command.

Problem: ASAv Installation Failure on vMware ESXi

When the ASAv template is deployed on vMware ESXi for ASAv versions 9.5.x, 9.6.x and 9.7.x, the ASAv stays in a boot loop due to these error messages.

"Error: Platform type has not been configured"
"Error: Invalid platform name () read from OVF"
"OVF does not contain a ControllerType property. Please check your deployment source files."

Example of the error message displayed on vMware Console.

Restricted Rights Legend Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subparagraph (c) of the Commercial Computer Software - Restricted Rights clause at FAR sec. 52.227-19 and subparagraph (c) (1) (ii) of the Rights in Technical Data and Computer Software clause at DFARS sec. 252.227-7013. Cisco Systems, Inc. 170 West Tasman Drive San Jose, California 95134-1706 Error: Platform type has not been configured. Error: Invalid platform name () read from OVF. OVF does not contain a ControllerType property. Please check your deployment so urce files.

After these errors appear, the ASAv is stuck in a boot loop and these messages display in every boot.

Solution

Step 1. Open vSphere Web Client.

Step 2. Go to VMs and Templates.

Step 3. Select the affected ASAv from the vMware hosts list and right click on it.

Step 4. Click Edit Settings as shown in the image.

www.wore vSphere Web Cl	Actions - christian - christian
	Guest OS Snapshots
	 Migrate Clone Template
Concentration (MALA)	Fault Tolerance VM Policies
Committee PMC8.2	Compatibility Export System Logs
	Edit Settings Move To
	Rename Edit Notes Tags & Custom Attributes
	And Permission
	The second from Inventory The second from Disk

Step 5. Go to the vApp Options tab as shown in the image.

Virtual Hardware	VM Options	SDRS Rules	vApp Options					
Enable vApp options When vApp options are enabled, you can configure OVF properties, use the OVF environment, and specify IP allocation and product information for this virtual machine.								
Application prop	Application properties - ASAv							
Product: ASAv Version: 9.7(1.4) Vendor: Cisco Systems Inc There are no properties to edit								
Deployment								
▶ IP allocation		Expan	d for IP allocation	settings				
 Unrecognized OVF sections 		No unrecognized sections						
 License agree 	ments							
Authoring								
▶ Product	Name ASAv							
 Properties 								
IP allocation Expand to edit supported IP allocation settings								
 OVF settings 	ettings Expand for OVF settings							

Compatibility: ESXi 5.1 and later (VM version 9)

ок

Cancel

Step 6. Uncheck Enable vApp options.

Step 7. Select **OK** as shown in the image.

🔂 asa963-pri1 - Edit Settings						? N
Virtual Hardware	VM Options	SDRS Rules	vApp Options)		
Enable vApp of	options					^
When vApp of OVF environm virtual machin	otions are enal nent, and speci ne.	bled, you can co ify IP allocation	onfigure OVF pro and product info	perties, use the rmation for this		**
Compatibility: ESXi	5.1 and later (\	/M version 9)			oĶ	Cancel

Step 8. Proceed to power off the ASAv Virtual Machine (VM) and then power on the ASAv once again as shown in the image.



Result

The ASAv boot loops and the Command Line Interface (CLI) prompt is displayed as shown in the image.

