

# Troubleshoot UCS RAID Controller Issues

## Contents

---

### [Introduction](#)

### [Prerequisites](#)

[Requirements](#)

[Component Used](#)

### [Known UCSM Faults Codes](#)

### [Replace RAID Controller](#)

[Legacy Mode](#)

[UEFI Boot Mode](#)

### [Logs To Be Collected](#)

[How To Collect Storcli Logs](#)

[OS Is Installed](#)

[OS Is Not Installed](#)

[How to Convert Storcli.efi to efi.IMG File using HTML5 KVM](#)

[Background](#)

[Detailed Steps](#)

### [Virtual Drive States And Recommended Steps](#)

### [Related Information](#)

---

## Introduction

This document describes how to troubleshoot, collect logs, and recommend actions required for the RAID Controller issue in the Cisco UCS environment.

## Prerequisites

### Requirements

There are no specific requirements for this document.

### Component Used

The information in this document is based on these software and hardware versions:

- Unified Computing System (UCS)
- Cisco Unified Computing System Manager (UCSM)
- Redundant Array of Independent Disks (RAID) Controller

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, ensure that you understand the potential impact of any command.

## Known UCSM Faults Codes

UCSM Fault:F1004

Description: Controller X on server X is inoperable. Reason: Device non-responsive.

UCSM Fault:F1004

Description: Controller 1 on server 2 is inoperable. Reason: Device reported corrupt data.

UCSM Fault: F1007

Description: Virtual drive X on server X operability: inoperable. Reason: Drive state: unknown.

UCSM Fault: F0181

Description: Local disk 1 on server 3/4 operability: inoperable. Reason: Drive state: unknown.

UCSM Fault: F1834

Description: Controller 1 on server 2/7 is degraded. Reason: controller-flash-is-degraded.


## Replace RAID Controller

When you replace a RAID controller, the RAID configuration that is stored in the controller is lost. Use this procedure to restore your RAID configuration to the new RAID Controller.

### Legacy Mode

Step 1. Power off the server, replace your RAID controller.

---

 **Warning:** If it is a full chassis swap, replace all drives into the drive bays in the same order that they were installed in the old chassis. Label each disk order before you remove the drives from the present chassis.

---


Step 2. Reboot the server and watch for the prompt to **press F**.

Press **F** when you see this on-screen prompt.

Foreign configuration(s) found on adapter.

Press any key to continue or 'C' load the configuration utility, or 'F' to import foreign configuration

---

 **Note:** Before replacing the RAID controller, the VD can be optimal and accessible from the host.

---

### UEFI Boot Mode

Step 1. Check if the server is configured in Unified Extensible Firmware Interface (UEFI) mode.

Configure BIOS

Configure Boot Order


Configure BIOS Profile

## BIOS Properties

Running Version	C240M4.3.0.4b.0.0610182318
UEFI Secure Boot	<input type="checkbox"/>
Actual Boot Mode	Uefi
Configured Boot Mode	UEFI ▼
Last Configured Boot Order Source	CIMC
Configured One time boot device	▼

Save Changes


Step 2. Power off the server, replace your RAID controller.


 **Warning:** If it is a full chassis swap, replace all drives into the drive bays in the same order that they were installed in the old chassis. Label each disk order before you remove the drives from the present chassis.

Step 3. Reboot the server and watch for the **F2 Prompt**.

Step 4. Press **F2** when prompted to enter the BIOS Setup utility.

Step 5. Under **Setup Utility**, navigate to **Advanced > Select controller > Configure**, and click **Import foreign configuration** to Import.

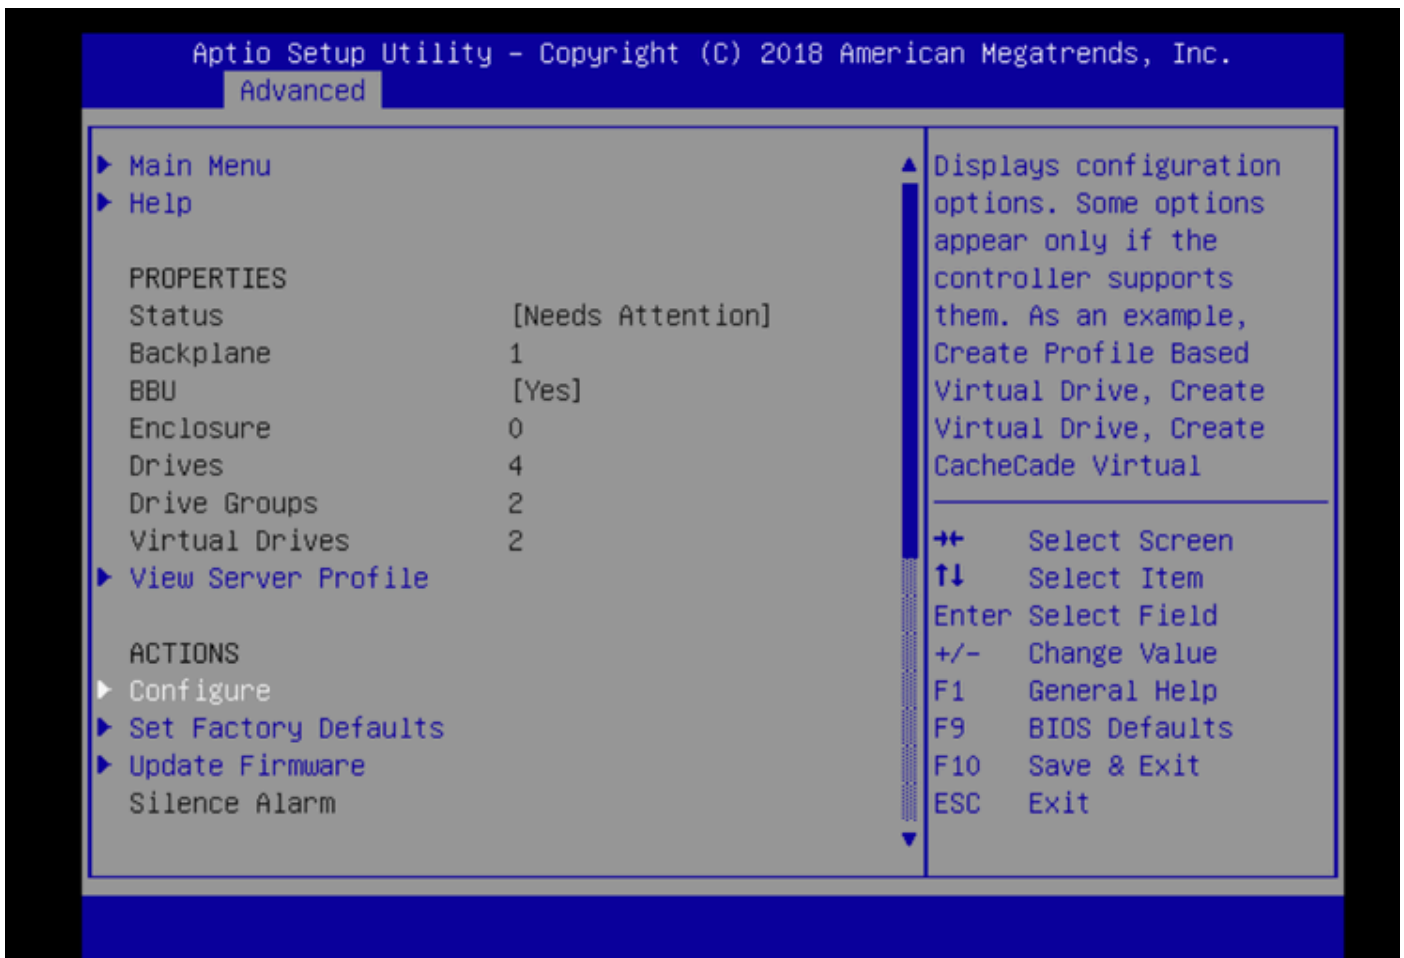


 **Note:** Before replacing the RAID controller, the VD can be optimal and accessible from the host.

## Logs To Be Collected

Please ensure you have these logs attached to the TAC case.

- Server\_techsupport
- UCSM\_techsupport (if applicable)
- OS logs and Driver details
- LSIget / storcli logs
- Screenshot, if applicable ( example PSOD)

 **Note:** If the Controller does not respond, storcli logs capture nothing. Reboot the server and then collect the Storcli logs, if the Controller starts responding. If still no response, collect server\_techsupport before and after the reboot of the server.

## How To Collect Storcli Logs

LSIGET is the script that runs all the commands for the utilities. STORCLI is the utility itself.

 **Note:** Always download and use the latest Lsiget from the Broadcom website.

## OS Is Installed

Linux OS:

In order to install StorCLI on Linux operating systems, perform these steps.

1. Unzip the StorCLI package.
2. To install the StorCLI RPM, run the **rpm -ivh <StorCLI-x.xx-x.noarch.rpm>** command.
3. To upgrade the StorCLI RPM, run the **rpm -Uvh <StorCLI-x.xx-x.noarch.rpm>** command.

Commands to capture:

```
./storcli /c0 /eall show phyerrorCounters > Phy.txt
```

```
./storcli /c0 show termlog > Termlog.txt
```

```
./storcli /c0/eall/sall show all > PD.txt
```

```
./storcli /c0/vall show all > VD.txt
```

```
./storcli/c0 show eventloginfo > eventlog.txt
```

```
./storcli /c0 show pdfailevents > PDFailEvents.txt
```

Download LSIget script for Linux OS.

[Broadcom Support and Services](#)

## ESXI OS

Step 1. Download Storcli Utility from here: [Broadcom Docs Download](#)

Step 2. Copy the **storcli.vib** from the source folder to the ESXi datastore. Check the readme file and use the corresponding VIB file.

Step 3. Install storcli utility as shown here. You need to specify the complete path to the datastore where the VIB is located.

```
esxcli software vib install -v /vmfs/volumes/<datastore>/vmware-esx-storcli.vib --no-sig-check
```

Step 4. Navigate to **/opt/lsi/storcli** directory and execute any storcli command to check if the utility is able to collect the logs.

Example: **./storcli /c0 show all**

Step 5. Download the LSIget utility from this link.

[Broadcom Support and Services](#)

Step 6. Select the VMware Version.

Step 7. Copy the file onto the host OS datastore.

Step 8. Run the command **tar -zxvf lsigetvmware\_062514.tgz** (corrected for the filename/version downloaded).

Sample Output on ESXi 6.0:

```
/vmfs/volumes/52a767af-784a790c-3505-a44c1129fe2c/LSI # tar -zxvf lsigetvmware_062514.tgz
/vmfs/volumes/52a767af-784a790c-3505-a44c1129fe2c/LSI # ls
lsigetvmware_062514      lsigetvmware_062514.tgz
/vmfs/volumes/52a767af-784a790c-3505-a44c1129fe2c/LSI # cd lsigetvmware_062514/
/vmfs/volumes/52a767af-784a790c-3505-a44c1129fe2c/LSI/lsigetvmware_062514 # ls
Readme.txt      all_cli      lsigetlinux.sh
/vmfs/volumes/52a767af-784a790c-3505-a44c1129fe2c/LSI/lsigetvmware_062514 # ./lsigetlinux.sh
```


The **./lsigetlinux.sh -D -Q** version of the command can be used to run the script in Quiet Mode to reduce production impact.

Step 9. Once the tool successfully completes, it generates a tar.gz file. Attach this file to the TAC case in the way a normal Tech Support bundle is uploaded.

## OS Is Not Installed

Download Storcli tool: [Broadcom Support and Services](#)

Step 1. Download Storcli from Management Softwares and Tools ([link](#)), extract the folder and navigate to the **EFI folder**. Get the Storcli file with .EFI extension, as shown in the image.

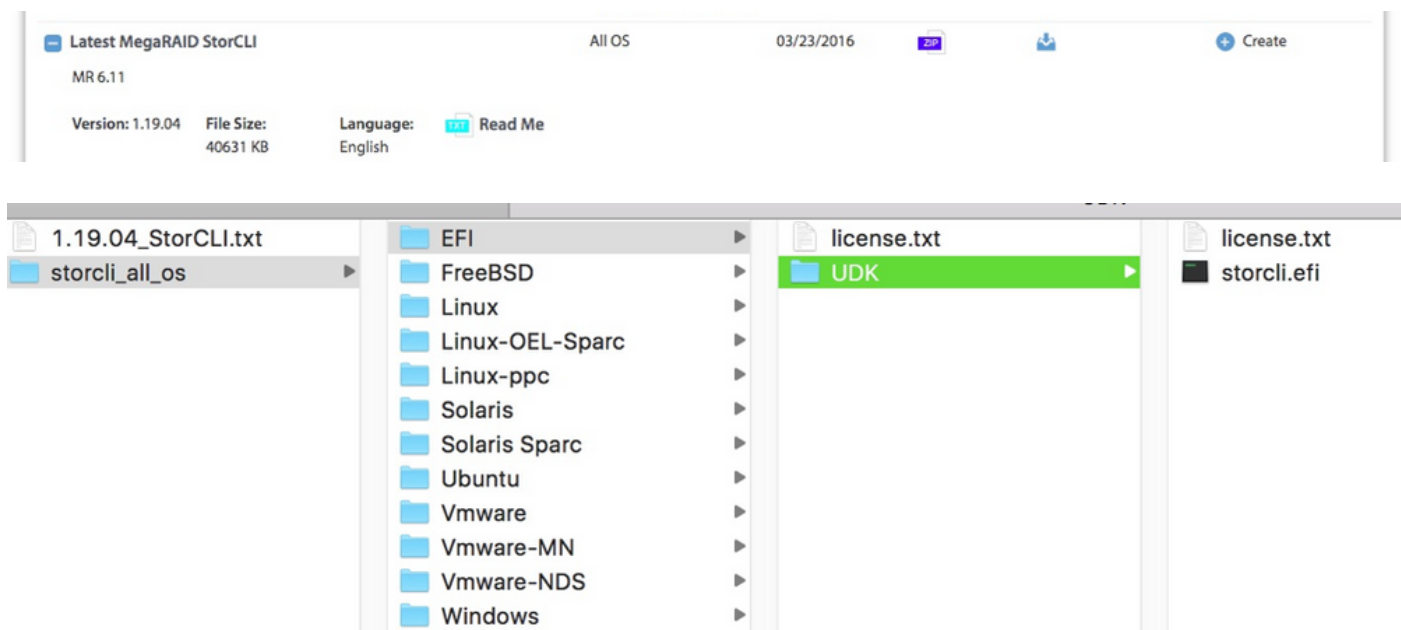


Step 2. Create a new folder by any name. Here it is created by the name EFI and storcli.efi is copied in that folder.

Launch KVM of the server, and as shown in the image, navigate to **Virtual Media create image** option.



Browse to provide source folder on **Create Image from Folder** pop up. Source folder selected here is the EFI folder which was created earlier, it contains the storcli.efi file.

Also, browse the destination path for the IMG file. As shown in the image, click **Finish** to create the IMG file.

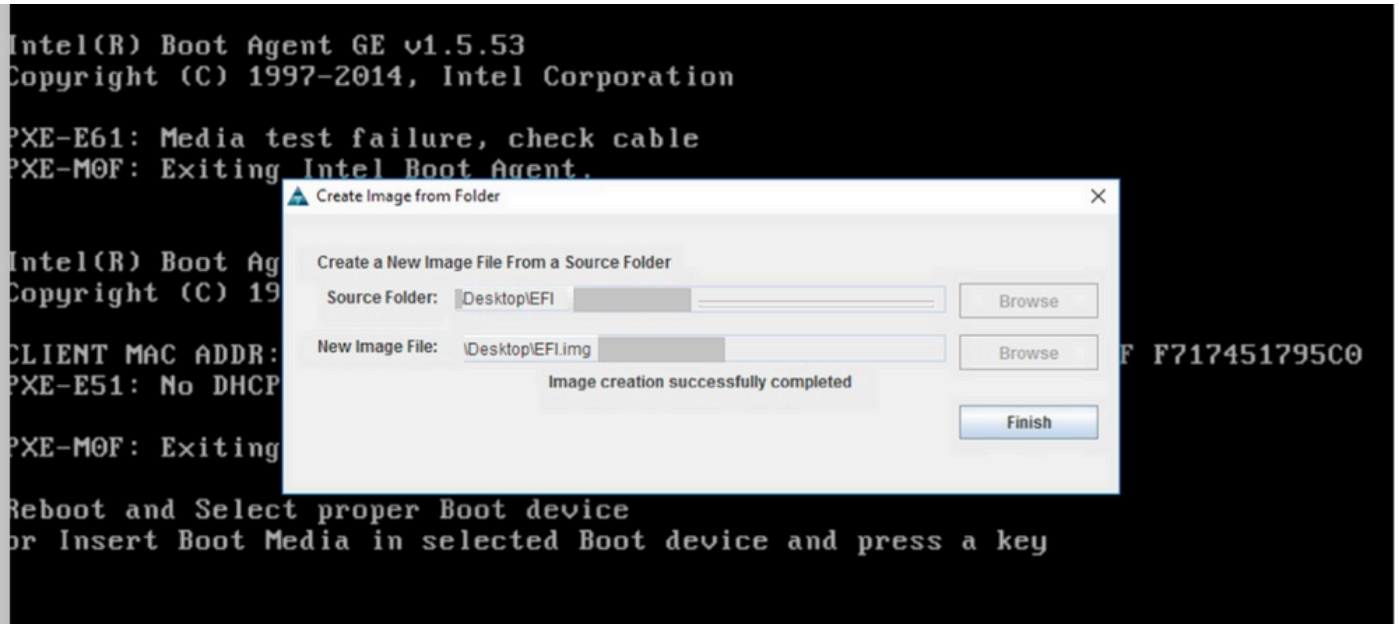


 **Note:** JAVA based KVM was used here to convert from storcli.efi to EFI.IMG.

Step 3. Launch KVM, attach efi.img.

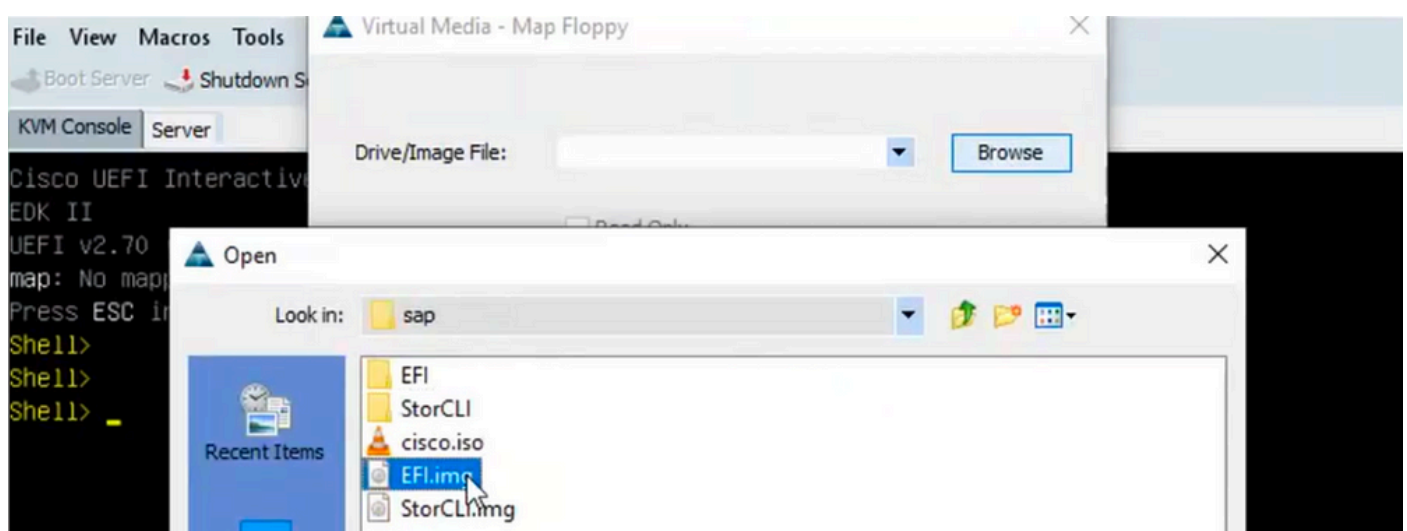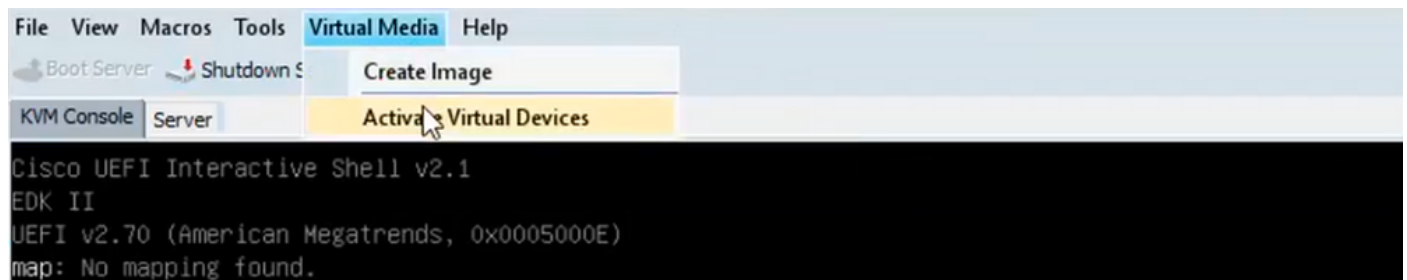

Step 4. Map the EFI Image.

 **Note:** Do Not tick the check of READ ONLY.



## How to Convert Storcli.efi to efi.IMG File using HTML5 KVM

### Background

Starting with CIMC/UCSM 4.1, the Java KVM is no longer available to create read/write image files. Also, JAVA based KVM can no longer be available starting CIMC/UCSM 4.1.

### Detailed Steps

Step A: You need a linux machine to perform these steps.

Step B : [root@localhost /]# dd if=/dev/zero of=hdd.img bs=1024 count=102400


102400+0 records in

102400+0 records out

104857600 bytes (105 MB) copied, 0.252686 s, 415 MB/s

Step C: [root@localhost /]# mkfs.msdos hdd.img

mkfs.fat 3.0.20 (12 Jun 2013)

 **Note:** If you do not see the MSDOS as an extension, then you would need to install the respective .RPM as shown here. Use Yum list to see if the package is there, otherwise, you would need to download one from Internet or from redhat.

```
[root@localhost /]# rpm -ivh dosfstools-3.0.20-10.el7.x86_64.rpm
```

```
warning: dosfstools-3.0.20-10.el7.x86_64.rpm: Header V3 RSA/SHA256 Signature, key ID f4a80eb5: NOKEY
```

```
Preparing... ##### [100%]
```

```
Updating / installing...
```

```
1:dosfstools-3.0.20-10.el7 ##### [100%]
```



Step D : Mount the hdd.img

```
[root@localhost /]# mount -o loop hdd.img /mnt/hdd
```

Step E: Copy the required files (storecli.efi file )

```
[root@localhost EFI]# cp storcli.efi /mnt/hdd
```

```
[root@localhost EFI]#
```

```
[root@localhost EFI]# ls
```

```
storcli.efi
```

Step F: Umount /mnt/hdd

```
[root@localhost EFI]# umount /mnt/hdd
```

Step G: Verifying the hdd.img type. Browse to the directory and run the command shown here.


```
[root@localhost /]# file hdd.img
```

```
hdd.img: x86 boot sector, mkdosfs boot message display, code offset 0x3c, OEM-ID "mkfs.fat",  
sectors/cluster 4, root entries 512, Media descriptor 0xf8, sectors/FAT 200, heads 64, sectors 204800  
(volumes > 32 MB) , reserved 0x1, serial number 0x6f39955b, unlabeled, FAT (16 bit)
```

Step H :Using Winscp or any other file transfer tool, copy the image and transfer it to the desired system.

Step I: Launch the HTML5 KVM. Click **activate virtual devices > Removable disk > Browse to select hdd.img** copied from Linux machine and click **map drive**.

Step 5. After booting into EFI shell, run this command **map -r**, as shown in the image.

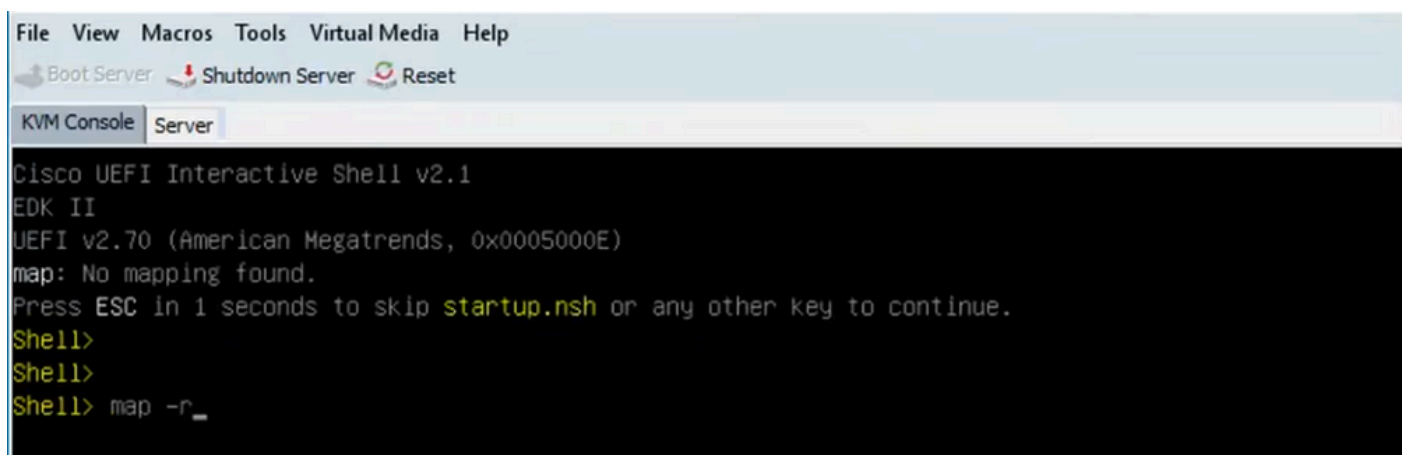

```
File View Macros Tools Virtual Media Help
Boot Server Shutdown Server Reset
KVM Console Server
Cisco UEFI Interactive Shell v2.1
EDK II
UEFI v2.70 (American Megatrends, 0x0005000E)
map: No mapping found.
Press ESC in 1 seconds to skip startup.nsh or any other key to continue.
Shell>
Shell>
Shell> map -r _
```

```
File View Macros Tools Virtual Media Help
Boot Server Shutdown Server Reset
KVM Console Server
Mapping table
FS0: Alias(s):HD6d0c0c:;BLK2:
    PciRoot(0x0)/Pci(0x14,0x0)/USB(0x3,0x0)/USB(0x2,0x0)/Unit(0x2)
BLK0: Alias(s):
    PciRoot(0x0)/Pci(0x14,0x0)/USB(0x3,0x0)/USB(0x2,0x0)
BLK1: Alias(s):
    PciRoot(0x0)/Pci(0x14,0x0)/USB(0x3,0x0)/USB(0x2,0x0)/Unit(0x1)
BLK3: Alias(s):
    PciRoot(0x0)/Pci(0x14,0x0)/USB(0x3,0x0)/USB(0x2,0x0)/Unit(0x3)
BLK4: Alias(s):
    PciRoot(0x0)/Pci(0x14,0x0)/USB(0x3,0x0)/USB(0x2,0x0)/Unit(0x4)
Shell> _
```

Step 6. Run this command `fs<X>`: where `X` = controller number that was received from the mapping table.

```
Shell> fs0: _
FS0:\>
```

Step 7. Run command `cd EFI`.

```
FS0:\> ls
Directory of: FS0:\
04/14/2020 16:12 <DIR>          4,096  EFI
          0 File(s)            0 bytes
          1 Dir(s)
FS0:\> cd efi
FS0:\efi\> _
```

Step 8. Type `ls` to confirm the `storcli.efi` is present. Run the command `Storcli.efi show` to confirm you are inside the correct Raid Controller. You can now see a directory structure with `storcli.efi` available and can run `storcli.efi` commands from here.

```
FS0:\efi\> ls
Directory of: FS0:\efi\
04/14/2020 20:06 <DIR>          0
04/14/2020 20:06 <DIR>          4,096
04/14/2020 19:41             13,597,280  storcli.efi
04/14/2020 14:43             685,484   termlog.txt
04/14/2020 14:44             851,905   events.txt
04/14/2020 16:12             424,236   snapdump.zip
          4 File(s)  15,558,905 bytes
          2 Dir(s)
FS0:\efi\> _
```

Run these Commands to collect the logs:

```
storcli.efi /c0/vall show all >showall.txt
```

```
storcli.efi /c0/vall show all >vall.txt
```

```
storcli.efi /c0/eall show all >eall.txt
```

```
storcli.efi /c0 show termlog > termlog.txt
storcli.efi /c0/eall/sa11 show all > showall.txt
storcli.efi /c0 show events file > Events.txt
storcli.efi /c0/eall show phyerrorcounters > phy.txt
storcli.efi /c0 show snapdump
storcli.efi /c0 get snapdump id=all file=snapdump.zip
Storcli.efi /c0 show pdfailevents file=pdfailevents.txt
```

At this point, you need to get the files to Cisco TAC for analysis. Unmount the .img file, and upload the logs to the Cisco TAC case.

## Virtual Drive States And Recommended Steps

Virtual Drive is optimal-The virtual drive operating condition is good. All configured drives are online.

No Action needed.

Virtual Drive is degraded- The virtual drive operating condition is not optimal. One of the configured drives has failed or is offline.

Action to be performed- Replace the drive as soon as possible. First, take Backup of the data.

Virtual Drive is Partially degraded- The operating condition in a RAID 6 virtual drive is not optimal. One of the configured drives has failed or is offline. RAID 6 can tolerate up to two drive failures.

Action to be performed- Replace the drive as soon as possible.

Virtual Drive is offline- The virtual drive is not available to the RAID controller. This is essentially a failed state.

Action to be performed- Bring the RAID back to the degraded state and backup the data. Replace the drive soon.

Virtual Drive is offline and new storage controller-The virtual drive is not available to the RAID controller. This is essentially a failed state.

Action to be performed-Do not replace the storage controller. Contact TAC for assistance.

## Related Information

- [UCS B-Series Servers: Replacing a RAID Controller with older firmware can cause the data-store mount to failure in ESXi hosts](#)
- [Cisco UCS C220 M5 Server Installation and Service Guide](#)