



Contents

- About This Guide 7
 - Document Revision History 7
 - Document Organization 7
 - Related Documentation and Resources. 9
 - Cisco Vision Documentation Go URL 9
 - Release-Specific Documents 9
 - Cisco Vision Documentation Notifications 9
 - Cisco Vision Documentation Team Email Contact Information 9
 - Obtaining Cisco Product Documentation 9
- Getting Started Installing or Upgrading Cisco Vision Dynamic Signage Director 11
 - Before You Begin 11
 - Hardware Prerequisites. 12
 - Minimum Virtual Machine System Requirements for Cisco Vision Dynamic Signage Director 12
 - VMware vSphere Tested Versions for Cisco Vision Dynamic Signage Director 13
 - Restrictions for Virtual Server Support. 13
 - Overview of the Installation and Upgrade Process 13
 - Migrating From Platform 2 Servers to a Virtual Environment 14
 - Installing on a Virtual Server for the First Time. 14
 - Upgrading an Existing Server Already Running Cisco Vision Dynamic Signage Director. 14
 - Upgrading From Cisco Vision Dynamic Signage Director Release 5.0 14
 - Upgrading From Cisco Vision Dynamic Signage Director Release 6.0 15
- Installing Cisco Vision Dynamic Signage Director for the First Time 17
 - Prerequisites. 17
 - Installation Tasks 18
 - Downloading the ISO Files from Cisco.com. 19
 - Logging Into the CIMC Interface 19
 - Verifying the Minimum CIMC Firmware Version for Cisco Vision Dynamic Signage Director 21
 - Launching the KVM Console 22
 - Mapping the Cisco Vision Dynamic Signage Director ISO Image 23
 - Installing the Cisco Vision Dynamic Signage Director ISO Image 25
 - Configuring the Network Setup 25

What To Do Next.	28
Using the Software Manager to Upgrade Cisco Vision Dynamic Signage Director Software, Language Packs, and Fonts.	29
Best Practices.	29
Prerequisites.	30
Preparing a Release 5.0 System for Upgrade to Cisco Vision Dynamic Signage Director Release 6.0.	30
Replacing DMPs.	31
Updating Playlists.	31
Removing Unsupported Content	31
Exporting a Device List.	31
Unlinking Cisco DMP 4310Gs From Locations	32
What To Do Next	32
Information About Using the Software Manager to Update Existing Cisco Vision Dynamic Signage Director Software.	32
ISO Upgrade Files	32
Disk Maintenance	32
Upgrade Tasks	32
Downloading ISO Upgrade Files from Cisco.com.	33
Uploading and Installing an ISO Upgrade File on the Cisco Vision Dynamic Signage Director Server.	34
Prerequisites	34
Task.	34
Rebooting the Cisco Vision Dynamic Signage Director Server	35
Reactivating Custom Fonts	35
Installing Language Packs	36
Installing Fonts	37
Guidelines for Installing Fonts	37
Procedure	37
What to Do Next	38
Verifying the Upgrade.	39
Clearing the Browser Cache	39
Clearing Expired Flash SWZ Files From Browser	40
Clearing the Flash Player Cache	40
Deleting Other Cached Files From Flash	41
Importing the Security Certificate	41
Adding a Security Exception for Mozilla Firefox	41
Logging Into Cisco Vision Dynamic Signage Director.	42
Verifying the Control Panel and Other Menus	42
Verifying that Services are Running	42
Configuring the Media Player for VLAN Compliance Checking.	43

Upgrading the DMP Firmware	45
Rebooting the DMPs	45
Verifying Media Players, Groups, and Zones in the Management Dashboard	45
Verifying the Multicast Configuration	46
Setting Up the Quest Venue Manager to Send Updates to Cisco Vision Dynamic Signage Director Server	47
Completing the Post-Upgrade Checklist and Testing	49
Upgrading the DMP Firmware	51
Contents	51
Prerequisites	51
Provisioning Tasks	52
Downloading the Firmware for All Media Players	52
Downloading the Series 2 and Series 3 Production Firmware	52
Downloading the Series 2 DMP Base Firmware	52
Uploading the DMP Firmware to Cisco Vision Dynamic Signage Director	52
Configuring the DMPs for Auto-Registration	54
Appendix A: Post-Upgrade Checklist	57
Appendix B: Port Reference	59
Cisco Vision Dynamic Signage Director Ports	59
Cisco Vision Dynamic Signage Director Input Ports	59
Cisco Vision Dynamic Signage Director Output Ports	60
Media Player Ports	61
Common Media Player Input Ports	61
Input Ports	62
Common Media Player Output Ports	62
Output Ports	63
Appendix C: CIMC Configuration and Firmware Upgrade Guidelines on the Cisco UCS C220 Server	65
CIMC Initial Configuration	65
Prerequisites	65
CIMC Initial Configuration Summary	66
CIMC Firmware Upgrade Guidelines	67
Before You Begin	68
Prerequisites	68
CIMC/BIOS Firmware Upgrade Summary	69

