



MPLS Basic MPLS Configuration Guide, Cisco IOS XE Fuji 16.7.x

First Published: 2017-11-17

Last Modified: 2017-11-17

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.

Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at www.cisco.com/go/offices.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2017 Cisco Systems, Inc. All rights reserved.



CONTENTS

CHAPTER 1

Read Me First 1

Short Description 2

CHAPTER 2

MPLS Transport Profile 3

Finding Feature Information 3

Restrictions for MPLS Transport Profile 3

Information About MPLS-TP 5

How MPLS Transport Profile Works 5

MPLS-TP Path Protection 5

Bidirectional LSPs 5

Support for MPLS Transport Profile OAM 6

MPLS Transport Profile Static and Dynamic Multisegment Pseudowires 7

MPLS-TP OAM Status for Static and Dynamic Multisegment Pseudowires 7

MPLS Transport Profile Links and Physical Interfaces 7

Tunnel Midpoints 7

How to Configure MPLS Transport Profile 8

Configuring the MPLS Label Range 8

Configuring the Router ID and Global ID 9

Configuring Bidirectional Forwarding Detection Templates 10

Configuring Pseudowire OAM Attributes 11

Configuring the Pseudowire Class 12

Configuring the Pseudowire 13

Configuring the MPLS-TP Tunnel 15

Configuring MPLS-TP LSPs at Midpoints 17

Configuring MPLS-TP Links and Physical Interfaces 19

Configuring Static-to-Static Multisegment Pseudowires for MPLS-TP 21

Configuring a Template with Pseudowire Type-Length-Value Parameters	23
Configuring Static-to-Dynamic Multisegment Pseudowires for MPLS-TP	23
Verifying the MPLS-TP Configuration	26
Configuration Examples for MPLS Transport Profile	27
Example: Configuring Static-to-dynamic Multisegment Pseudowires for MPLS-TP	27
Additional References for MPLS Transport Profile	27
Feature Information for MPLS Transport Profile	28

CHAPTER 3**Multiprotocol Label Switching (MPLS) on Cisco Routers 29**

Information About MPLS	29
MPLS Overview	29
Functional Description of MPLS	29
Label Switching Functions	30
Distribution of Label Bindings	30
Benefits of MPLS	30
How to Configure MPLS	31
Configuring a Router for MPLS Switching	32
Verifying Configuration of MPLS Switching	32
Configuring a Router for MPLS Forwarding	33
Verifying Configuration of MPLS Forwarding	34
Additional References	35
Feature Information for MPLS on Cisco Routers	36
Glossary	36

CHAPTER 4**MPLS Infrastructure Changes Introduction of MFI and Removal of MPLS LSC and LC-ATM**

Features	39
Finding Feature Information	39
Information About MPLS Infrastructure Changes	39
Introduction of the MPLS Forwarding Infrastructure	39
Introduction of IP Rewrite Manager	40
MPLS LSC and LC-ATM Configurations	40
Additional References	40
Feature Information for MPLS Infrastructure Changes	41

CHAPTER 5**MPLS Static Labels 43**

- Finding Feature Information 43
- Restrictions for MPLS Static Labels 43
- Prerequisites for MPLS Static Labels 44
- Information About MPLS Static Labels 44
 - MPLS Static Labels Overview 44
 - Benefits of MPLS Static Labels 44
- How to Configure MPLS Static Labels 45
 - Configuring MPLS Static Prefix Label Bindings 45
 - Verifying MPLS Static Prefix Label Bindings 46
 - Configuring MPLS Static Crossconnects 47
 - Verifying MPLS Static Crossconnect Configuration 47
 - Monitoring and Maintaining MPLS Static Labels 48
- Configuration Examples for MPLS Static Labels 49
 - Example Configuring MPLS Static Prefixes Labels 49
 - Example Configuring MPLS Static Crossconnects 50
- Additional References 50
- Feature Information for MPLS Static Labels 51
- Glossary 52

CHAPTER 6**MPLS Multilink PPP Support 53**

- Finding Feature Information 53
- Prerequisites for MPLS Multilink PPP Support 53
- Information About MPLS Multilink PPP Support 54
 - MPLS Layer 3 Virtual Private Network Features Supported for Multilink PPP 54
 - MPLS Quality of Service Features Supported for Multilink PPP 55
 - MPLS Multilink PPP Support and PE-to-CE Links 55
 - MPLS Multilink PPP Support and Core Links 56
 - MPLS Multilink PPP Support in a CSC Network 57
 - MPLS Multilink PPP Support in an Interautonomous System 58
- How to Configure MPLS Multilink PPP Support 58
 - Enabling Cisco Express Forwarding 58
 - Creating a Multilink Bundle 59

Assigning an Interface to a Multilink Bundle 61

Disabling PPP Multilink Fragmentation 63

Verifying the Multilink PPP Configuration 64

Configuration Examples for MPLS Multilink PPP Support 67

 Example: Configuring Multilink PPP on an MPLS CSC PE Device 67

 Example: Enabling Cisco Express Forwarding 68

 Example: Creating a Multilink Bundle 69

 Example: Assigning an Interface to a Multilink Bundle 69

Additional References for MPLS Multilink PPP Support 70

Feature Information for MPLS Multilink PPP Support 70

Glossary 71

CHAPTER 7

6PE Multipath 73

Finding Feature Information 73

Information About 6PE Multipath 73

 6PE Multipath 73

How to Configure 6PE Multipath 74

 Configuring IBGP Multipath Load Sharing 74

Configuration Examples for 6PE Multipath 75

 Example: Configuring 6PE Multipath 75

Additional References 75

Feature Information for 6PE Multipath 76

CHAPTER 8

IPv6 Switching: Provider Edge Router over MPLS 77

Finding Feature Information 77

Prerequisites for IPv6 Switching: Provider Edge Router over MPLS 77

Information About IPv6 Switching: Provider Edge Router over MPLS 78

 Benefits of Deploying IPv6 over MPLS Backbones 78

 IPv6 on the Provider Edge Devices 78

How to Deploy IPv6 Switching: Provider Edge Router over MPLS 79

 Deploying IPv6 on the Provider Edge Devices (6PE) 79

 Specifying the Source Address Interface on a 6PE Device 79

 Binding and Advertising the 6PE Label to Advertise Prefixes 81

 Configuring IBGP Multipath Load Sharing 83

Configuration Examples for IPv6 Switching: Provider Edge Router over MPLS	84
Example: Provider Edge Device	84
Example: Core Device	84
Example: Monitoring 6PE	85
Additional References for IPv6 Switching: Provider Edge Router over MPLS	86
Feature Information for IPv6 Switching: Provider Edge Router over MPLS	87



CHAPTER 1

Read Me First

Important Information



Note For CUBE feature support information in Cisco IOS XE Bengaluru 17.6.1a and later releases, see [Cisco Unified Border Element IOS-XE Configuration Guide](#).



Note The documentation set for this product strives to use bias-free language. For purposes of this documentation set, bias-free is defined as language that does not imply discrimination based on age, disability, gender, racial identity, ethnic identity, sexual orientation, socioeconomic status, and intersectionality. Exceptions may be present in the documentation due to language that is hardcoded in the user interfaces of the product software, language used based on standards documentation, or language that is used by a referenced third-party product.

Feature Information

Use [Cisco Feature Navigator](#) to find information about feature support, platform support, and Cisco software image support. An account on Cisco.com is not required.

Related References

- [Cisco IOS Command References, All Releases](#)

Obtaining Documentation and Submitting a Service Request

- To receive timely, relevant information from Cisco, sign up at [Cisco Profile Manager](#).
- To get the business impact you're looking for with the technologies that matter, visit [Cisco Services](#).
- To submit a service request, visit [Cisco Support](#).
- To discover and browse secure, validated enterprise-class apps, products, solutions and services, visit [Cisco Marketplace](#).
- To obtain general networking, training, and certification titles, visit [Cisco Press](#).
- To find warranty information for a specific product or product family, access [Cisco Warranty Finder](#).

- [Short Description, on page 2](#)

Short Description

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)



CHAPTER 2

MPLS Transport Profile

Multiprotocol Label Switching (MPLS) Transport Profile (TP) enables you to create tunnels that provide the transport network service layer over which IP and MPLS traffic traverses. MPLS-TP tunnels enable a transition from Synchronous Optical Networking (SONET) and Synchronous Digital Hierarchy (SDH) time-division multiplexing (TDM) technologies to packet switching to support services with high bandwidth requirements, such as video.

- [Finding Feature Information, on page 3](#)
- [Restrictions for MPLS Transport Profile, on page 3](#)
- [Information About MPLS-TP, on page 5](#)
- [How to Configure MPLS Transport Profile, on page 8](#)
- [Configuration Examples for MPLS Transport Profile, on page 27](#)
- [Additional References for MPLS Transport Profile, on page 27](#)
- [Feature Information for MPLS Transport Profile, on page 28](#)

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest caveats and feature information, see [Bug Search Tool](#) and the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the feature information table at the end of this module.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Restrictions for MPLS Transport Profile

- Multiprotocol Label Switching Transport Profile (MPLS-TP) penultimate hop popping is not supported. Only ultimate hop popping is supported, because label mappings are configured at the MPLS-TP endpoints.
- Ethernet subinterfaces are not supported.
- IPv6 addressing is not supported.

L2VPN Restrictions

- Layer 2 Virtual Private Network (L2VPN) interworking is not supported.

- Local switching with Any Transport over MPLS (AToM) pseudowire as a backup is not supported.
- L2VPN pseudowire redundancy to an AToM pseudowire by one or more attachment circuits is not supported.
- Pseudowire ID Forward Equivalence Class (FEC) type 128 is supported, but generalized ID FEC type 129 is not supported.
- Static pseudowire Operations, Administration, and Maintenance (OAM) protocol and BFD VCCV attachment circuit (AC) status signaling are mutually exclusive protocols. Bidirectional Forwarding Detection (BFD) and Virtual Circuit Connectivity Verification (VCCV) in failure detection mode can be used with Static Pseudowire OAM protocol.
- BFD VCCV AC status signaling cannot be used in pseudowire redundancy configurations. You can use Static Pseudowire OAM instead.

 
Ping and Trace Restrictions

- Ping for static pseudowires over MPLS-TP tunnels is not supported.
- Pseudowire ping and traceroute functionality for multisegment pseudowires that have one or more static pseudowire segments is not supported.
- The following packet format is supported:
 - A labeled packet with Generic Associated Channel Label (GAL) at the bottom of the label stack.
 - ACH channel is IP (0x21).
 - RFC-4379-based IP, UDP packet payload with valid source.
 - Destination IP address and UDP port 3503.
- Default reply mode for (1) is 4—Reply via application level control channel is supported. An echo reply consists of the following elements:
 - A labeled packet with a GAL label at the bottom of the label stack.
 - Associated Channel (ACh) is IP (0x21).
 - RFC-4379-based IP, UDP packet payload with valid source.
 - Destination IP address and UDP port 3503.
- The optional “do not reply” mode may be set.
- The following reply modes are not allowed and are disabled in CLI:
 - 2—Reply via an IPv4/IPv6 UDP packet
 - 3—Reply via an IPv4/IPv6 UDP packet with router alert
- Force-explicit-null is not supported with ping and trace.
- Optional Reverse Path Connectivity verification is not supported.

Information About MPLS-TP

How MPLS Transport Profile Works

Multiprotocol Label Switching Transport Profile (MPLS-TP) tunnels provide the transport network service layer over which IP and MPLS traffic traverses. MPLS-TP tunnels help transition from Synchronous Optical Network/Synchronous Digital Hierarchy (SONET/SDH) and Time Division Multiplexing (TDM) technologies to packet switching to support services with high bandwidth utilization and lower cost. Transport networks are connection-oriented, statically provisioned, and have long-lived connections. Transport networks usually avoid control protocols that change identifiers (like labels). MPLS-TP tunnels provide this functionality through statically provisioned bidirectional label switched paths (LSPs), as shown in the figure below.

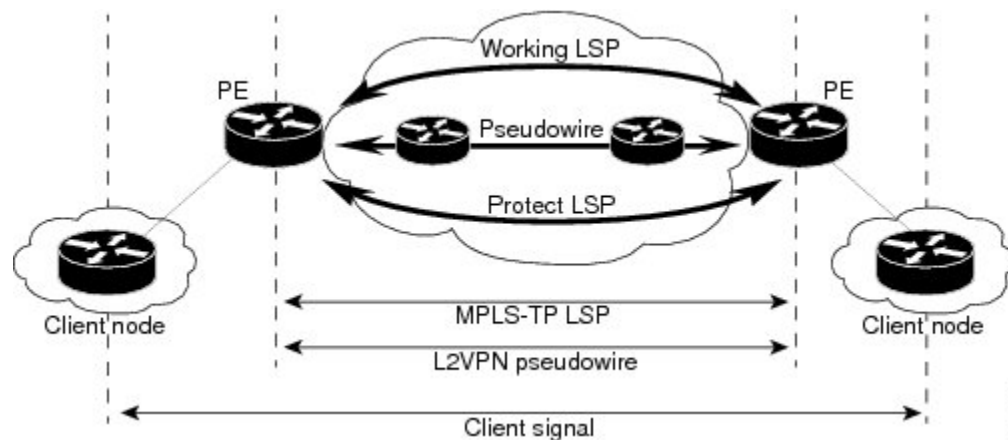

MPLS-TP Path Protection

MPLS-TP label switched paths (LSPs) support 1-to-1 path protection. There are two types of LSPs: protect LSPs and working LSPs. You can configure the both types of LSPs when configuring the MPLS-TP tunnel. The working LSP is the primary LSP used to route traffic. The protect LSP acts as a backup for a working LSP. If the working LSP fails, traffic is switched to the protect LSP until the working LSP is restored, at which time forwarding reverts back to the working LSP.

Bidirectional LSPs

Multiprotocol Label Switching Transport Profile (MPLS-TP) label switched paths (LSPs) are bidirectional and co-routed. They comprise of two unidirectional LSPs that are supported by the MPLS forwarding infrastructure. A TP tunnel consists of a pair of unidirectional tunnels that provide a bidirectional LSP. Each unidirectional tunnel can be optionally protected with a protect LSP that activates automatically upon failure conditions.

Support for MPLS Transport Profile OAM

Several Operations, Administration, and Maintenance (OAM) protocols and messages support the provisioning and maintenance of Multiprotocol Label Switching Transport Profile (MPLS-TP) tunnels and bidirectional label switched paths (LSPs).

The following OAM messages are forwarded along the specified MPLS LSP:

- OAM Fault Management—Alarm Indication Signal (AIS), Link Down Indication (LDI), and Lock Report (LKR) messages (GAL with BFD messages).
- OAM Connection Verification—Ping and traceroute messages (GAL with IP channel by default).
- OAM Continuity Check—Bidirectional Forwarding Detection (BFD) messages—non-IP BFD and IP BFD (GAL with non-IP BFD channel or IP BFD channel depending on message format).
- The following messages are forwarded along the specified pseudowire:
 - Static pseudowire OAM messages
 - Pseudowire ping and traceroute messages
 - BFD messages
- MPLS-TP OAM Fault Management (LDI, AIS, and LKR messages)—LDI messages are AIS messages whose L-flags are set. The LDI messages are generated at midpoint nodes when a failure is detected. From the midpoint, an LDI message is sent to the endpoint that is reachable with the existing failure. Similarly, LKR messages are sent from a midpoint node to the reachable endpoint when an interface is administratively shut down. By default, the reception of LDI and LKR messages on the active LSP at an endpoint will cause a path protection switchover, whereas the reception of an AIS message will not.
- MPLS-TP OAM Fault Management with Emulated Protection Switching for LSP Lockout—Cisco implements a form of Emulated Protection Switching to support LSP Lockout using customized Fault messages. When a Lockout message is sent, it does not cause the LSP to be administratively down. The Cisco Lockout message causes a path protection switchover and prevents data traffic from using the LSP. The LSP remains administratively up so that BFD and other OAM messages can continue to traverse it and so that maintenance of the LSP can take place (such as reconfiguring or replacing a midpoint LSR). After OAM verifies the LSP connectivity, the Lockout is removed and the LSP is brought back to service. Lockout of the working LSP is not allowed if a protect LSP is not configured. Conversely, the Lockout of a protect LSP is allowed if a working LSP is not configured.
- LSP ping and trace—To verify MPLS-TP connectivity, use the **ping mpls tp** and **trace mpls tp** commands. You can specify that echo requests be sent along the working LSP, the protect LSP, or the active LSP. You can also specify that echo requests be sent on a locked-out MPLS-TP tunnel LSP (either working or protected) if the working or protected LSP is explicitly specified. You can also specify ping/trace messages with or without IP.
- MPLS-TP OAM Continuity Check (CC) via BFD and Remote Defect Indication (RDI)—RDI is communicated via the BFD diagnostic field in BFD CC messages. BFD sessions run on both the working LSP and the protect LSP. To perform a path protection switchover within 60 milliseconds on an MPLS-TP endpoint, use the BFD Hardware Offload feature, which enables the router hardware to construct and send BFD messages, removing the task from the software path. The BFD Hardware Offload feature is enabled automatically on supported platforms.

MPLS-TP OAM GACH—Generic Associated Channel (G-ACh) is the control channel mechanism associated with Multiprotocol Label Switching (MPLS) LSPs in addition to MPLS pseudowire. The G-ACh Label (GAL) (Label 13) is a generic alert label to identify the presence of the G-ACh in the label packet. It is taken from

the reserved MPLS label space. G-ACh/GAL supports OAMs of LSPs and in-band OAMs of pseudowires (PWs). OAM messages are used for fault management, connection verification, continuity check, and so on.

MPLS Transport Profile Static and Dynamic Multisegment Pseudowires

Multiprotocol Label Switching Transport Profile (MPLS-TP) supports the following combinations of static and dynamic multisegment pseudowires:

- Dynamic-static
- Static-dynamic
- Static-static

MPLS-TP OAM Status for Static and Dynamic Multisegment Pseudowires

With static pseudowires, status notifications can be provided by BFD over VCCV or by the static pseudowire OAM protocol. However, BFD over VCCV sends only attachment circuit status code notifications. Hop-by-hop notifications of other pseudowire status codes are not supported. Therefore, the static pseudowire OAM protocol is preferred. You can acquire per pseudowire OAM for attachment circuit/pseudowire notification over the VCCV channel with or without the control word.

MPLS Transport Profile Links and Physical Interfaces

Multiprotocol Label Switching Transport Profile (MPLS-TP) link numbers may be assigned to physical interfaces only. Bundled interfaces and virtual interfaces are not supported for MPLS-TP link numbers.

The MPLS-TP link creates a layer of indirection between the MPLS-TP tunnel and midpoint LSP configuration and the physical interface. The **mpls tp link** command is used to associate an MPLS-TP link number with a physical interface and next-hop node. On point-to-point interfaces or Ethernet interfaces designated as point-to-point using the **medium p2p** command, the next-hop can be implicit, so the **mpls tp link** command just associates a link number to the interface.

Multiple tunnels and LSPs may then refer to the MPLS-TP link to indicate that they are traversing that interface. You can move the MPLS-TP link from one interface to another without reconfiguring all the MPLS-TP tunnels and LSPs that refer to the link.

Link numbers must be unique on the router or node.

See the section [Configuring MPLS-TP Links and Physical Interfaces, on page 19](#), for more information.

Tunnel Midpoints

Tunnel LSPs, whether endpoint or midpoint, use the same identifying information. However, it is entered differently.

- At the midpoint, all information for the LSP is specified with the **mpls tp lsp** command for configuring forward and reverse information for forwarding.
- At the midpoint, determining which end is source and which is destination is arbitrary. That is, if you are configuring a tunnel between your device and a coworker's device, then your device is the source. However, your coworker considers his or her device to be the source. At the midpoint, either device

could be considered the source. At the midpoint, the forward direction is from source to destination, and the reverse direction is from destination to source.

- At the endpoint, the local information (source) either comes from the global device ID and global ID, or from the locally configured information using the **tp source** command.
- At the endpoint, the remote information (destination) is configured using the **tp destination** command after you enter the **interface tunnel-tp number** command. The **tp destination** command includes the destination node ID, and optionally the global ID and the destination tunnel number. If you do not specify the destination tunnel number, the source tunnel number is used.
- At the endpoint, the LSP number is configured in working-lsp or protect-lsp submode. The default is 0 for the working LSP and 1 for the protect LSP.
- When configuring LSPs at midpoint devices, ensure that the configuration does not deflect traffic back to the originating node.

How to Configure MPLS Transport Profile

Configuring the MPLS Label Range

You must specify a static range of Multiprotocol Label Switching (MPLS) labels using the **mpls label range** command with the **static** keyword.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **mpls label range** *minimum-value maximum-value static minimum-static-value maximum-static-value*
4. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	mpls label range <i>minimum-value maximum-value static minimum-static-value maximum-static-value</i> Example:	Specifies a static range of MPLS labels.

	Command or Action	Purpose
	Device(config)# mpls label range 1001 1003 static 10000 25000	
Step 4	end Example: Device(config)# end	Exits global configuration mode and returns to privileged EXEC mode.

Configuring the Router ID and Global ID

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **mpls tp**
4. **router-id** *node-id*
5. **global-id** *num*
6. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	mpls tp Example: Device(config)# mpls tp	Enters MPLS-TP configuration mode, from which you can configure MPLS-TP parameters for the device.
Step 4	router-id <i>node-id</i> Example: Device(config-mpls-tp)# router-id 10.10.10.10	Specifies the default MPLS-TP router ID, which is used as the default source node ID for all MPLS-TP tunnels configured on the device.

	Command or Action	Purpose
Step 5	global-id <i>num</i> Example: <pre>Device(config-mpls-tp)# global-id 1</pre>	(Optional) Specifies the default global ID used for all endpoints and midpoints. <ul style="list-style-type: none"> • This command makes the router ID globally unique in a multiprovider tunnel. Otherwise, the router ID is only locally meaningful. • The global ID is an autonomous system number, which is a controlled number space by which providers can identify each other. • The router ID and global ID are also included in fault messages sent by devices from the tunnel midpoints to help isolate the location of faults.
Step 6	end Example: <pre>Device(config-mpls-tp)# end</pre>	Exits MPLS-TP configuration mode and returns to privileged EXEC mode.

Configuring Bidirectional Forwarding Detection Templates

The **bfd-template** command allows you to create a BFD template and enter BFD configuration mode. The template can be used to specify a set of BFD interval values. You invoke the template as part of the MPLS-TP tunnel. On platforms that support the BFD Hardware Offload feature and that can provide a 60-ms cutover for MPLS-TP tunnels, it is recommended to use the higher resolution timers in the BFD template.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **bfd-template single-hop** *template-name*
4. **interval** [*microseconds*] {**both** *time* | **min-tx** *time* **min-rx** *time*} [**multiplier** *multiplier-value*]
5. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: <pre>Device> enable</pre>	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: <pre>Device# configure terminal</pre>	Enters global configuration mode.

	Command or Action	Purpose
Step 3	bfd-template single-hop <i>template-name</i> Example: Device(config)# bfd-template single-hop mpls-bfd-1	Creates a BFD template and enter BFD configuration mode.
Step 4	interval [microseconds] { both <i>time</i> min-tx <i>time</i> min-rx <i>time</i> } [multiplier <i>multiplier-value</i>] Example: Device(config-bfd)# interval min-tx 99 min-rx 99 multiplier 3	Specifies a set of BFD interval values.
Step 5	end Example: Device(config-bfd)# exit	Exits BFD configuration mode and returns to privileged EXEC mode.

Configuring Pseudowire OAM Attributes

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **pseudowire-static-oam class** *class-name*
4. **timeout refresh send** *seconds*
5. **exit**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	pseudowire-static-oam class <i>class-name</i> Example: Device(config)# pseudowire-static-oam class oam-class1	Creates a pseudowire OAM class and enters pseudowire OAM class configuration mode.

	Command or Action	Purpose
Step 4	timeout refresh send <i>seconds</i> Example: <pre>Device(config-st-pw-oam-class)# timeout refresh send 20</pre>	Specifies the OAM timeout refresh interval.
Step 5	exit Example: <pre>Device(config-st-pw-oam-class)# exit</pre>	Exits pseudowire OAM configuration mode and returns to privileged EXEC mode.

Configuring the Pseudowire Class

When you create a pseudowire class, you specify the parameters of the pseudowire, such as the use of the control word, preferred path, OAM class, and VCCV BFD template.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **pseudowire-class** *class-name*
4. **encapsulation mpls**
5. **control-word**
6. **protocol** {l2tpv2 | l2tpv3 | none} [*l2tp-class-name*]
7. **preferred-path** {interface tunnel *tunnel-number* | peer {*ip-address* | *host-name*}} [**disable-fallback**]
8. **status protocol notification static** *class-name*
9. **vccv bfd template** *name* [**udp** | **raw-bfd**]
10. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: <pre>Device> enable</pre>	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: <pre>Device# configure terminal</pre>	Enters global configuration mode.
Step 3	pseudowire-class <i>class-name</i> Example:	Creates a pseudowire class and enters pseudowire class configuration mode.

	Command or Action	Purpose
	<code>Device(config)# pseudowire-class mpls-tp-class1</code>	
Step 4	encapsulation mpls Example: <code>Device(config-pw-class)# encapsulation mpls</code>	Specifies the encapsulation type.
Step 5	control-word Example: <code>Device(config-pw-class)# control-word</code>	Enables the use of the control word.
Step 6	protocol {l2tpv2 l2tpv3 none} [l2tp-class-name] Example: <code>Device(config-pw-class)# protocol none</code>	Specifies the type of protocol.
Step 7	preferred-path {interface tunnel <i>tunnel-number</i> peer {ip-address host-name}} [disable-fallback] Example: <code>Device(config-pw-class)# preferred-path interface tunnel-tp2</code>	Specifies the tunnel to use as the preferred path.
Step 8	status protocol notification static <i>class-name</i> Example: <code>Device(config-pw-class)# status protocol notification static oam-class1</code>	Specifies the OAM class to use.
Step 9	vccv bfd template <i>name</i> [udp raw-bfd] Example: <code>Device(config-pw-class)# vccv bfd template bfd-templ raw-bfd</code>	Specifies the VCCV BFD template to use.
Step 10	end Example: <code>Device(config-pw-class)# end</code>	Exits pseudowire class configuration mode and returns to privileged EXEC mode.

Configuring the Pseudowire

SUMMARY STEPS

1. enable
2. configure terminal

3. **interface** *type number*
4. **xconnect** *peer-ip-address vc-id* {**encapsulation** {**l2tpv3** [**manual**] | **mpls** [**manual**]} | **pw-class** *pw-class-name*} [**pw-class** *pw-class-name*] [**sequencing** {**transmit** | **receive** | **both**}]
5. **mpls label** *local-pseudowire-label remote-pseudowire-label*
6. **mpls control-word**
7. **backup delay** {*enable-delay-period* | **never**} {*disable-delay-period* | **never**}
8. **backup peer** *peer-router-ip-addr vcid* [**pw-class** *pw-class-name*] [**priority** *value*]
9. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	interface <i>type number</i> Example: Device(config)# interface Ethernet 1/0	Specifies the interface and enters interface configuration mode.
Step 4	xconnect <i>peer-ip-address vc-id</i> { encapsulation { l2tpv3 [manual] mpls [manual]} pw-class <i>pw-class-name</i> } [pw-class <i>pw-class-name</i>] [sequencing { transmit receive both }] Example: Device(config-if)# xconnect 10.131.191.251 100 encapsulation mpls manual pw-class mpls-tp-class1	Binds the attachment circuit to a pseudowire VC and enters xconnect interface configuration mode.
Step 5	mpls label <i>local-pseudowire-label remote-pseudowire-label</i> Example: Device(config-if-xconn)# mpls label 100 150	Configures the static pseudowire connection by defining local and remote circuit labels.
Step 6	mpls control-word Example: Device(config-if-xconn)# no mpls control-word	Specifies the control word.

	Command or Action	Purpose
Step 7	backup delay { <i>enable-delay-period</i> never } { <i>disable-delay-period</i> never } Example: Device(config-if-xconn)# backup delay 0 never	Specifies how long a backup pseudowire virtual circuit (VC) should wait before resuming operation after the primary pseudowire VC goes down.
Step 8	backup peer <i>peer-router-ip-addr</i> <i>vcid</i> [pw-class <i>pw-class-name</i>] [priority <i>value</i>] Example: Device(config-if-xconn)# backup peer 10.0.0.2 50	Specifies a redundant peer for a pseudowire virtual circuit (VC).
Step 9	end Example: Device(config)# end	Exits xconn interface connection mode and returns to privileged EXEC mode.

Configuring the MPLS-TP Tunnel

On the endpoint devices, create an MPLS TP tunnel and configure its parameters. See the **interface tunnel-tp** command for information on the parameters.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface tunnel-tp** *number*
4. **description** *tunnel-description*
5. **tp tunnel-name** *name*
6. **tp bandwidth** *num*
7. **tp source** *node-id* [*global-id num*]
8. **tp destination** *node-id* [**tunnel-tp** *num* [*global-id num*]]
9. **bfd** *bfd-template*
10. **working-lsp**
11. **in-label** *num*
12. **out-label** *num* **out-link** *num*
13. **exit**
14. **protect-lsp**
15. **in-label** *num*
16. **out-label** *num* **out-link** *num*
17. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	interface tunnel-tp <i>number</i> Example: Device(config)# interface tunnel-tp	Enters tunnel interface configuration mode. Tunnel numbers from 0 to 999 are supported.
Step 4	description <i>tunnel-description</i> Example: Device(config-if)# description headend tunnel	(Optional) Specifies a tunnel description.
Step 5	tp tunnel-name <i>name</i> Example: Device(config-if)# tp tunnel-name tunnel 122	Specifies the name of the MPLS-TP tunnel.
Step 6	tp bandwidth <i>num</i> Example: Device(config-if)# tp bandwidth 10000	Specifies the tunnel bandwidth.
Step 7	tp source <i>node-id</i> [<i>global-id num</i>] Example: Device(config-if)# tp source 10.11.11.11 global-id 10	(Optional) Specifies the tunnel source and endpoint.
Step 8	tp destination <i>node-id</i> [<i>tunnel-tp num</i> [<i>global-id num</i>]] Example: Device(config-if)# tp destination 10.10.10.10	Specifies the destination node of the tunnel.
Step 9	bfd <i>bfd-template</i> Example: Device(config-if)# bfd mpls-tp-bfd-2	Specifies the BFD template.

	Command or Action	Purpose
Step 10	working-lsp Example: Device(config-if)# working-lsp	Specifies a working LSP, also known as the primary LSP.
Step 11	in-label num Example: Device(config-if-working)# in-label 111	Specifies the in-label number.
Step 12	out-label num out-link num Example: Device(config-if-working)# out-label 112 out-link	Specifies the out-label number and out-link.
Step 13	exit Example: Device(config-if-working)# exit	Exits working LSP interface configuration mode and returns to interface configuration mode.
Step 14	protect-lsp Example: Device(config-if)# protect-lsp	Specifies a backup for a working LSP.
Step 15	in-label num Example: Device(config-if-protect)# in-label 100	Specifies the in label.
Step 16	out-label num out-link num Example: Device(config-if-protect)# out-label 113 out-link	Specifies the out label and out link.
Step 17	end Example: Device(config-if-protect)# end	Exits the interface configuration mode and returns to privileged EXEC mode.

Configuring MPLS-TP LSPs at Midpoints



Note When configuring LSPs at midpoint devices, ensure that the configuration does not deflect traffic back to the originating node.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **mpls tp lsp source** *node-id* [**global-id** *num*] **tunnel-tp** *num* **lsp** {*lsp-num* | **protect** | **working**} **destination** *node-id* [**global-id** *num*] **tunnel-tp** *num*
4. **forward-lsp**
5. **bandwidth** *num*
6. **in-label** *num* **out-label** *num* **out-link** *num*
7. **exit**
8. **reverse-lsp**
9. **bandwidth** *num*
10. **in-label** *num* **out-label** *num* **out-link** *num*
11. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	mpls tp lsp source <i>node-id</i> [global-id <i>num</i>] tunnel-tp <i>num</i> lsp { <i>lsp-num</i> protect working } destination <i>node-id</i> [global-id <i>num</i>] tunnel-tp <i>num</i> Example: Device(config)# mpls tp lsp source 10.10.10.10 global-id 2 tunnel-tp 4 lsp protect destination 10.11.11.11 global-id 11 tunnel-tp 12	Enables MPLS-TP midpoint connectivity and enters MPLS TP LSP configuration mode.
Step 4	forward-lsp Example: Device(config-mpls-tp-lsp)# forward-lsp	Enters MPLS-TP LSP forward LSP configuration mode.
Step 5	bandwidth <i>num</i> Example: Device(config-mpls-tp-lsp-forw)# bandwidth 100	Specifies the bandwidth.

	Command or Action	Purpose
Step 6	in-label <i>num</i> out-label <i>num</i> out-link <i>num</i> Example: <pre>Device(config-mpls-tp-lsp-forw)# in-label 53 out-label 43 out-link 41</pre>	Specifies the in label, out label, and out link numbers.
Step 7	exit Example: <pre>Device(config-mpls-tp-lsp-forw)# exit</pre>	Exits MPLS-TP LSP forward LSP configuration mode.
Step 8	reverse-lsp Example: <pre>Device(config-mpls-tp-lsp)# reverse-lsp</pre>	Enters MPLS-TP LSP reverse LSP configuration mode.
Step 9	bandwidth <i>num</i> Example: <pre>Device(config-mpls-tp-lsp-rev)# bandwidth 100</pre>	Specifies the bandwidth.
Step 10	in-label <i>num</i> out-label <i>num</i> out-link <i>num</i> Example: <pre>Device(config-mpls-tp-lsp-rev)# in-label 33 out-label 23 out-link 44</pre>	Specifies the in-label, out-label, and out-link numbers.
Step 11	end Example: <pre>Device(config-mpls-tp-lsp-rev)# end</pre>	Exits the MPLS TP LSP configuration mode and returns to privileged EXEC mode.

Configuring MPLS-TP Links and Physical Interfaces

MPLS-TP link numbers may be assigned to physical interfaces only. Bundled interfaces and virtual interfaces are not supported for MPLS-TP link numbers.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface** *type number*
4. **ip address** *ip-address mask*
5. **mpls tp link** *link-num* {**ipv4** *ip-address* | **tx-mac** *mac-address*} **rx-mac** *mac-address*
6. **ip rsvp bandwidth** [**rdm** [**bc0** *interface-bandwidth*] [[*single-flow-bandwidth* [**bc1** *bandwidth* | **sub-pool** *bandwidth*]]] [*interface-bandwidth* [*single-flow-bandwidth* [**bc1** *bandwidth* | **sub-pool** *bandwidth*]]] | **mam**

max-reservable-bw [*interface-bandwidth* [*single-flow-bandwidth*] [**bc0** *interface-bandwidth* [**bc1** *bandwidth*]]] | **percent** *percent-bandwidth* [*single-flow-bandwidth*]]

7. **end**

8. **show mpls tp link-numbers**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: <pre>Device> enable</pre>	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: <pre>Device# configure terminal</pre>	Enters global configuration mode.
Step 3	interface <i>type number</i> Example: <pre>Device(config)# interface ethernet 1/0</pre>	Specifies the interface and enters interface configuration mode.
Step 4	ip address <i>ip-address mask</i> Example: <pre>Device(config-if)# ip address 10.10.10.10 255.255.255.0</pre>	Assigns an IP address to the interface.
Step 5	mpls tp link <i>link-num {ipv4 ip-address / tx-mac mac-address} rx-mac mac-address</i> Example: <pre>Device(config-if)# mpls tp link 1 ipv4 10.0.0.2</pre>	Associates an MPLS-TP link number with a physical interface and next-hop node. On point-to-point interfaces or Ethernet interfaces designated as point-to-point using the medium p2p command, the next-hop can be implicit, so the mpls tp link command just associates a link number to the interface. Multiple tunnels and LSPs can refer to the MPLS-TP link to indicate they are traversing that interface. You can move the MPLS-TP link from one interface to another without reconfiguring all the MPLS-TP tunnels and LSPs that refer to the link. Link numbers must be unique on the device or node.
Step 6	ip rsvp bandwidth [rdm [bc0 <i>interface-bandwidth</i>] [<i>single-flow-bandwidth</i> [bc1 <i>bandwidth</i> sub-pool <i>bandwidth</i>]]] [<i>interface-bandwidth</i> [<i>single-flow-bandwidth</i> [bc1 <i>bandwidth</i> sub-pool <i>bandwidth</i>]]] max-reservable-bw [<i>interface-bandwidth</i> [<i>single-flow-bandwidth</i>] [bc0 <i>interface-bandwidth</i> [bc1	Enables Resource Reservation Protocol (RSVP) bandwidth for IP on an interface. For the Cisco 7600 platform, if you configure non-zero bandwidth for the TP tunnel or at a midpoint LSP, make sure that the interface to which the output link is attached has enough bandwidth available. For example, if three

	Command or Action	Purpose
	bandwidth]]] percent percent-bandwidth [single-flow-bandwidth]] Example: Device(config-if)# ip rsvp bandwidth 1158 100	tunnel LSPs run over link 1 and each LSP was assigned 1000 with the tp bandwidth command, the interface associated with link 1 needs bandwidth of 3000 with the ip rsvp bandwidth command.
Step 7	end Example: Device(config-if)# end	Exits interface configuration mode and returns to privileged EXEC mode.
Step 8	show mpls tp link-numbers Example: Device# show mpls tp link-numbers	Displays the configured links.

Configuring Static-to-Static Multisegment Pseudowires for MPLS-TP

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **l2 vfi name point-to-point**
4. **neighbor ip-address vc-id {encapsulation mpls | pw-class pw-class-name}**
5. **mpls label local-pseudowire-label remote-pseudowire-label**
6. **mpls control-word**
7. **neighbor ip-address vc-id {encapsulation mpls | pw-class pw-class-name}**
8. **mpls label local-pseudowire-label remote-pseudowire-label**
9. **mpls control-word**
10. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.

	Command or Action	Purpose
Step 3	l2 vfi name point-to-point Example: <pre>Device(config)# l2 vfi atom point-to-point</pre>	Creates a point-to-point Layer 2 virtual forwarding interface (VFI) and enters VFI configuration mode.
Step 4	neighbor ip-address vc-id {encapsulation mpls pw-class pw-class-name} Example: <pre>Device(config-vfi)# neighbor 10.111.111.111 123 pw-class atom</pre>	Sets up an emulated VC. Specify the IP address, the VC ID of the remote device, and the pseudowire class to use for the emulated VC. Note Only two neighbor commands are allowed for each Layer 2 VFI point-to-point command.
Step 5	mpls label local-pseudowire-label remote-pseudowire-label Example: <pre>Device(config-vfi)# mpls label 101 201</pre>	Configures the static pseudowire connection by defining local and remote circuit labels.
Step 6	mpls control-word Example: <pre>Device(config-vfi)# mpls control-word</pre>	Specifies the control word.
Step 7	neighbor ip-address vc-id {encapsulation mpls pw-class pw-class-name} Example: <pre>Device(config-vfi)# neighbor 10.10.10.11 123 pw-class atom</pre>	Sets up an emulated VC. Specify the IP address, the VC ID of the remote device, and the pseudowire class to use for the emulated VC.
Step 8	mpls label local-pseudowire-label remote-pseudowire-label Example: <pre>Device(config-vfi)# mpls label 102 202</pre>	Configures the static pseudowire connection by defining local and remote circuit labels.
Step 9	mpls control-word Example: Example: <pre>Device(config-vfi)# mpls control-word</pre>	Specifies the control word.
Step 10	end Example: <pre>Device(config)# end</pre>	Exits VFI configuration mode and returns to privileged EXEC mode.

Configuring a Template with Pseudowire Type-Length-Value Parameters

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **pseudowire-tlv template** *template-name*
4. **tlv** [*type-name*] *type-value* *length* [**dec** | **hexstr** | **str**] *value*
5. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	pseudowire-tlv template <i>template-name</i> Example: Device(config)# pseudowire-tlv template statictemp	Creates a template of pseudowire type-length-value (TLV) parameters and enters pseudowire TLV template configuration mode.
Step 4	tlv [<i>type-name</i>] <i>type-value</i> <i>length</i> [dec hexstr str] <i>value</i> Example: Device(config-pw-tlv-template)# tlv statictemp 2 4 hexstr 1	Specifies the TLV parameters.
Step 5	end Example: Device(config-pw-tlv-template)# end	Exits pseudowire TLV template configuration mode and returns to privileged EXEC mode.

Configuring Static-to-Dynamic Multisegment Pseudowires for MPLS-TP

When you configure static-to-dynamic pseudowires, you configure the static pseudowire class with the **protocol none** command, create a dynamic pseudowire class, and then invoke those pseudowire classes with the **neighbor** commands.

SUMMARY STEPS

1. **enable**

2. **configure terminal**
3. **pseudowire-class** *class-name*
4. **encapsulation mpls**
5. **control-word**
6. **protocol** {l2tpv2 | l2tpv3 | none} [*l2tp-class-name*]
7. **exit**
8. **pseudowire-class** *class-name*
9. **encapsulation mpls**
10. **exit**
11. **l2 vfi** *name* **point-to-point**
12. **neighbor** *ip-address vc-id* {**encapsulation mpls** | **pw-class** *pw-class-name*}
13. **neighbor** *ip-address vc-id* {**encapsulation mpls** | **pw-class** *pw-class-name*}
14. **mpls label** *local-pseudowire-label remote-pseudowire-label*
15. **mpls control-word**
16. **local interface** *pseudowire-type*
17. Do one of the following:
 - **tlv** [*type-name*] *type-value length* [**dec** | **hexstr** | **str**] *value*
 - **tlv template** *template-name*
18. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	pseudowire-class <i>class-name</i> Example: Device(config)# pseudowire-class mpls-tp-class1	Creates a pseudowire class and enters pseudowire class configuration mode.
Step 4	encapsulation mpls Example: Device(config-pw-class)# encapsulation mpls	Specifies the encapsulation type.
Step 5	control-word Example:	Enables the use of the control word.

	Command or Action	Purpose
	Device(config-pw-class)# control-word	
Step 6	protocol {l2tpv2 l2tpv3 none} [l2tp-class-name] Example: Device(config-pw-class)# protocol none	Specifies the type of protocol. Use the protocol none command to specify a static pseudowire.
Step 7	exit Example: Device(config-pw-class)# exit	Exits pseudowire class configuration mode and returns to global configuration mode.
Step 8	pseudowire-class class-name Example: Device(config)# pseudowire-class mpls-tp-class1	Creates a pseudowire class and enters pseudowire class configuration mode.
Step 9	encapsulation mpls Example: Device(config-pw-class)# encapsulation mpls	Specifies the encapsulation type.
Step 10	exit Example: Device(config-pw-class)# exit	Exits pseudowire class configuration mode and returns to global configuration mode.
Step 11	l2 vfi name point-to-point Example: Device(config)# l2 vfi atom point-to-point	Creates a point-to-point Layer 2 virtual forwarding interface (VFI) and enters VFI configuration mode.
Step 12	neighbor ip-address vc-id {encapsulation mpls pw-class pw-class-name} Example: Device(config-vfi)# neighbor 10.111.111.111 123 pw-class atom	Sets up an emulated VC and enters VFI neighbor configuration mode. Note Note: Only two neighbor commands are allowed for each l2 vfi point-to-point command.
Step 13	neighbor ip-address vc-id {encapsulation mpls pw-class pw-class-name} Example: Device(config-vfi-neighbor)# neighbor 10.111.111.111 123 pw-class atom	Sets up an emulated VC. Note Only two neighbor commands are allowed for each l2 vfi point-to-point command.

	Command or Action	Purpose
Step 14	mpls label <i>local-pseudowire-label</i> <i>remote-pseudowire-label</i> Example: Device(config-vfi-neighbor)# mpls label 101 201	Configures the static pseudowire connection by defining local and remote circuit labels.
Step 15	mpls control-word Example: Device(config-vfi-neighbor)# mpls control-word	Specifies the control word.
Step 16	local interface <i>pseudowire-type</i> Example: Device(config-vfi-neighbor)# local interface 4	Specifies the pseudowire type.
Step 17	Do one of the following: <ul style="list-style-type: none"> • tlv [<i>type-name</i>] <i>type-value length</i> [dec hexstr str] <i>value</i> • tlv template <i>template-name</i> Example: Device(config-vfi-neighbor)# tlv statictemp 2 4 hexstr 1	Specifies the TLV parameters or invokes a previously configured TLV template.
Step 18	end Example: Device(config-vfi-neighbor)# end	Ends the session.

Verifying the MPLS-TP Configuration

Use the following commands to verify and help troubleshoot your MPLS-TP configuration:

- **debug mpls tp**—Enables the logging of MPLS-TP error messages.
- **logging (MPLS-TP)**—Displays configuration or state change logging messages.
- **show bfd neighbors mpls-tp**—Displays the BFD state, which must be up in order for the endpoint LSPs to be up.
- **show mpls l2transport static-oam l2transport static-oam**—Displays MPLS-TP messages related to pseudowires.
- **show mpls tp tunnel-tp number detail**—Displays the number and details of the tunnels that are not functioning.
- **show mpls tp tunnel-tp lsp**—Displays the status of the LSPs, and helps you ensure that both LSPs are up and working from a tunnel endpoint.

- **tracert mpls tp** and **ping mpls tp**—Helps you identify connectivity issues along the MPLS-TP tunnel path.

Configuration Examples for MPLS Transport Profile

Example: Configuring Static-to-dynamic Multisegment Pseudowires for MPLS-TP

The following example shows how to configure static-to-dynamic multisegment pseudowires for Layer 2 VFI.

```
12 vfi atom point-to-point (static-dynamic MSPW)
neighbor 10.116.116.116 4294967295 pw-class dypw (dynamic)
neighbor 10.111.111.111 123 pw-class stpw (static)
mpls label 101 201
mpls control-word
local interface 4
tlv mtu 1 4 1500
tlv description 3 6 str abcd
tlv descr C 4 hexstr 0505
```

Additional References for MPLS Transport Profile

Related Documents

Related Topic	Document Title
Cisco IOS commands	Cisco IOS Master Command List, All Releases
MPLS commands	Cisco IOS Multiprotocol Label Switching Command Reference

Standards and RFCs

Standard/RFC	Title
draft-ietf-mpls-tp-gach-gal-xx	<i>MPLS Generic Associated Channel</i>
RFC 5586	<i>MPLS Generic Associated Channel</i>
RFC 5885	<i>Bidirectional Forwarding Detection (BFD) for the Pseudowire Virtual Circuit Connectivity Verification (VCCV)</i>
RFC 5921	<i>A Framework for MPLS in Transport Networks</i>

Technical Assistance

Description	Link
The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.	http://www.cisco.com/cisco/web/support/index.html

Feature Information for MPLS Transport Profile

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.



CHAPTER 3

Multiprotocol Label Switching (MPLS) on Cisco Routers

This document describes commands for configuring and monitoring Multiprotocol Label Switching (MPLS) functionality on Cisco routers and switches. This document is a companion to other feature modules describing other MPLS applications.

- [Information About MPLS, on page 29](#)
- [How to Configure MPLS, on page 31](#)
- [Additional References, on page 35](#)
- [Feature Information for MPLS on Cisco Routers, on page 36](#)
- [Glossary, on page 36](#)

Information About MPLS

MPLS Overview

Multiprotocol label switching (MPLS) combines the performance and capabilities of Layer 2 (data link layer) switching with the proven scalability of Layer 3 (network layer) routing. MPLS enables service providers to meet the challenges of explosive growth in network utilization while providing the opportunity to differentiate services without sacrificing the existing network infrastructure. The MPLS architecture is flexible and can be employed in any combination of Layer 2 technologies. MPLS support is offered for all Layer 3 protocols, and scaling is possible well beyond that typically offered in today's networks.

MPLS efficiently enables the delivery of IP services over an ATM switched network. MPLS supports the creation of different routes between a source and a destination on a purely router-based Internet backbone. By incorporating MPLS into their network architecture, service providers can save money, increase revenue and productivity, provide differentiated services, and gain competitive advantages.

Functional Description of MPLS

Label switching is a high-performance packet forwarding technology that integrates the performance and traffic management capabilities of data link layer (Layer 2) switching with the scalability, flexibility, and performance of network layer (Layer 3) routing.

Label Switching Functions

In conventional Layer 3 forwarding mechanisms, as a packet traverses the network, each router extracts all the information relevant to forwarding the packet from the Layer 3 header. This information is then used as an index for a routing table lookup to determine the next hop for the packet.

In the most common case, the only relevant field in the header is the destination address field, but in some cases, other header fields might also be relevant. As a result, the header analysis must be done independently at each router through which the packet passes. In addition, a complicated table lookup must also be done at each router.

In label switching, the analysis of the Layer 3 header is done only once. The Layer 3 header is then mapped into a fixed length, unstructured value called a *label*.

Many different headers can map to the same label, as long as those headers always result in the same choice of next hop. In effect, a label represents a *forwarding equivalence class* --that is, a set of packets which, however different they may be, are indistinguishable by the forwarding function.

The initial choice of a label need not be based exclusively on the contents of the Layer 3 packet header; for example, forwarding decisions at subsequent hops can also be based on routing policy.

Once a label is assigned, a short label header is added at the front of the Layer 3 packet. This header is carried across the network as part of the packet. At subsequent hops through each MPLS router in the network, labels are swapped and forwarding decisions are made by means of MPLS forwarding table lookup for the label carried in the packet header. Hence, the packet header does not need to be reevaluated during packet transit through the network. Because the label is of fixed length and unstructured, the MPLS forwarding table lookup process is both straightforward and fast.

Distribution of Label Bindings

Each label switching router (LSR) in the network makes an independent, local decision to determine a label value to represent a forwarding equivalence class. This association is known as a label binding. Each LSR informs its neighbors of the label bindings it has made.

When a labeled packet is being sent from LSR A to the neighboring LSR B, the label value carried by the IP packet is the label value that LSR B assigned to represent the forwarding equivalence class of the packet. Thus, the label value changes as the IP packet traverses the network.

The awareness of label bindings by neighbouring routers is facilitated using the following protocols:

- Label Distribution Protocol (LDP) - Enables peer LSRs in an MPLS network to exchange label binding information for supporting hop-by-hop forwarding in an MPLS network.
- Tag Distribution Protocol (TDP) - Supports MPLS forwarding along normally routed paths.
- Resource Reservation Protocol (RSVP) - Supports MPLS traffic engineering.
- Border Gateway Protocol (BGP) - Supports MPLS virtual private networks (VPNs).

Benefits of MPLS

MPLS provides the following major benefits to service provider networks:

Scalable support for Virtual Private Networks (VPNs)--MPLS enables VPN services to be supported in service provider networks, thereby greatly accelerating Internet growth.

The use of MPLS for VPNs provides an attractive alternative to the building of VPNs by means of either ATM or Frame Relay permanent virtual circuits (PVCs) or various forms of tunneling to interconnect routers at customer sites.

Unlike the PVC VPN model, the MPLS VPN model is highly scalable and can accommodate increasing numbers of sites and customers. The MPLS VPN model also supports “any-to-any” communication among VPN sites without requiring a full mesh of PVCs or the backhauling (suboptimal routing) of traffic across the service provider network. For each MPLS VPN user, the service provider’s network appears to function as a private IP backbone over which the user can reach other sites within the VPN organization, but not the sites of any other VPN organization.

From a user perspective, the MPLS VPN model enables network routing to be dramatically simplified. For example, rather than having to manage routing over a topologically complex virtual backbone composed of many PVCs, an MPLS VPN user can generally employ the service provider’s backbone as the default route in communicating with all of the other VPN sites.

Explicit routing capabilities (also called constraint-based routing or traffic engineering)--Explicit routing employs “constraint-based routing,” in which the path for a traffic flow is the shortest path that meets the resource requirements (constraints) of the traffic flow.

In MPLS traffic engineering, factors such as bandwidth requirements, media requirements, and the priority of one traffic flow versus another can be taken into account. These traffic engineering capabilities enable the administrator of a service provider network to

- Control traffic flow in the network
- Reduce congestion in the network
- Make best use of network resources

Thus, the network administrator can specify the amount of traffic expected to flow between various points in the network (thereby establishing a traffic matrix), while relying on the routing system to

- Calculate the best paths for network traffic
- Set up the explicit paths to carry the traffic

Support for IP routing on ATM switches (also called IP and ATM integration)--MPLS enables an ATM switch to perform virtually all of the functions of an IP router. This capability of an ATM switch stems from the fact that the MPLS forwarding paradigm, namely, label swapping, is exactly the same as the forwarding paradigm provided by ATM switch hardware.

The key difference between a conventional ATM switch and an ATM label switch is the control software used by the latter to establish its virtual channel identifier (VCI) table entries. An ATM label switch uses IP routing protocols and the Tag Distribution Protocol (TDP) to establish VCI table entries.

An ATM label switch can function as a conventional ATM switch. In this dual mode, the ATM switch resources (such as VCI space and bandwidth) are partitioned between the MPLS control plane and the ATM control plane. The MPLS control plane provides IP-based services, while the ATM control plane supports ATM-oriented functions, such as circuit emulation or PVC services.

How to Configure MPLS

This section explains how to perform the basic configuration required to prepare a router for MPLS switching and forwarding.

Configuration tasks for other MPLS applications are described in the feature module documentation for the application.

Configuring a Router for MPLS Switching

MPLS switching on Cisco routers requires that Cisco Express Forwarding be enabled.

For more information about Cisco Express Forwarding commands, see the Cisco IOS Switching Command Reference.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ip cef distributed**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	ip cef distributed Example: Device(config)# ip cef distributed	Enables Cisco Express Forwarding on the route processor card.

Verifying Configuration of MPLS Switching

To verify that Cisco Express Forwarding has been configured properly, issue the **show ip cef summary** command, which generates output similar to that shown below:

SUMMARY STEPS

1. **show ip cef summary**

DETAILED STEPS

show ip cef summary

Example:


```

Router# show ip cef summary
IP CEF with switching (Table Version 49), flags=0x0
 43 routes, 0 resolve, 0 unresolved (0 old, 0 new)
 43 leaves, 49 nodes, 56756 bytes, 45 inserts, 2 invalidations
 2 load sharing elements, 672 bytes, 2 references
 1 CEF resets, 4 revisions of existing leaves
 4 in-place modifications
  refcounts: 7241 leaf, 7218 node
Adjacency Table has 18 adjacencies
Router#

```

Configuring a Router for MPLS Forwarding

MPLS forwarding on Cisco routers requires that forwarding of IPv4 packets be enabled.

For more information about MPLS forwarding commands, see the *Multiprotocol Label Switching Command Reference*.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface** *type slot/subslot /port* [*. subinterface*]
4. **mpls ip**
5. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	interface <i>type slot/subslot /port</i> [<i>. subinterface</i>] Example: Device(config)# interface gigabitethernet 4/0/0	Specifies the Gigabit Ethernet interface and enters interface configuration mode.
Step 4	mpls ip Example: Device(config-if)# mpls ip	Enables MPLS forwarding of IPv4 packets along normally routed paths for the Gigabit Ethernet interface.

	Command or Action	Purpose
Step 5	end Example: Device(config-if)# end	Exits interface configuration mode and returns to privileged EXEC mode.

What to do next

Configure either of the following:

- MPLS Label Distribution Protocol (LDP). For information about configuring MPLS LDP, see the *MPLS Label Distribution Protocol Configuration Guide*.
- Static labels. For information about configuring static labels, see *MPLS Static Labels*.

Verifying Configuration of MPLS Forwarding

To verify that MPLS forwarding has been configured properly, issue the **show mpls interfaces detail** command, which generates output similar to that shown below:

SUMMARY STEPS

1. **show mpls interfaces detail**

DETAILED STEPS**show mpls interfaces detail****Example:**

```
Device# show mpls interfaces detail

Interface GigabitEthernet1/0/0:
  IP labeling enabled (ldp)
  LSP Tunnel labeling not enabled
  MPLS operational
  MTU = 1500
Interface POS2/0/0:
  IP labeling enabled (ldp)
  LSP Tunnel labeling not enabled
  MPLS not operational
  MTU = 4470
```

Additional References

Related Documents

Related Topic	Document Title
Cisco IOS commands	<i>Cisco IOS Master Commands List, All Releases</i>
MPLS commands	<i>Cisco IOS Multiprotocol Label Switching Command Reference</i>

Standards

Standard	Title
The supported standards applicable to the MPLS applications appear in the respective feature module for the application.	--

MIBs

MIB	MIBs Link
The supported MIBs applicable to the MPLS applications appear in the respective feature module for the application.	To locate and download MIBs for selected platforms, Cisco software releases, and feature sets, use Cisco MIB Locator found at the following URL: http://www.cisco.com/go/mibs

RFCs

RFC	Title
The supported RFCs applicable to the MPLS applications appear in the respective feature module for the application.	--

Technical Assistance

Description	Link
The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.	<i>Support & Downloads</i>

Feature Information for MPLS on Cisco Routers

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Glossary

BGP --Border Gateway Protocol. The predominant interdomain routing protocol used in IP networks.

Border Gateway Protocol --See BGP.

FIB --Forwarding Information Base. A table that contains a copy of the forwarding information in the IP routing table.

Forwarding Information Base --See FIB.

label --A short, fixed-length identifier that tells switching nodes how the data (packets or cells) should be forwarded.

label binding --An association between a label and a set of packets, which can be advertised to neighbors so that a label switched path can be established.

Label Distribution Protocol --See LDP.

Label Forwarding Information Base --See LFIB.

label imposition --The act of putting the first label on a packet.

label switching router --See LSR.

LDP --Label Distribution Protocol. The protocol that supports MPLS hop-by-hop forwarding by distributing bindings between labels and network prefixes.

LFIB --Label Forwarding Information Base. A data structure in which destinations and incoming labels are associated with outgoing interfaces and labels.

LSR --label switching router. A Layer 3 router that forwards a packet based on the value of an identifier encapsulated in the packet.

MPLS --Multiprotocol Label Switching. An industry standard on which label switching is based.

MPLS hop-by-hop forwarding --The forwarding of packets along normally routed paths using MPLS forwarding mechanisms.

Multiprotocol Label Switching --See MPLS.

Resource Reservation Protocol --See RSVP.

RIB --Routing Information Base. A common database containing all the routing protocols running on a router.

Routing Information Base --See RIB.

RSVP --Resource Reservation Protocol. A protocol for reserving network resources to provide quality of service guarantees to application flows.

traffic engineering --Techniques and processes used to cause routed traffic to travel through the network on a path other than the one that would have been chosen if standard routing methods were used.

Virtual Private Network --See VPN.

VPN --Virtual Private Network. A network that enables IP traffic to use tunneling to travel securely over a public TCP/IP network.



CHAPTER 4

MPLS Infrastructure Changes Introduction of MFI and Removal of MPLS LSC and LC-ATM Features

This document explains the new MPLS Forwarding Infrastructure (MFI) and removal of support for MPLS label switch controller (LSC) and label-controlled ATM (LC-ATM) features and commands.

- [Finding Feature Information, on page 39](#)
- [Information About MPLS Infrastructure Changes, on page 39](#)
- [Additional References, on page 40](#)
- [Feature Information for MPLS Infrastructure Changes, on page 41](#)

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest caveats and feature information, see [Bug Search Tool](#) and the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the feature information table at the end of this module.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Information About MPLS Infrastructure Changes

Introduction of the MPLS Forwarding Infrastructure

The MPLS control plane software is enhanced to make MPLS more scalable and flexible. The MFI, which manages MPLS data structures used for forwarding, replaces the Label Forwarding Information Base (LFIB).



Note The MFI and LFIB do not coexist in the same image. For a list of supported releases, see the "Feature Information for MPLS Forwarding Infrastructure."

Introduction of IP Rewrite Manager

Cisco software introduces a module called the MPLS IP Rewrite Manager (IPRM) that manages the interactions between Cisco Express Forwarding, the IP Label Distribution Modules (LDMs), and the MFI. MPLS IPRM is enabled by default. You need not configure or customize the IPRM. These commands are related to IPRM:

- **clear mpls ip iprm counters**
- **debug mpls ip iprm**
- **debug mpls ip iprm cef**
- **debug mpls ip iprm events**
- **debug mpls ip iprm ldm**
- **debug mpls ip iprm mfi**
- **show mpls ip iprm counters**
- **show mpls ip iprm ldm**

For information about these commands, see the *Cisco IOS Debug Command Reference* and the *Cisco IOS MPLS Command Reference*.

MPLS LSC and LC-ATM Configurations

Before upgrading to Cisco IOS Release 12.4(20)T, remove all the MPLS LSC and LC-ATM configurations from the routers in your network. If your core network has ATM links, you can use packet-based MPLS. See the MPLS Label Distribution Protocol Overview for more information. If you provide ATM access to customers, you can use the Any Transport over MPLS: ATM over MPLS feature. See Any Transport over MPLS for more information.

If you have MPLS LSC or LC-ATM features configured and you upgrade to Cisco IOS Release 12.4(20)T, the configuration is not accepted. The system displays “unrecognized command” errors for any commands that are no longer supported.

Additional References

Related Documents

Related Topic	Document Title
MPLS commands	<i>Cisco IOS MPLS Command Reference</i>
MPLS Label Distribution Protocol	MPLS Label Distribution Protocol Overview
Layer 2 VPN features over MPLS	Any Transport over MPLS

Technical Assistance

Description	Link
<p>The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.</p> <p>To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.</p> <p>Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.</p>	http://www.cisco.com/techsupport

Feature Information for MPLS Infrastructure Changes

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.



CHAPTER 5

MPLS Static Labels

This document describes the Cisco MPLS Static Labels feature. The MPLS Static Labels feature provides the means to configure statically:

- The binding between a label and an IPv4 prefix
- The contents of an LFIB crossconnect entry
- [Finding Feature Information, on page 43](#)
- [Restrictions for MPLS Static Labels, on page 43](#)
- [Prerequisites for MPLS Static Labels, on page 44](#)
- [Information About MPLS Static Labels, on page 44](#)
- [How to Configure MPLS Static Labels, on page 45](#)
- [Configuration Examples for MPLS Static Labels, on page 49](#)
- [Additional References, on page 50](#)
- [Feature Information for MPLS Static Labels, on page 51](#)
- [Glossary, on page 52](#)

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest caveats and feature information, see [Bug Search Tool](#) and the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the feature information table at the end of this module.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Restrictions for MPLS Static Labels

- The trouble shooting process for MPLS static labels is complex.
- On a provider edge (PE) router for MPLS VPNs, there is no mechanism for statically binding a label to a customer network prefix (VPN IPv4 prefix).
- MPLS static crossconnect labels remain in the LFIB even if the router to which the entry points goes down.

- MPLS static crossconnect mappings remain in effect even with topology changes.
- MPLS static labels are not supported for label-controlled Asynchronous Transfer Mode (lc-atm).
- MPLS static bindings are not supported for local prefixes.

Prerequisites for MPLS Static Labels

The network must support the following Cisco IOS features before you enable MPLS static labels:

- Multiprotocol Label Switching (MPLS)
- Cisco Express Forwarding

Information About MPLS Static Labels

MPLS Static Labels Overview

Generally, label switching routers (LSRs) dynamically learn the labels they should use to label-switch packets by means of label distribution protocols that include:

- Label Distribution Protocol (LDP), the Internet Engineering Task Force (IETF) standard, used to bind labels to network addresses
- Resource Reservation Protocol (RSVP) used to distribute labels for traffic engineering (TE)
- Border Gateway Protocol (BGP) used to distribute labels for Multiprotocol Label Switching (MPLS) Virtual Private Networks (VPNs)

To use a learned label to label-switch packets, an LSR installs the label into its Label Forwarding Information Base (LFIB).

The MPLS Static Labels feature provides the means to configure statically:

- The binding between a label and an IPv4 prefix
- The contents of an LFIB crossconnect entry

Benefits of MPLS Static Labels

Static Bindings Between Labels and IPv4 Prefixes

Static bindings between labels and IPv4 prefixes can be configured to support MPLS hop-by-hop forwarding through neighbor routers that do not implement LDP label distribution.

Static Crossconnects

Static crossconnects can be configured to support MPLS Label Switched Path (LSP) midpoints when neighbor routers do not implement either the LDP or RSVP label distribution, but do implement an MPLS forwarding path.

How to Configure MPLS Static Labels

Configuring MPLS Static Prefix Label Bindings

To configure MPLS static prefix/label bindings, use the following commands beginning in global configuration mode:

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **mpls label range** *min-label max-label* [**static** *min-static-label max-static-label*]
4. **mpls static binding ipv4** *prefix mask* [**input**| **output** *nexthop*] *label*

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: <pre>Router> enable</pre>	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: <pre>Router# configure terminal</pre>	Enters global configuration mode.
Step 3	mpls label range <i>min-label max-label</i> [static <i>min-static-label max-static-label</i>] Example: <pre>Router(config)# mpls label range 200 100000 static 16 199</pre>	Specifies a range of labels for use with MPLS Static Labels feature. (Default is no labels reserved for static assignment.)
Step 4	mpls static binding ipv4 <i>prefix mask</i> [input output <i>nexthop</i>] <i>label</i> Example: <pre>Router(config)# mpls static binding ipv4 10.0.0.0 255.0.0.0 55</pre>	Specifies static binding of labels to IPv4 prefixes. Bindings specified are installed automatically in the MPLS forwarding table as routing demands.

Verifying MPLS Static Prefix Label Bindings

To verify the configuration for MPLS static prefix/label bindings, use this procedure:

SUMMARY STEPS

1. Enter **show mpls label range** command. The output shows that the new label ranges do not take effect until a reload occurs:
2. Enter the **show mpls static binding ipv4** command to show the configured static prefix/label bindings:
3. Use the **show mpls forwarding-table** command to determine which static prefix/label bindings are currently in use for MPLS forwarding.

DETAILED STEPS

Step 1 Enter **show mpls label range** command. The output shows that the new label ranges do not take effect until a reload occurs:

Example:

```
Router# show mpls label range

Downstream label pool: Min/Max label: 16/100000
 [Configured range for next reload: Min/Max label: 200/100000]
Range for static labels: Min/Max/Number: 16/199
```

The following output from the **show mpls label range** command, executed after a reload, indicates that the new label ranges are in effect:

Example:

```
Router# show mpls label range

Downstream label pool: Min/Max label: 200/100000
Range for static labels: Min/Max/Number: 16/199
```

Step 2 Enter the **show mpls static binding ipv4** command to show the configured static prefix/label bindings:

Example:

```
Router# show mpls static binding ipv4
10.17.17.17/32: Incoming label: 251 (in LIB)
  Outgoing labels:
    10.0.0.1          18
10.18.18.18/32: Incoming label: 201 (in LIB)
  Outgoing labels:
    10.0.0.1 implicit-null
```

Step 3 Use the **show mpls forwarding-table** command to determine which static prefix/label bindings are currently in use for MPLS forwarding.

Example:

```
Router# show mpls forwarding-table
Local  Outgoing  Prefix          Bytes tag  Outgoing     Next Hop
tag    tag or VC  or Tunnel Id   switched  interface
201    Pop tag   10.18.18.18/32  0         PO1/1/0      point2point
```

```

251      2/35      10.18.18.18/32  0      AT4/1/0.1  point2point
        18        10.17.17.17/32  0      PO1/1/0    point2point

```

Configuring MPLS Static Crossconnects

To configure MPLS static crossconnects, use the following command beginning in global configuration mode:

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **mpls label range** *min-label max-label* [**static** *min-static-label max-static-label*]
4. **mpls static binding ipv4** *prefix mask* [**input**| **output** *nexthop*] *label*

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. • Enter your password if prompted.
Step 2	configure terminal Example: Router# configure terminal	Enters global configuration mode.
Step 3	mpls label range <i>min-label max-label</i> [static <i>min-static-label max-static-label</i>] Example: Router(config)# mpls label range 200 100000 static 16 199	Specifies a range of labels for use with MPLS Static Labels feature. (Default is no labels reserved for static assignment.)
Step 4	mpls static binding ipv4 <i>prefix mask</i> [input output <i>nexthop</i>] <i>label</i> Example: Router(config)# Router(config)# mpls static binding ipv4 10.0.0.0 255.0.0.0 55	Specifies static binding of labels to IPv4 prefixes. Bindings specified are installed automatically in the MPLS forwarding table as routing demands.

Verifying MPLS Static Crossconnect Configuration

To verify the configuration for MPLS static crossconnects, use this procedure:

SUMMARY STEPS

1. Use the **show mpls static crossconnect** command to display information about crossconnects that have been configured:

DETAILED STEPS

Use the **show mpls static crossconnect** command to display information about crossconnects that have been configured:

Example:

```
Router# show mpls static crossconnect
Local   Outgoing   Outgoing   Next Hop
label  label      interface
34      22         pos3/0/0   point2point (in LFIB)
```

Monitoring and Maintaining MPLS Static Labels

To monitor and maintain MPLS static labels, use one or more of the following commands:

SUMMARY STEPS

1. **enable**
2. **show mpls forwarding-table**
3. **show mpls label range**
4. **show mpls static binding ipv4**
5. **show mpls static crossconnect**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	show mpls forwarding-table Example: Router# show mpls forwarding-table	Displays the contents of the MPLS LFIB.
Step 3	show mpls label range Example: Router# show mpls label range	Displays information about the static label range.

	Command or Action	Purpose
Step 4	show mpls static binding ipv4 Example: Router# show mpls static binding ipv4	Displays information about the configured static prefix/label bindings.
Step 5	show mpls static crossconnect Example: Router# show mpls static crossconnect	Displays information about the configured crossconnects.

Configuration Examples for MPLS Static Labels

Example Configuring MPLS Static Prefixes Labels

In the following output, the **mpls label range** command reconfigures the range used for dynamically assigned labels from 16 to 100000 to 200 to 100000 and configures a static label range of 16 to 199.

```
Router# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# mpls label range 200 100000 static 16 199
% Label range changes take effect at the next reload.
Router(config)# end
```

In the following output, the **show mpls label range** command indicates that the new label ranges do not take effect until a reload occurs:

```
Router# show mpls label range

Downstream label pool: Min/Max label: 16/100000
  [Configured range for next reload: Min/Max label: 200/100000]
Range for static labels: Min/Max/Number: 16/199
```

In the following output, the **show mpls label range** command, executed after a reload, indicates that the new label ranges are in effect:

```
Router# show mpls label range

Downstream label pool: Min/Max label: 200/100000
Range for static labels: Min/Max/Number: 16/199
```

In the following output, the **mpls static binding ipv4** commands configure static prefix/label bindings. They also configure input (local) and output (remote) labels for various prefixes:

```
Router# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# mpls static binding ipv4 10.0.0.0 255.0.0.0 55
Router(config)# mpls static binding ipv4 10.0.0.0 255.0.0.0 output 10.0.0.66 2607
Router(config)# mpls static binding ipv4 10.6.0.0 255.255.0.0 input 17
Router(config)# mpls static binding ipv4 10.0.0.0 255.0.0.0 output 10.13.0.8 explicit-null
Router(config)# end
```

In the following output, the **show mpls static binding ipv4** command displays the configured static prefix/label bindings:

```
Router# show mpls static binding ipv4

10.0.0.0/8: Incoming label: none;
  Outgoing labels:
10.13.0.8      explicit-null
10.0.0.0/8: Incoming label: 55 (in LIB)
  Outgoing labels:
    10.0.0.66      2607
10.66.0.0/16: Incoming label: 17 (in LIB)
  Outgoing labels: None
```

Example Configuring MPLS Static Crossconnects

In the following output, the **mpls static crossconnect** command configures a crossconnect from incoming label 34 to outgoing label 22 out interface pos3/0/0:

```
Router# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# mpls static crossconnect 34 pos3/0/0 22
Router(config)# end
```

In the following output, the **show mpls static crossconnect** command displays the configured crossconnect:

```
Router# show mpls static crossconnect
Local  Outgoing  Outgoing  Next Hop
label label      interface
34     22         pos3/0/0  point2point (in LFIB)
```

Additional References

Related Documents

Related Topic	Document Title
Cisco IOS commands	Cisco IOS Master Commands List, All Releases
MPLS commands	<i>Multiprotocol Label Switching Command Reference</i>

Standards

Standard	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	--

MIBs

MIB	MIBs Link
No new or modified MIBs are supported by this feature, and support for existing MIBs has not been modified by this feature.	To locate and download MIBs for selected platforms, Cisco software releases, and feature sets, use Cisco MIB Locator found at the following URL: http://www.cisco.com/go/mibs

RFCs

RFC	Title
No new or modified RFCs are supported by this feature, and support for existing RFCs has not been modified by this feature.	--

Technical Assistance

Description	Link
The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.	http://www.cisco.com/cisco/web/support/index.html

Feature Information for MPLS Static Labels

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Table 1: Feature Information for MPLS Static Labels

Feature Name	Releases	Feature Information
MPLS Static Labels	Cisco IOS XE Amsterdam 17.3.2	The MPLS Static Labels feature provides the means to configure the following items statically: <ul style="list-style-type: none"> • The binding between a label and an IPv4 prefix • The contents of an LFIB crossconnect entry

Glossary

BGP --Border Gateway Protocol. The predominant interdomain routing protocol used in IP networks.

Border Gateway Protocol --See BGP.

FIB --Forwarding Information Base. A table that contains a copy of the forwarding information in the IP routing table.

Forwarding Information Base --See FIB.

label --A short, fixed-length identifier that tells switching nodes how the data (packets or cells) should be forwarded.

label binding --An association between a label and a set of packets, which can be advertised to neighbors so that a label switched path can be established.

Label Distribution Protocol --See LDP.

Label Forwarding Information Base --See LFIB.

label imposition --The act of putting the first label on a packet.

label switching router --See LSR.

LDP --Label Distribution Protocol. The protocol that supports MPLS hop-by-hop forwarding by distributing bindings between labels and network prefixes.

LFIB --Label Forwarding Information Base. A data structure in which destinations and incoming labels are associated with outgoing interfaces and labels.

LSR --label switching router. A Layer 3 router that forwards a packet based on the value of an identifier encapsulated in the packet.

MPLS --Multiprotocol Label Switching. An industry standard on which label switching is based.

MPLS hop-by-hop forwarding --The forwarding of packets along normally routed paths using MPLS forwarding mechanisms.

Multiprotocol Label Switching --See MPLS.

Resource Reservation Protocol --See RSVP.

RIB --Routing Information Base. A common database containing all the routing protocols running on a router.

Routing Information Base --See RIB.

RSVP --Resource Reservation Protocol. A protocol for reserving network resources to provide quality of service guarantees to application flows.

traffic engineering --Techniques and processes used to cause routed traffic to travel through the network on a path other than the one that would have been chosen if standard routing methods were used.

Virtual Private Network --See VPN.

VPN --Virtual Private Network. A network that enables IP traffic to use tunneling to travel securely over a public TCP/IP network.



CHAPTER 6

MPLS Multilink PPP Support

The MPLS Multilink PPP Support feature ensures that MPLS Layer 3 Virtual Private Networks (VPNs) with quality of service (QoS) can be enabled for bundled links. This feature supports Multiprotocol Label Switching (MPLS) over Multilink PPP (MLP) links in the edge (provider edge [PE]-to-customer edge [CE]) or in the MPLS core (PE-to-PE and PE-to-provider [P] device).

Service providers that use relatively low-speed links can use MLP to spread traffic across them in their MPLS networks. Link fragmentation and interleaving (LFI) should be deployed in the CE-to-PE link for efficiency, where traffic uses a lower link bandwidth (less than 768 kbps). The MPLS Multilink PPP Support feature can reduce the number of Interior Gateway Protocol (IGP) adjacencies and facilitate load sharing of traffic.

- [Finding Feature Information, on page 53](#)
- [Prerequisites for MPLS Multilink PPP Support, on page 53](#)
- [Information About MPLS Multilink PPP Support, on page 54](#)
- [How to Configure MPLS Multilink PPP Support, on page 58](#)
- [Configuration Examples for MPLS Multilink PPP Support, on page 67](#)
- [Additional References for MPLS Multilink PPP Support, on page 70](#)
- [Feature Information for MPLS Multilink PPP Support, on page 70](#)
- [Glossary, on page 71](#)

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest caveats and feature information, see [Bug Search Tool](#) and the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the feature information table at the end of this module.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Prerequisites for MPLS Multilink PPP Support

- Cisco Express Forwarding must be enabled.
- Multiprotocol Label Switching (MPLS) must be enabled on provider edge (PE) and provider (P) devices.

- Cisco Express Forwarding switching must be enabled on the interface by using the **ip route-cache cef** command.

Information About MPLS Multilink PPP Support

MPLS Layer 3 Virtual Private Network Features Supported for Multilink PPP

The table below lists Multiprotocol Label Switching (MPLS) Layer 3 Virtual Private Network (VPN) features supported for Multilink PPP (MLP) and indicates if the feature is supported on customer edge-to-provider edge (CE-to-PE) links, PE-to-provider (P) links, and Carrier Supporting Carrier (CSC) CE-to-PE links.

Table 2: MPLS Layer 3 VPN Features Supported for MLP

MPLS L3 VPN Feature	CE-to-PE Links	PE-to-P Links	CSC CE-to-PE Links
Static routes	Supported	Not supported	Not supported
External Border Gateway Protocol (eBGP)	Supported	Not applicable to this configuration	Supported
Intermediate System-to-Intermediate System (IS-IS)	Not supported	Supported	Not supported
Open Shortest Path First (OSPF)	Supported	Supported	Not supported
Enhanced Interior Gateway Routing Protocol (EIGRP)	Supported	Supported	Not supported
Interprovider interautonomous (Inter-AS) VPNs (with Label Distribution Protocol [LDP])	Not applicable to this configuration	Supported (MLP between Autonomous System Boundary Routers [ASBRs])	Not applicable to this configuration
Inter-AS VPNs with IPv4 Label Distribution	Not applicable to this configuration	Supported (MLP between ASBRs)	Not applicable to this configuration
CSC VPNs (with LDP)	Not supported	Not applicable to this configuration	Supported
CSC VPNs with IPv4 label distribution	Supported	Not applicable to this configuration	Supported
External and internal BGP (eBGP) Multipath	Not supported	Not supported	Not applicable to this configuration
Internal BGP (iBGP) Multipath	Not applicable to this configuration	Not supported	Not applicable to this configuration
eBGP Multipath	Not supported	Not supported	Not supported

MPLS Quality of Service Features Supported for Multilink PPP

The table below lists the Multiprotocol Label Switching (MPLS) quality of service (QoS) features supported for Multilink PPP (MLP) and indicates if the feature is supported on customer edge-to-provider edge (CE-to-PE) links, PE-to-provider (P) links, and Carrier Supporting Carrier (CSC) CE-to-PE links.

Table 3: MPLS QoS Features Supported for MLP


MPLS QoS Feature	CE-to-PE Links	PE-to-P Links	CSC CE-to-PE Links
Default copy of IP Precedence to EXP bits and the reverse	Supported	Not supported	Not supported
Set MPLS EXP bits using the modular QoS Command-Line Interface (MQC)	Supported	Supported	Supported
Matching on MPLS EXP using MQC	Supported	Supported	Supported
Low Latency Queueing (LLQ)/Class-Based Weighted Fair Queueing (CBWFQ) support	Supported	Supported	Supported
Weighted Random Early Detection (WRED) based on EXP bits using MQC	Supported	Supported	Supported
Policer with EXP bit-marking using MQC-3 action	Supported	Supported	Supported
Support for EXP bits in MPLS accounting	Supported	Supported	Supported

MPLS Multilink PPP Support and PE-to-CE Links

The figure below shows a typical Multiprotocol Label Switching (MPLS) network in which the provider edge (PE) device is responsible for label imposition (at ingress) and disposition (at egress) of the MPLS traffic.

In this topology, Multilink PPP (MLP) is deployed on the PE-to-customer edge (CE) links. The Virtual Private Network (VPN) routing and forwarding instance (VRF) interface is in a multilink bundle. There is no MPLS interaction with MLP; all packets coming into the MLP bundle are IP packets.

 Figure 1: MLP and Traditional PE-to-CE Links

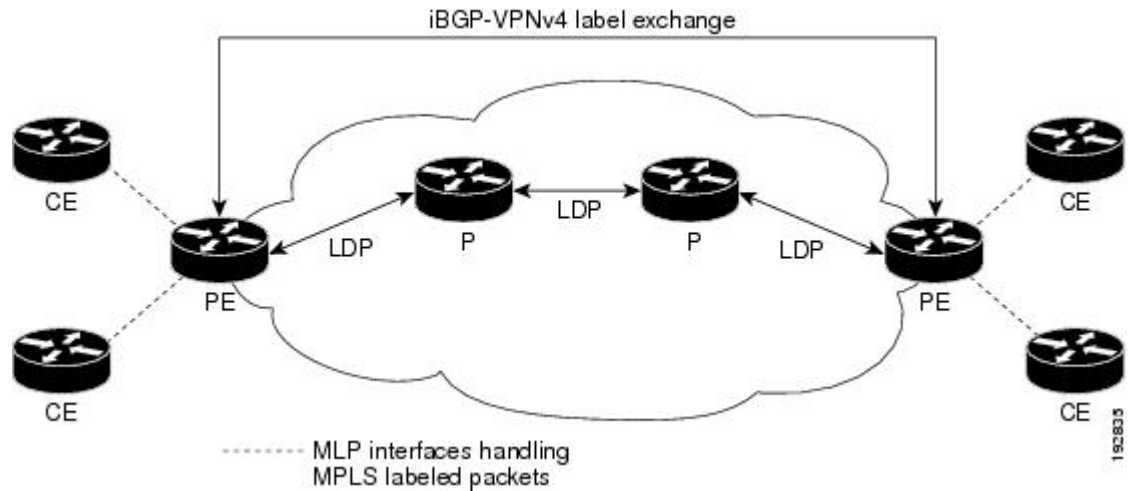


The PE-to-CE routing protocols that are supported for the MPLS Multilink PPP Support feature are external BGP (eBGP), Open Shortest Path First (OSPF), and Enhanced Interior Gateway Routing Protocol (EIGRP). Static routes are also supported between the CE and PE device.

Quality of service (QoS) features that are supported for the MPLS Multilink PPP Support feature on CE-to-PE links are link fragmentation and interleaving (LFI), header compression, policing, marking, and classification.

MPLS Multilink PPP Support and Core Links

The figure below shows a sample topology in which Multiprotocol Label Switching (MPLS) is deployed over Multilink PPP (MLP) on provider edge-to-provider (PE-to-P) and P-to-P links. Enabling MPLS on MLP for PE-to-P links is similar to enabling MPLS on MLP for P-to-P links.

 Figure 2: MLP on PE-to-P and P-to-P Links

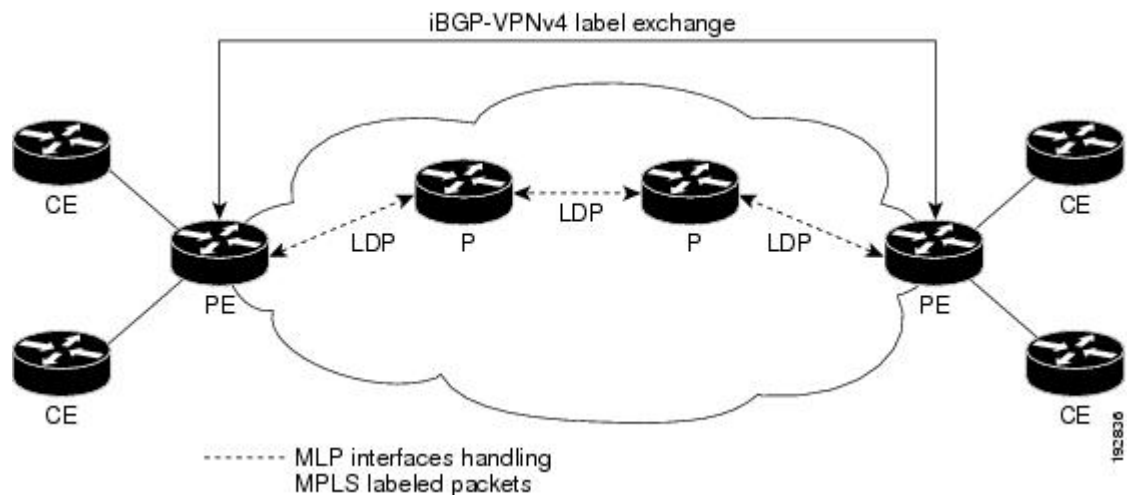


You employ MLP in the PE-to-P or P-to-P links primarily so that you can reduce the number of Interior Gateway Protocol (IGP) adjacencies and facilitate the load sharing of traffic.

In addition to requiring MLP on the PE-to-P links, the MPLS Multilink PPP Support feature requires the configuration of an IGP routing protocol and the Label Distribution Protocol (LDP).

MPLS Multilink PPP Support in a CSC Network


The figure below shows a typical Multiprotocol Label Switching (MPLS) Virtual Private Network (VPN) Carrier Supporting Carrier (CSC) network where Multilink PPP (MLP) is configured on the CSC customer edge (CE)-to-provider edge (PE) links.

 Figure 3: MLP on CSC CE-to-PE Links with MPLS VPN Carrier Supporting Carrier

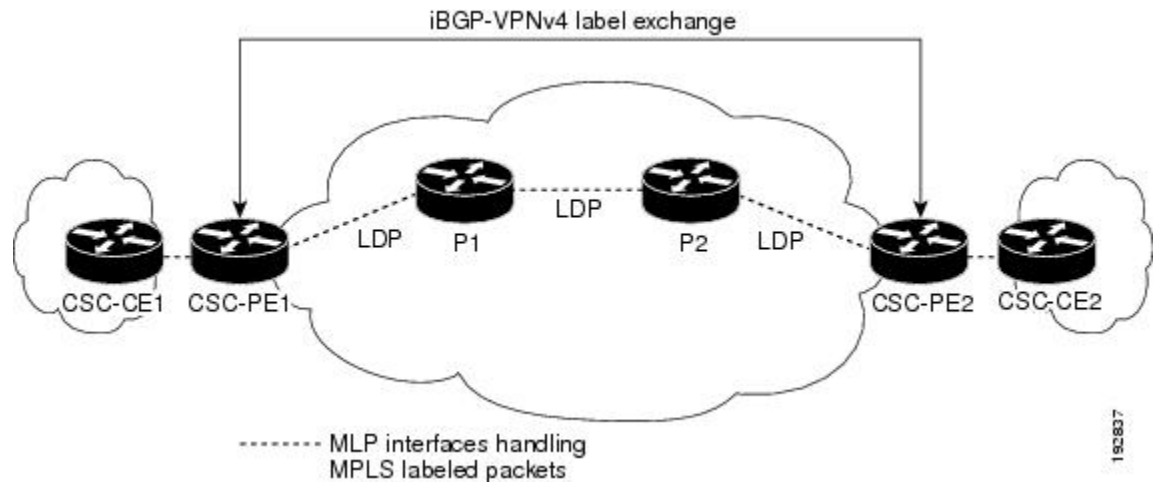

The MPLS Multilink PPP Support feature supports MLP between CSC-CE and CSC-PE links with the Label Distribution Protocol (LDP) or with external Border Gateway Protocol (eBGP) IPv4 label distribution. This feature also supports link fragmentation and interleaving (LFI) for an MPLS VPN CSC configuration. The figure below shows all MLP links that this feature supports for CSC configurations.

 
Figure 4: MLP Supported Links with MPLS VPN Carrier Supporting Carrier

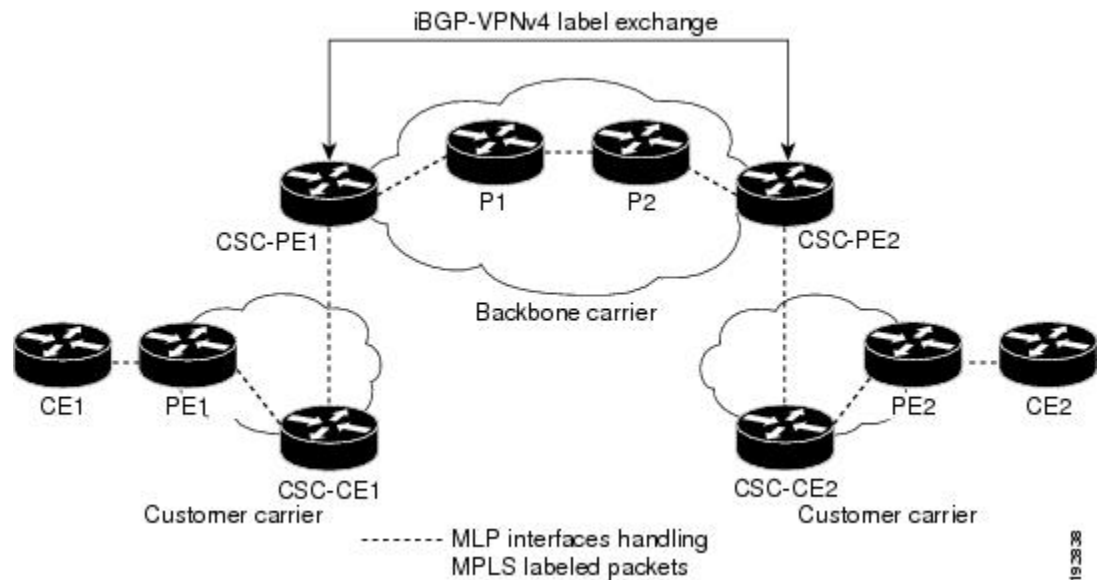

MPLS Multilink PPP Support in an Interautonomous System

The figure below shows a typical Multiprotocol Label Switching (MPLS) Virtual Private Network (VPN) interautonomous system (Inter-AS) network where Multilink PPP (MLP) is configured on the provider edge-to-customer edge (PE-to-CE) links.

 Figure 5: MLP on ASBR-to-PE Links in an MPLS VPN Inter-AS Network

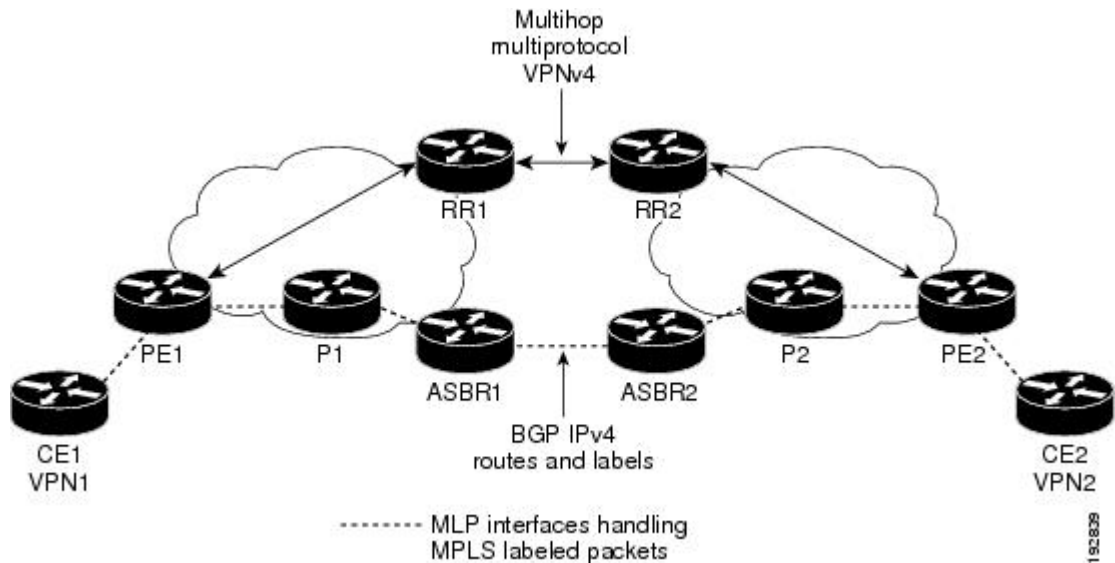

The MPLS Multilink PPP Support feature supports MLP between Autonomous System Boundary Router (ASBR) links for Inter-AS VPNs with Label Distribution Protocol (LDP) and with external Border Gateway Protocol (eBGP) IPv4 label distribution.

How to Configure MPLS Multilink PPP Support

The tasks in this section can be performed on customer edge-to-provider edge (CE-to-PE) links, PE-to-provider (P) links, P-to-P links, and Carrier Supporting Carrier (CSC) CE-to-PE links.

Enabling Cisco Express Forwarding

Perform the following task to enable Cisco Express Forwarding. Cisco Express Forwarding is required for the forwarding of MLP traffic.

Before you begin

Multilink PPP requires the configuration of Cisco Express Forwarding. To find out if Cisco Express Forwarding is enabled on your device, enter the `show ip cef` command. If Cisco Express Forwarding is enabled, you receive output that looks like the following:

```
Device# show ip cef
Prefix          Next Hop          Interface
10.2.61.8/24    192.168.100.1    FastEthernet1/0/0
                192.168.101.1    FastEthernet6/1/0
```

If Cisco Express Forwarding is not enabled on your platform, the output for the **show ip cef** command looks like the following:

```
Device# show ip cef
%CEF not running
```

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ip cef**
4. **exit**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	ip cef Example: Device(config)# ip cef	Enables Cisco Express Forwarding.
Step 4	exit Example: Device(config)# exit	Returns to privileged EXEC mode.

Creating a Multilink Bundle

Perform this task to create a multilink bundle for the MPLS Multilink PPP Support feature. This multilink bundle can reduce the number of Interior Gateway Protocol (IGP) adjacencies and facilitate load sharing of traffic.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface multilink** *group-number*
4. **ip address** *address mask* [**secondary**]

5. **encapsulation** *encapsulation-type*
6. **ppp multilink**
7. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	interface multilink <i>group-number</i> Example: Device(config)# interface multilink 1	Creates a multilink bundle and enters multilink interface configuration mode. <ul style="list-style-type: none"> • The <i>group-number</i> argument is the number of the multilink bundle (a nonzero number).
Step 4	ip address <i>address mask</i> [secondary] Example: Device(config-if)# ip address 10.0.0.0 255.255.0.0	Sets a primary or secondary IP address for an interface. <ul style="list-style-type: none"> • The <i>address</i> argument is the IP address. • The <i>mask</i> argument is the mask for the associated IP subnet. • The secondary keyword specifies that the configured address is a secondary IP address. If this keyword is omitted, the configured address is the primary IP address. This command is used to assign an IP address to the multilink interface.
Step 5	encapsulation <i>encapsulation-type</i> Example: Device(config-if)# encapsulation ppp	Sets the encapsulation method as PPP to be used by the interface. <ul style="list-style-type: none"> • The <i>encapsulation-type</i> argument specifies the encapsulation type.
Step 6	ppp multilink Example: Device(config-if)# ppp multilink	Enables MLP on an interface.
Step 7	end Example:	Returns to privileged EXEC mode.

	Command or Action	Purpose
	Device(config-if)# end	

Assigning an Interface to a Multilink Bundle

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **controller** {t1 | e1} *slot/port*
4. **channel-group** *channel-number timeslots range*
5. **exit**
6. **interface serial** *slot/subslot/port[,subinterface]*
7. **ip route-cache** [cef]
8. **no ip address**
9. **keepalive** [*period [retries]*]
10. **encapsulation** *encapsulation-type*
11. **ppp multilink group** *group-number*
12. **ppp multilink**
13. **ppp authentication chap**
14. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	controller {t1 e1} <i>slot/port</i> Example: Device# controller t1 1/3	Configures a T1 or E1 controller and enters controller configuration mode. <ul style="list-style-type: none"> • The t1 keyword indicates a T1 line card. • The e1 keyword indicates an E1 line card. • The <i>slot/port</i> arguments are the backplane slot number and port number on the interface. Refer to your hardware installation manual for the specific slot numbers and port numbers.

	Command or Action	Purpose
Step 4	<p>channel-group <i>channel-number</i> timeslots <i>range</i></p> <p>Example:</p> <pre>Device(config-controller)# channel-group 1 timeslots 1</pre>	<p>Defines the time slots that belong to each T1 or E1 circuit.</p> <ul style="list-style-type: none"> The <i>channel-number</i> argument is the channel-group number. When a T1 data line is configured, channel-group numbers can be values from 0 to 23. When an E1 data line is configured, channel-group numbers can be values from 0 to 30. The timeslots <i>range</i> keyword and argument specifies one or more time slots or ranges of time slots belonging to the channel group. The first time slot is numbered 1. For a T1 controller, the time slot range is from 1 to 24. For an E1 controller, the time slot range is from 1 to 31. You can specify a time slot range (for example, 1-29), individual time slots separated by commas (for example 1, 3, 5), or a combination of the two (for example 1-14, 15, 17-31).
Step 5	<p>exit</p> <p>Example:</p> <pre>Device(config-controller)# exit</pre>	Returns to global configuration mode.
Step 6	<p>interface serial <i>slot/subslot/port[,subinterface]</i></p> <p>Example:</p> <pre>Device(config)# interface serial 1/0/0:1</pre>	Configures a serial interface and enters interface configuration mode.
Step 7	<p>ip route-cache [<i>cef</i>]</p> <p>Example:</p> <pre>Device(config-if)# ip route-cache cef</pre>	<p>Controls the use of switching methods for forwarding IP packets.</p> <ul style="list-style-type: none"> The cef keyword enables Cisco Express Forwarding operation on an interface after Cisco Express Forwarding operation was disabled.
Step 8	<p>no ip address</p> <p>Example:</p> <pre>Device(config-if)# no ip address</pre>	Removes any specified IP address.
Step 9	<p>keepalive [<i>period</i> [<i>retries</i>]]</p> <p>Example:</p> <pre>Device(config-if)# keepalive</pre>	<p>Enables keepalive packets and specifies the number of times that the Cisco software tries to send keepalive packets without a response before bringing down the interface or before bringing the tunnel protocol down for a specific interface.</p> <ul style="list-style-type: none"> The <i>period</i> argument is an integer value, in seconds, greater than 0. The default is 10.

	Command or Action	Purpose
		<ul style="list-style-type: none"> The <i>retries</i> argument specifies the number of times that the device continues to send keepalive packets without a response before bringing the interface down. Enter an integer value greater than 1 and less than 255. If you do not enter a value, the value that was previously set is used; if no value was specified previously, the default of 5 is used. <p>If you are using this command with a tunnel interface, the command specifies the number of times that the device continues to send keepalive packets without a response before bringing the tunnel interface protocol down.</p>
Step 10	encapsulation <i>encapsulation-type</i> Example: <pre>Device(config-if)# encapsulation ppp</pre>	Sets the encapsulation method used by the interface. <ul style="list-style-type: none"> The <i>encapsulation-type</i> argument specifies the encapsulation type. The example specifies PPP encapsulation.
Step 11	ppp multilink group <i>group-number</i> Example: <pre>Device(config-if)# ppp multilink group 1</pre>	Restricts a physical link to join only one designated multilink group interface. <ul style="list-style-type: none"> The <i>group-number</i> argument is the number of the multilink bundle (a nonzero number).
Step 12	ppp multilink Example: <pre>Device(config-if)# ppp multilink</pre>	Enables MLP on the interface.
Step 13	ppp authentication chap Example: <pre>Device(config-if)# ppp authentication chap</pre>	(Optional) Enables Challenge Handshake Authentication Protocol (CHAP) authentication on the serial interface.
Step 14	end Example: <pre>Device(config-if)# end</pre>	Returns to privileged EXEC mode.

Disabling PPP Multilink Fragmentation

Perform this task to disable PPP multilink fragmentation. PPP multilink fragmentation is enabled by default.

Enabling fragmentation reduces the delay latency among bundle links, but adds some load to the CPU. Disabling fragmentation might produce better throughput.

If your data traffic is consistently of a similar size, we recommend disabling fragmentation. In this case, the benefits of fragmentation can be outweighed by the added load on the CPU.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface *type number***
4. **ppp multilink fragmentation disable**
5. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	interface <i>type number</i> Example: Device(config)# interface serial 1/0/0	Configures an interface type and enters interface configuration mode. <ul style="list-style-type: none"> • The <i>type</i> argument indicates the type of interface to be configured. • The <i>number</i> argument specifies the port, connector, or interface card number. The numbers are assigned at the factory at the time of installation or when the interface is added to a system, and they can be displayed with the show interfaces command.
Step 4	ppp multilink fragmentation disable Example: Device(config-if)# ppp multilink fragmentation disable	Disables packet fragmentation.
Step 5	end Example: Device(config-if)# end	Returns to privileged EXEC mode.

Verifying the Multilink PPP Configuration**SUMMARY STEPS**

1. **enable**

2. **show ip interface brief**
3. **show ppp multilink**
4. **show ppp multilink interface *interface-bundle***
5. **show interface *type number***
6. **show mpls forwarding-table**
7. **exit**

DETAILED STEPS

Step 1 **enable**

Enables privileged EXEC mode. Enter your password if prompted.

Example:

```
Device> enable
Device#
```

Step 2 **show ip interface brief**

Verifies logical and physical Multilink PPP (MLP) interfaces.

Example:

Step 3 **show ppp multilink**

Verifies that you have created a multilink bundle.

Example:

Step 4 **show ppp multilink interface *interface-bundle***

Displays information about a specific MLP interface.

Example:

Step 5 **show interface *type number***

Displays information about serial interfaces in your configuration.

Example:

```
Device#

Hardware is Multichannel T1
MTU 1500 bytes, BW 64 Kbit, DLY 20000 usec,
    reliability 255/255, txload 1/255, rxload 1/255
Encapsulation PPP, LCP Open, multilink Open, crc 16, Data non-inverted
Last input 00:00:01, output 00:00:01, output hang never
Last clearing of "show interface" counters 00:47:13
Input queue: 0/75/0/0 (size/max/drops/flushes); Total output drops: 0
Queueing strategy: fifo
Output queue: 0/40 (size/max)
5 minute input rate 0 bits/sec, 0 packets/sec
5 minute output rate 0 bits/sec, 0 packets/sec
    722 packets input, 54323 bytes, 0 no buffer
Received 0 broadcasts, 0 runts, 0 giants, 0 throttles
    0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored, 0 abort
```

```

697 packets output, 51888 bytes, 0 underruns
0 output errors, 0 collisions, 1 interface resets
0 output buffer failures, 0 output buffers swapped out
1 carrier transitions no alarm present
Timeslot(s) Used:1, subrate: 64Kb/s, transmit delay is 0 flags
Transmit queue length 25

```

Device#

```

Hardware is Multichannel T1
MTU 1500 bytes, BW 64 Kbit, DLY 20000 usec,
  reliability 255/255, txload 1/255, rxload 1/255
Encapsulation PPP, LCP Open, multilink Open, crc 16, Data non-inverted
Last input 00:00:03, output 00:00:03, output hang never
Last clearing of "show interface" counters 00:47:16
Input queue: 0/75/0/0 (size/max/drops/flushes); Total output drops: 0
Queueing strategy: fifo
Output queue: 0/40 (size/max)
5 minute input rate 0 bits/sec, 0 packets/sec
5 minute output rate 0 bits/sec, 0 packets/sec
  725 packets input, 54618 bytes, 0 no buffer
  Received 0 broadcasts, 0 runts, 0 giants, 0 throttles
  0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored, 0 abort
  693 packets output, 53180 bytes, 0 underruns
  0 output errors, 0 collisions, 1 interface resets
  0 output buffer failures, 0 output buffers swapped out
  1 carrier transitions no alarm present
Timeslot(s) Used:2, subrate: 64Kb/s, transmit delay is 0 flags
Transmit queue length 26

```

You can also use the **show interface** command to display information about the multilink interface:

Example:

Device# **show interface multilink6**

```

Multilink6 is up, line protocol is up
Hardware is multilink group interface
Internet address is 10.30.0.2/8
MTU 1500 bytes, BW 128 Kbit, DLY 100000 usec,
  reliability 255/255, txload 1/255, rxload 1/255
Encapsulation PPP, LCP Open, multilink Open
Open: CDPCP, IPCP, TAGCP, loopback not set
DTR is pulsed for 2 seconds on reset
Last input 00:00:00, output never, output hang never
Last clearing of "show interface" counters 00:48:43
Input queue: 0/75/0/0 (size/max/drops/flushes); Total output drops: 0
Queueing strategy: fifo
Output queue: 0/40 (size/max)
30 second input rate 0 bits/sec, 0 packets/sec
30 second output rate 0 bits/sec, 0 packets/sec
  1340 packets input, 102245 bytes, 0 no buffer
  Received 0 broadcasts, 0 runts, 0 giants, 0 throttles
  0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored, 0 abort
  1283 packets output, 101350 bytes, 0 underruns
  0 output errors, 0 collisions, 1 interface resets
  0 output buffer failures, 0 output buffers swapped out
  0 carrier transitions

```

Step 6 **show mpls forwarding-table**

Displays contents of the Multiprotocol Label Switching (MPLS) Label Forwarding Information Base (LFIB). Look for information on multilink interfaces associated with a point2point next hop.

Example:

```
Device# show mpls forwarding-table
```

Local tag	Outgoing tag or VC	Prefix or Tunnel Id	Bytes tag switched	Outgoing interface	Next Hop
16	Untagged	10.30.0.1/32	0	Mu6	point2point
17	Pop tag	10.0.0.3/32	0	Mu6	point2point
18	Untagged	10.0.0.9/32[V]	0	Mu10	point2point
19	Untagged	10.0.0.11/32[V]	6890	Mu10	point2point
20	Untagged	10.32.0.0/8[V]	530	Mu10	point2point
21	Aggregate	10.34.0.0/8[V]	0		
22	Untagged	10.34.0.1/32[V]	0	Mu10	point2point

Use the **show ip bgp vpnv4** command to display VPN address information from the Border Gateway Protocol (BGP) table.

Example:

```
Device# show ip bgp vpnv4 all summary
```

```
BGP router identifier 10.0.0.1, local AS number 100
BGP table version is 21, main routing table version 21
10 network entries using 1210 bytes of memory
10 path entries using 640 bytes of memory
2 BGP path attribute entries using 120 bytes of memory
1 BGP extended community entries using 24 bytes of memory
0 BGP route-map cache entries using 0 bytes of memory
0 BGP filter-list cache entries using 0 bytes of memory
BGP using 1994 total bytes of memory
BGP activity 10/0 prefixes, 10/0 paths, scan interval 5 secs
10.0.0.3 4 100 MsgRc52 MsgSe52 TblV21 0 0 00:46:35 State/P5xRcd
```

Step 7 **exit**

Returns to user EXEC mode.

Example:

```
Device# exit
Device>
```

Configuration Examples for MPLS Multilink PPP Support

Example: Configuring Multilink PPP on an MPLS CSC PE Device

The following example shows how to configure for Multiprotocol Label Switching (MPLS) Carrier Supporting Carrier (CSC) provider edge (PE) device.

```
!
mpls label protocol ldp
ip cef
ip vrf vpn2
  rd 200:1
  route-target export 200:1
```

```

route-target import 200:1
!

!

no ip address
encapsulation ppp

ppp multilink
ppp multilink group 1

interface Multilink1
ip vrf forwarding vpn2
ip address 10.35.0.2 255.0.0.0
no peer neighbor-route
load-interval 30
ppp multilink
ppp multilink interleave
ppp multilink group 1

!
!
router ospf 200
log-adjacency-changes
auto-cost reference-bandwidth 1000
redistribute connected subnets
passive-interface Multilink1
network 10.0.0.7 0.0.0.0 area 200
network 10.31.0.0 0.255.255.255 area 200
!
!
router bgp 200
no bgp default ipv4-unicast
bgp log-neighbor-changes
neighbor 10.0.0.11 remote-as 200
neighbor 10.0.0.11 update-source Loopback0
!
address-family vpnv4
neighbor 10.0.0.11 activate
neighbor 10.0.0.11 send-community extended
bgp scan-time import 5
exit-address-family
!
address-family ipv4 vrf vpn2
redistribute connected
neighbor 10.35.0.1 remote-as 300
neighbor 10.35.0.1 activate
neighbor 10.35.0.1 as-override
neighbor 10.35.0.1 advertisement-interval 5
no auto-summary
no synchronization
exit-address-family

```

Example: Enabling Cisco Express Forwarding

The following example shows how to enable Cisco Express Forwarding for Multilink PPP (MLP) configurations:

```

Device> enable
Device# configure terminal
Device(config)# ip cef

```

Example: Creating a Multilink Bundle

The following example shows how to create a multilink bundle for the MPLS Multilink PPP Support feature:

```
Device(config)# interface multilink 1
Device(config-if)# ip address 10.0.0.0 10.255.255.255
Device(config-if)# encapsulation ppp
Device(config-if)# ppp chap hostname group 1
Device(config-if)# ppp multilink
Device(config-if)# ppp multilink group 1
```

Example: Assigning an Interface to a Multilink Bundle

The following example shows how to create four multilink interfaces with Cisco Express Forwarding switching and Multilink PPP (MLP) enabled. Each of the newly created interfaces is added to a multilink bundle.

```
interface multilink1
 ip address 10.0.0.0 10.255.255.255
 ppp chap hostname group 1
 ppp multilink
 ppp multilink group 1

no ip address
 encapsulation ppp
 ip route-cache cef
 no keepalive
 ppp multilink
 ppp multilink group 1

no ip address
 encapsulation ppp
 ip route-cache cef
 no keepalive
 ppp chap hostname group 1
 ppp multilink
 ppp multilink group 1

no ip address
 encapsulation ppp
 ip route-cache cef
 no keepalive
 ppp chap hostname group 1
 ppp multilink
 ppp multilink group 1

no ip address
 encapsulation ppp
 ip route-cache cef
 no keepalive
 ppp chap hostname group 1
 ppp multilink
 ppp multilink group 1
```

Additional References for MPLS Multilink PPP Support

Related Documents

Related Topic	Document Title
Cisco IOS commands	Cisco IOS Master Commands List, All Releases
MPLS commands	Cisco IOS Multiprotocol Label Switching Command Reference
Basic MPLS VPNs	“MPLS Virtual Private Networks” chapter in the <i>MPLS Layer 3 VPNs Configuration Guide</i>

RFCs

RFCs	Title
RFC 1990	<i>The PPP Multilink Protocol (MP)</i>

Technical Assistance

Description	Link
The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.	http://www.cisco.com/cisco/web/support/index.html

Feature Information for MPLS Multilink PPP Support

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Table 4: Feature Information for MPLS Multilink PPP Support

Feature Name	Releases	Feature Information
MPLS Multilink PPP Support		The MPLS Multilink PPP Support feature ensures that MPLS Layer 3 Virtual Private Networks (VPNs) with quality of service (QoS) can be enabled for bundled links. This feature supports Multiprotocol Label Switching (MPLS) over Multilink PPP (MLP) links in the edge (provider edge [PE]-to-customer edge [CE]) or in the MPLS core (PE-to-PE and PE-to-provider [P]device).

Glossary

bundle—A group of interfaces connected by parallel links between two systems that have agreed to use Multilink PPP (MLP) over those links.

CBWFQ—class-based weighted fair queuing. A queuing option that extends the standard Weighted Fair Queuing (WFQ) functionality to provide support for user-defined traffic classes.

Cisco Express Forwarding—A proprietary form of switching that optimizes network performance and scalability for networks with large and dynamic traffic patterns, such as the Internet, and for networks characterized by intensive web-based applications or interactive sessions. Although you can use Cisco Express Forwarding in any part of a network, it is designed for high-performance, highly resilient Layer 3 IP backbone switching.

EIGRP—Enhanced Interior Gateway Routing Protocol. An advanced version of the Interior Gateway Routing Protocol (IGRP) developed by Cisco. It provides superior convergence properties and operating efficiency, and combines the advantages of link-state protocols with those of distance vector protocols.

IGP—Interior Gateway Protocol. An Internet protocol used to exchange routing information within an autonomous system. Examples of common Internet IGPs include Interior Gateway Routing Protocol (IGRP), Open Shortest Path First (OSPF), and Routing Information Protocol (RIP).

IGRP—Interior Gateway Routing Protocol. An Interior Gateway Protocol (IGP) developed by Cisco to address the issues associated with routing in large, heterogeneous networks. Compare with Enhanced Interior Gateway Routing Protocol (EIGRP).

IS-IS—Intermediate System-to-Intermediate System. An Open Systems Interconnection (OSI) link-state hierarchical routing protocol, based on DECnet Phase V routing, in which IS-IS devices exchange routing information based on a single metric to determine network topology.

LCP—Link Control Protocol. A protocol that establishes, configures, and tests data link connections for use by PPP.

LFI—link fragmentation and interleaving. The LFI feature reduces delay on slower-speed links by breaking up large datagrams and interleaving low-delay traffic packets with the smaller packets resulting from the fragmented datagram. LFI allows reserve queues to be set up so that Real-Time Protocol (RTP) streams can be mapped into a higher priority queue in the configured weighted fair queue set.

link—One of the interfaces in a bundle.

LLQ—low latency queuing. A quality of service QoS queuing feature that provides a strict priority queue (PQ) for voice traffic and weighted fair queues for other classes of traffic. It is also called priority queuing/class-based weighted fair queuing (PQ/CBWFQ).

MLP—Multilink PPP. A method of splitting, recombining, and sequencing datagrams across multiple logical links. The use of MLP increases throughput between two sites by grouping interfaces and then load balancing packets over the grouped interfaces (called a bundle). Splitting packets at one end, sending them over the bundled interfaces, and recombining them at the other end achieves load balancing.

MQC—Modular QoS CLI. MQC is a CLI structure that allows users to create traffic polices and attach these polices to interfaces. MQC allows users to specify a traffic class independently of QoS policies.

NCP—Network Control Protocol. A series of protocols for establishing and configuring different network layer protocols (such as for AppleTalk) over PPP.

OSPF—Open Shortest Path First. A link-state, hierarchical Interior Gateway Protocol (IGP) routing algorithm proposed as a successor to Routing Information Protocol (RIP) in the Internet community. OSPF features include least-cost routing, multipath routing, and load balancing. OSPF was derived from an early version of the IS-IS protocol.

PPP—Point-to-Point Protocol. A successor to the Serial Line Interface Protocol (SLIP) that provides device-to-device and host-to-network connections over synchronous and asynchronous circuits. PPP works with several network layer protocols (such as IP, Internetwork Packet Exchange [IPX], and AppleTalk Remote Access [ARA]). PPP also has built-in security mechanisms (such as Challenge Handshake Authentication Protocol [CHAP] and Password Authentication Protocol [PAP]). PPP relies on two protocols: Link Control Protocol (LCP) and Network Control Protocol (NCP).

RIP—Routing Information Protocol. A version of Interior Gateway Protocol (IGP) that is supplied with UNIX Berkeley Standard Distribution (BSD) systems. Routing Information Protocol (RIP) is the most common IGP in the Internet. It uses hop count as a routing metric.

Virtual bundle interface—An interface that represents the master link of a bundle. It is not tied to any physical interface. Data going over the bundle is transmitted and received through the master link.

WFQ—weighted fair queueing. A congestion management algorithm that identifies conversations (in the form of traffic streams), separates packets that belong to each conversation, and ensures that capacity is shared fairly among the individual conversations. WFQ is an automatic way of stabilizing network behavior during congestion and results in improved performance and reduced retransmission.

WRED—weighted random early detection. A queueing method that ensures that high-precedence traffic has lower loss rates than other traffic during times of congestion.



CHAPTER 7

6PE Multipath

The 6PE multipath feature uses multiprotocol internal BGP (MP-iBGP) to distribute IPv6 routes over the MPLS IPv4 core network and to attach an MPLS label to each route

- [Finding Feature Information, on page 73](#)
- [Information About 6PE Multipath, on page 73](#)
- [How to Configure 6PE Multipath, on page 74](#)
- [Configuration Examples for 6PE Multipath, on page 75](#)
- [Additional References, on page 75](#)
- [Feature Information for 6PE Multipath, on page 76](#)

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest caveats and feature information, see [Bug Search Tool](#) and the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the feature information table at the end of this module.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Information About 6PE Multipath

6PE Multipath

Internal and external BGP multipath for IPv6 allows the IPv6 device to load balance between several paths (for example, the same neighboring autonomous system or subautonomous system, or the same metric) to reach its destination. The 6PE multipath feature uses MP-iBGP to distribute IPv6 routes over the MPLS IPv4 core network and to attach an MPLS label to each route.

When MP-iBGP multipath is enabled on the 6PE device, all labeled paths are installed in the forwarding table with MPLS information (label stack) when MPLS information is available. This functionality enables 6PE to perform load balancing.

How to Configure 6PE Multipath

Configuring IBGP Multipath Load Sharing

Perform this task to configure IBGP multipath load sharing and control the maximum number of parallel IBGP routes that can be installed in a routing table.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **router bgp** *as-number*
4. **address-family ipv6** [**unicast**]
5. **maximum-paths ibgp** *number-of-paths*

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	router bgp <i>as-number</i> Example: Device(config)# router bgp 65000	Enters router configuration mode for the specified routing process.
Step 4	address-family ipv6 [unicast] Example: Device(config-router)# address-family ipv6	Specifies the IPv6 address family and enters address family configuration mode. <ul style="list-style-type: none"> • The unicast keyword specifies the IPv6 unicast address family. By default, the device is placed in configuration mode for the IPv6 unicast address family if the unicast keyword is not specified with the address-family ipv6 command.
Step 5	maximum-paths ibgp <i>number-of-paths</i> Example: Device(config-router)# maximum-paths ibgp 3	Controls the maximum number of parallel IBGP routes that can be installed in a routing table.

Configuration Examples for 6PE Multipath

Example: Configuring 6PE Multipath

```
Device# show ipv6 cef internals
IPv6 CEF is enabled and running
Slow processing intvl = 1 seconds backoff level current/max 0/0
0 unresolved prefixes, 0 requiring adjacency update
IPv6 CEF default table
14 prefixes tableid 0
table version 17
root 6283F5D0
```

Additional References

Related Documents

Related Topic	Document Title
IPv6 addressing and connectivity	<i>IPv6 Configuration Guide</i>
Cisco IOS commands	Master Commands List, All Releases
IPv6 commands	IPv6 Command Reference
Cisco IOS IPv6 features	IPv6 Feature Mapping

Standards and RFCs

Standard/RFC	Title
RFCs for IPv6	<i>IPv6 RFCs</i>

Technical Assistance

Description	Link
The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.	http://www.cisco.com/cisco/web/support/index.html

Feature Information for 6PE Multipath

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Table 5: Feature Information for 6PE Multipath

Feature Name	Releases	Feature Information
6PE Multipath		<p>The 6PE multipath feature uses MP-iBGP to distribute IPv6 routes over the MPLS IPv4 core network and to attach an MPLS label to each route.</p> <p>The following commands were introduced or modified: maximum-paths ibgp, router bgp, show ipv6 cef internals.</p>



CHAPTER 8

IPv6 Switching: Provider Edge Router over MPLS

Multiprotocol Label Switching (MPLS) is deployed by many service providers in their IPv4 networks. Service providers want to introduce IPv6 services to their customers, but changes to their existing IPv4 infrastructure can be expensive and the cost benefit for a small amount of IPv6 traffic does not make economic sense. Several integration scenarios have been developed to leverage an existing IPv4 MPLS infrastructure and add IPv6 services without requiring any changes to the network backbone. This document describes how to implement IPv6 over MPLS.

- [Finding Feature Information, on page 77](#)
- [Prerequisites for IPv6 Switching: Provider Edge Router over MPLS, on page 77](#)
- [Information About IPv6 Switching: Provider Edge Router over MPLS, on page 78](#)
- [How to Deploy IPv6 Switching: Provider Edge Router over MPLS, on page 79](#)
- [Configuration Examples for IPv6 Switching: Provider Edge Router over MPLS, on page 84](#)
- [Additional References for IPv6 Switching: Provider Edge Router over MPLS, on page 86](#)
- [Feature Information for IPv6 Switching: Provider Edge Router over MPLS, on page 87](#)

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest caveats and feature information, see [Bug Search Tool](#) and the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the feature information table at the end of this module.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Prerequisites for IPv6 Switching: Provider Edge Router over MPLS

Before the IPv6 Provider Edge Router over MPLS (6PE) feature can be implemented, MPLS must be running over the core IPv4 network. If Cisco devices are used, Cisco Express Forwarding or distributed Cisco Express Forwarding must be enabled for both IPv4 and IPv6 protocols. This module assumes that you are familiar with MPLS.

Information About IPv6 Switching: Provider Edge Router over MPLS

Benefits of Deploying IPv6 over MPLS Backbones

IPv6 over MPLS backbones enables isolated IPv6 domains to communicate with each other over an MPLS IPv4 core network. This implementation requires only a few backbone infrastructure upgrades and no reconfiguration of core devices because forwarding is based on labels rather than the IP header itself, providing a very cost-effective strategy for the deployment of IPv6.

Additionally, the inherent Virtual Private Network (VPN) and MPLS traffic engineering (MPLS-TE) services available within an MPLS environment allow IPv6 networks to be combined into IPv4 VPNs or extranets over an infrastructure supporting IPv4 VPNs and MPLS-TE.


IPv6 on the Provider Edge Devices

The Cisco implementation of IPv6 Provider Edge Router over MPLS is called 6PE, and it enables IPv6 sites to communicate with each other over an MPLS IPv4 core network using MPLS label switched paths (LSPs). This feature relies on multiprotocol Border Gateway Protocol (BGP) extensions in the IPv4 network configuration on the provider edge (PE) device to exchange IPv6 reachability information in addition to an MPLS label for each IPv6 address prefix to be advertised. Edge devices are configured to be dual stack running both IPv4 and IPv6, and use the IPv4 mapped IPv6 address for IPv6 prefix reachability exchange.

A hierarchy of labels is imposed on the 6PE ingress device to keep the IPv6 traffic transparent to all the core devices. The top label provides connectivity inside the IPv4 MPLS core network and the label is distributed by Label Distribution Protocol (LDP), Tag Distribution Protocol (TDP), or Resource Reservation Protocol (RSVP). TDP and LDP can both be used for label distribution, but RSVP is used only in the context of MPLS-TE label exchange. The bottom label, automatically assigned to the IPv6 prefix of the destination, is distributed by multiprotocol BGP and used at each 6PE egress device for IPv6 forwarding.

In the figure below the 6PE devices are configured as dual stack devices able to route both IPv4 and IPv6 traffic. Each 6PE device is configured to run LDP, TDP, or RSVP (if traffic engineering is configured) to bind the IPv4 labels. The 6PE devices use multiprotocol BGP to exchange reachability information with the other 6PE devices within the MPLS domain, and to distribute IPv6 labels between them. All 6PE and core devices--P devices in Figure 3--within the MPLS domain share a common IPv4 Interior Gateway Protocol (IGP) such as Open Shortest Path First (OSPF) or Integrated Intermediate System-to-Intermediate System (IS-IS).

 Figure 6: 6PE Device Topology

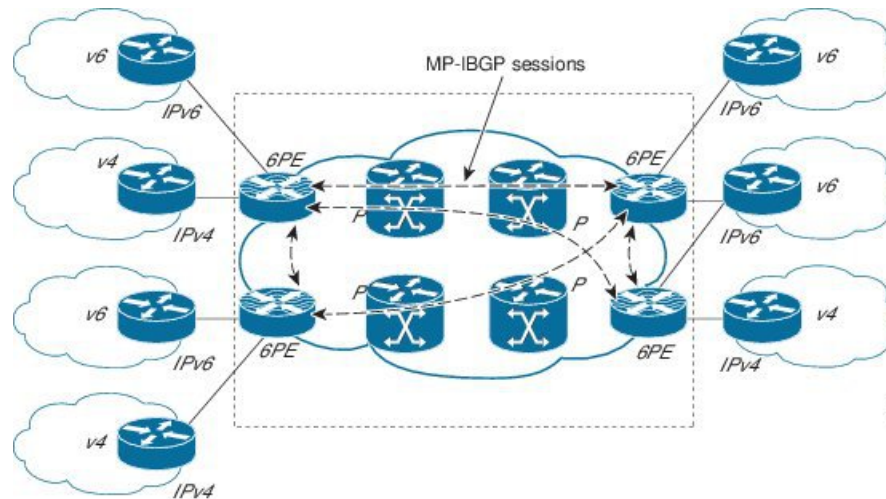

The interfaces on the 6PE devices connecting to the CE device can be configured to forward IPv6 traffic, IPv4 traffic, or both types of traffic depending on the customer requirements. 6PE devices advertise IPv6 reachability information learned from their 6PE peers over the MPLS cloud. Service providers can delegate an IPv6 prefix from their registered IPv6 prefixes over the 6PE infrastructure; otherwise, there is no impact on the CE device.

The P devices in the core of the network are not aware that they are switching IPv6 packets. Core devices are configured to support MPLS and the same IPv4 IGP as the PE devices to establish internal reachability inside the MPLS cloud. Core devices also use LDP, TDP, or RSVP for binding IPv4 labels. Implementing the Cisco 6PE feature does not have any impact on the MPLS core devices.

Within the MPLS network, IPv6 traffic is forwarded using label switching, making the IPv6 traffic transparent to the core of the MPLS network. No IPv6 over IPv4 tunnels or Layer 2 encapsulation methods are required.

How to Deploy IPv6 Switching: Provider Edge Router over MPLS


Deploying IPv6 on the Provider Edge Devices (6PE)

Specifying the Source Address Interface on a 6PE Device

Two configuration tasks using the network shown in the figure below are required at the 6PE1 device to enable the 6PE feature.

The customer edge device--CE1 in the figure below--is configured to forward its IPv6 traffic to the 6PE1 device. The P1 device in the core of the network is assumed to be running MPLS, a label distribution protocol, an IPv4 IGP, and Cisco Express Forwarding or distributed Cisco Express Forwarding, and does not require any new configuration to enable the 6PE feature.

 Figure 7: 6PE Configuration Example

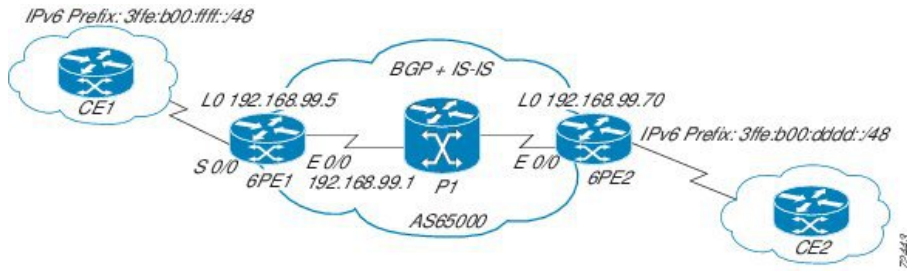**Before you begin**

- The 6PE devices--the 6PE1 and 6PE2 devices in the figure below--must be members of the core IPv4 network. The 6PE device interfaces attached to the core network must be running MPLS, the same label distribution protocol, and the same IPv4 IGP, as in the core network.
- The 6PE devices must also be configured to be dual stack to run both IPv4 and IPv6.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ipv6 unicast-routing**
4. **ipv6 cef**
5. **interface** *type number*
6. **ipv6 address** *ipv6-address / prefix-length | prefix-name sub-bits / prefix-length*

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	ipv6 unicast-routing Example: Device(config)# ipv6 unicast-routing	Enables the forwarding of IPv6 unicast datagrams.
Step 4	ipv6 cef Example:	Enables IPv6 Cisco Express Forwarding.

	Command or Action	Purpose
	Device(config)# ipv6 cef	
Step 5	interface <i>type number</i> Example: Device(config)# interface	Specifies an interface type and number and enters interface configuration mode. <ul style="list-style-type: none"> In the context of this feature, the interface to be configured is the interface communicating with the CE device.
Step 6	ipv6 address <i>ipv6-address / prefix-length prefix-name sub-bits / prefix-length</i> Example: Device(config-if)# ipv6 address 2001:DB8:FFFF::2/64	Configures an IPv6 address based on an IPv6 general prefix and enable IPv6 processing on an interface.

Binding and Advertising the 6PE Label to Advertise Prefixes

Perform this task to enable the binding and advertising of labels when advertising IPv6 prefixes to a specified BGP neighbor.

SUMMARY STEPS

- enable
- configure terminal
- router bgp *as-number*
- no bgp default ipv4-unicast
- neighbor {*ip-address | ipv6-address | peer-group-name*} remote-as *as-number*
- neighbor {*ip-address | ipv6-address | peer-group-name*} update-source *interface-type interface-number*
- address-family ipv6 [unicast]
- neighbor {*ip-address | peer-group-name | ipv6-address*} activate
- neighbor {*ip-address | ipv6-address*} send-label

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.

	Command or Action	Purpose
Step 3	router bgp <i>as-number</i> Example: <pre>Device(config)# router bgp 65000</pre>	Enters router configuration mode for the specified routing process.
Step 4	no bgp default ipv4-unicast Example: <pre>Device(config-router)# no bgp default ipv4-unicast</pre>	Disables the IPv4 unicast address family for the BGP routing process specified in the previous step. Note Routing information for the IPv4 unicast address family is advertised by default for each BGP routing session configured with the neighbor remote-as command unless you configure the no bgp default ipv4-unicast command before configuring the neighbor remote-as command.
Step 5	neighbor { <i>ip-address</i> <i>ipv6-address</i> <i>peer-group-name</i> } remote-as <i>as-number</i> Example: <pre>Device(config-router)# neighbor 192.168.99.70 remote-as 65000</pre>	Adds the IP address of the neighbor in the specified autonomous system to the BGP neighbor table of the local device.
Step 6	neighbor { <i>ip-address</i> <i>ipv6-address</i> <i>peer-group-name</i> } update-source <i>interface-type interface-number</i> Example: <pre>Device(config-router)# neighbor 192.168.99.70 update-source Loopback 0</pre>	Specifies the interface whose IPv4 address is to be used as the source address for the peering. <ul style="list-style-type: none"> In the context of this task, the interface must have an IPv4 address with a 32-bit mask configured. Use of a loopback interface is recommended. This address is used to determine the IPv6 next hop by the peer 6PE.
Step 7	address-family ipv6 [unicast] Example: <pre>Device(config-router)# address-family ipv6</pre>	Specifies the IPv6 address family and enters address family configuration mode. <ul style="list-style-type: none"> The unicast keyword specifies the IPv6 unicast address family. By default, the device is placed in configuration mode for the IPv6 unicast address family if the unicast keyword is not specified with the address-family ipv6 command.
Step 8	neighbor { <i>ip-address</i> <i>peer-group-name</i> } <i>ipv6-address</i> activate Example: <pre>Device(config-router-af)# neighbor 192.168.99.70 activate</pre>	Enables the neighbor to exchange prefixes for the IPv6 address family with the local device.
Step 9	neighbor { <i>ip-address</i> <i>ipv6-address</i> } send-label Example:	Advertises the capability of the device to send MPLS labels with BGP routes.

	Command or Action	Purpose
	<pre>Device(config-router-af)# neighbor 192.168.99.70 send-label</pre>	<ul style="list-style-type: none"> In IPv6 address family configuration mode this command enables binding and advertisement of labels when advertising IPv6 prefixes in BGP.

Configuring IBGP Multipath Load Sharing

Perform this task to configure IBGP multipath load sharing and control the maximum number of parallel IBGP routes that can be installed in a routing table.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **router bgp** *as-number*
4. **address-family ipv6** [**unicast**]
5. **maximum-paths ibgp** *number-of-paths*

DETAILED STEPS

	Command or Action	Purpose
Step 1	<p>enable</p> <p>Example:</p> <pre>Device> enable</pre>	<p>Enables privileged EXEC mode.</p> <ul style="list-style-type: none"> Enter your password if prompted.
Step 2	<p>configure terminal</p> <p>Example:</p> <pre>Device# configure terminal</pre>	<p>Enters global configuration mode.</p>
Step 3	<p>router bgp <i>as-number</i></p> <p>Example:</p> <pre>Device(config)# router bgp 65000</pre>	<p>Enters router configuration mode for the specified routing process.</p>
Step 4	<p>address-family ipv6 [unicast]</p> <p>Example:</p> <pre>Device(config-router)# address-family ipv6</pre>	<p>Specifies the IPv6 address family and enters address family configuration mode.</p> <ul style="list-style-type: none"> The unicast keyword specifies the IPv6 unicast address family. By default, the device is placed in configuration mode for the IPv6 unicast address family if the unicast keyword is not specified with the address-family ipv6 command.
Step 5	<p>maximum-paths ibgp <i>number-of-paths</i></p> <p>Example:</p>	<p>Controls the maximum number of parallel IBGP routes that can be installed in a routing table.</p>

	Command or Action	Purpose
	Device(config-router)# maximum-paths ibgp 3	

Configuration Examples for IPv6 Switching: Provider Edge Router over MPLS

Example: Provider Edge Device

The 6PE device is configured for both IPv4 and IPv6 traffic. Gigabit Ethernet interface 0/0/0 is configured with an IPv4 address and is connected to a device in the core of the network. Integrated IS-IS and TDP configurations on this device are similar to the P1 device.

Device 6PE1 exchanges IPv6 routing information with another 6PE device using internal BGP (IBGP) established over an IPv4 connection so that all the **neighbor** commands use the IPv4 address of the 6PE2 device. All the BGP peers are within autonomous system 65000, so synchronization with IGP is turned off for IPv4. In IPv6 address family configuration mode, synchronization is disabled by default.

IPv6 and Cisco Express Forwarding for IPv6 are enabled, the 6PE2 neighbor is activated, and label binding and advertisement is enabled for IPv6 prefixes using the **neighbor send-label** command. Connected and static IPv6 routes are redistributed using BGP.



Note MPLS is not supported on IPv6.

Example: Core Device

In the following example, the device in the core of the network is running MPLS, IS-IS, and IPv4 only. The Gigabit Ethernet interfaces are configured with IPv4 address and are connected to the 6PE devices. IS-IS is the IGP for this network and the P1 and 6PE devices are in the same IS-IS area 49.0001. Tag Distribution Protocol (TDP) and tag switching are enabled on both the Gigabit Ethernet interfaces. Cisco Express Forwarding is enabled in global configuration mode.

```
ip cef
!
tag-switching tdp router-id Loopback0
!
interface Loopback0
 ip address 192.168.99.200 255.255.255.255
!
interface GigabitEthernet0/0/0
 description to_6PE1
 ip address 192.168.99.2 255.255.255.252
 ip router isis
 tag-switching ip
!
interface GigabitEthernet0/1/0
 description to_6PE2
 ip address 192.168.99.66 255.255.255.252
```

```

ip router isis
tag-switching ip
router isis
passive-interface Loopback0
net 49.0001.1921.6809.9200.00

```

Example: Monitoring 6PE

In the following example, output information about an IPv6 route is displayed using the **show bgp ipv6** command with an IPv6 prefix:

```

Device# show bgp ipv6 2001:DB8:DDDD::/48

BGP routing table entry for 2001:DB8:DDDD::/48, version 15
Paths: (1 available, best #1, table Global-IPv6-Table)
  Not advertised to any peer
  Local
    ::FFFF:192.168.99.70 (metric 20) from 192.168.99.70 (192.168.99.70)
      Origin IGP, localpref 100, valid, internal, best

```

In the following example, output information about a BGP peer including the IPv6 label capability is displayed using the **show bgp ipv6 neighbors** command with an IP address:

```

Device# show bgp ipv6 neighbors 192.168.99.70

BGP neighbor is 192.168.99.70, remote AS 65000, internal link
BGP version 4, remote router ID 192.168.99.70
BGP state = Established, up for 00:05:17
Last read 00:00:09, hold time is 0, keepalive interval is 60 seconds
Neighbor capabilities:
  Route refresh: advertised and received
  Address family IPv6 Unicast: advertised and received
  ipv6 MPLS Label capability: advertised and received
Received 54 messages, 0 notifications, 0 in queue
Sent 55 messages, 1 notifications, 0 in queue
Default minimum time between advertisement runs is 5 seconds

For address family: IPv6 Unicast
BGP table version 21880, neighbor version 21880
Index 1, Offset 0, Mask 0x2
Route refresh request: received 0, sent 0
77 accepted prefixes consume 4928 bytes
Prefix advertised 4303, suppressed 0, withdrawn 1328
Number of NLRI in the update sent: max 1, min 0

```

In the following example, output information linking the MPLS label with prefixes is displayed using the **show mpls forwarding-table** command. If the 6PE feature is configured, the labels are aggregated because there are several prefixes for one local label, and the prefix column contains IPv6 instead of a target prefix.

```

Device# show mpls forwarding-table

Local      Outgoing  Prefix          Bytes Label  Outgoing  Next Hop
Label      Label     or Tunnel Id   Switched     interface
16         Pop Label 1.1.1.1/32     0            Et0/0      10.0.0.1
18         No Label  nh-id(1)       0            Et2/0      10.0.2.2
19         No Label  nh-id(2)       0            Et1/0      10.0.1.2
20         No Label  nh-id(3)       0            Et1/0      10.0.1.2
22         No Label  nh-id(5)       0            Et1/0      10.0.1.2
24         No Label  nh-id(5)       0            Et2/0      10.0.2.2

```

In the following example, output information about the top of the stack label with label switching information is displayed using the **show bgp ipv6** command with the **labels** keyword:

```
Device# show bgp ipv6 labels

Network          Next Hop          In tag/Out tag
2001:DB8:DDDD::/64  ::FFFF:192.168.99.70  notag/20
```

In the following example, output information about labels from the Cisco Express Forwarding table is displayed using the **show ipv6 cef** command with an IPv6 prefix:

```
Device# show ipv6 cef 2001:DB8:DDDD::/64

2001:DB8:DDDD::/64
  nexthop ::FFFF:192.168.99.70
  fast tag rewrite with Se0/0, point2point, tags imposed {19 20}
```

In the following example, output information from the IPv6 routing table is displayed using the **show ipv6 route** command. The output shows the IPv6 MPLS virtual interface as the output interface of IPv6 routes forwarded across the MPLS cloud. This example shows output from the 6PE1 router.

The 6PE2 router has advertised the IPv6 prefix of 2001:DB8:dddd::/48 configured for the CE2 router and the next-hop address is the IPv4-compatible IPv6 address ::ffff:192.168.99.70, where 192.168.99.70 is the IPv4 address of the 6PE2 router.

```
Device# show ipv6 route

IPv6 Routing Table - 10 entries
Codes: C - Connected, L - Local, S - Static, R - RIP, B - BGP
I1 - ISIS L1, I2 - ISIS L2, IA - ISIS interarea
B 2001:DB8:DDDD::/64 [200/0]
  via ::FFFF:192.168.99.70, IPv6-mpls
B 2001:DB8:DDDD::/64 [200/0]
  via ::FFFF:192.168.99.70, IPv6-mpls
L 2001:DB8:FFFF::1/128 [0/0]
  via ::, GigabitEthernet0/0/0
C 2001:DB8:FFFF::/64 [0/0]
  via ::, GigabitEthernet0/0/0
S 2001:DB8:FFFF::/48 [1/0]
  via 2001:DB8:B00:FFFF::2, GigabitEthernet0/0/0
```

Additional References for IPv6 Switching: Provider Edge Router over MPLS

Related Documents

Related Topic	Document Title
IPv6 addressing and connectivity	IPv6 Configuration Guide
Cisco IOS commands	Master Commands List, All Releases
IPv6 commands	IPv6 Command Reference
Cisco IOS IPv6 features	IPv6 Feature Mapping

Standards and RFCs

Standard/RFC	Title
RFCs for IPv6	<i>IPv6 RFCs</i>

Technical Assistance

Description	Link
The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.	http://www.cisco.com/cisco/web/support/index.html

Feature Information for IPv6 Switching: Provider Edge Router over MPLS

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Table 6: Feature Information for IPv6 Switching: Provider Edge Router over MPLS

Feature Name	Releases	Feature Information
IPv6 Switching: Provider Edge Router over MPLS	Cisco IOS XE Amsterdam 17.3.2	The Cisco implementation of IPv6 Provider Edge Router over MPLS enables IPv6 sites to communicate with each other over an MPLS IPv4 core network using MPLS LSPs.

