



# Cisco 4G LTE and Cisco 4G LTE-Advanced Network Interface Module Installation Guide

**First Published:** 2016-12-09

**Last Updated:** 2017-4-5

This document provides an overview of the hardware and installation information for the Cisco 4G LTE and Cisco 4G LTE-Advanced Network Interface Module (NIM) Installation Guide on the Cisco 4000 Series Integrated Services Router (ISR).

This document contains the following sections:

- [Hardware Overview, page 1](#)
- [Ports and LEDs, page 4](#)
- [Supported Antennas and Cables, page 8](#)
- [Recommended Practices for the Cisco 4G LTE NIM and the Cisco 4G LTE-Advanced NIM, page 10](#)
  - [Safety Recommendations, page 10](#)
  - [Preventing Electrostatic Discharge Damage, page 11](#)
  - [General Maintenance Guidelines, page 11](#)
  - [Safety Warnings, page 11](#)
- [Installing the SIM card on the Cisco 4G LTE NIM, page 13](#)
- [Installing the SIM card on the Cisco 4G LTE-Advanced NIM, page 15](#)
- [Installing the NIM into a Cisco 4000 Series ISR, page 17](#)
- [Removing the NIM from a Cisco 4000 Series ISR, page 18](#)
- [Related Documents, page 18](#)

## Hardware Overview

Cisco 4G LTE NIM and Cisco 4G LTE-Advanced NIM expands existing 4G LTE coverage with new Frequency Division Duplexing (FDD) and Time Division Duplexing (TDD) frequency bands.

[Table 1](#) describes the SKUs for the Cisco 4G LTE NIM and the Cisco 4G LTE-Advanced NIM.

**Table 1 Cisco 4G LTE NIM and Cisco 4G LTE-Advanced NIM SKUs**

Cisco 4G LTE NIM and Cisco 4G LTE-Advanced NIM SKUs	Description	Mode	Operating Region	Band
NIM-4G-LTE-LA	<p>Cisco 4G LTE NIM module (LTE 2.5) for LATAM/APAC carriers.</p> <p>This SKU is based on Sierra Wireless MC7430 modem.</p>	<ul style="list-style-type: none"> <li>■ LTE: FDD</li> <li>■ LTE: TDD</li> <li>■ DC-HSPA+, HSPA+, HSPA, UMTS</li> <li>■ TD-SCDMA</li> </ul>	Latin America, Asia-Pacific	<p>LTE bands 1, 3, 5, 7, 8, 18, 19, 21, 28, 38, 39, 40, and 41</p> <p>FDD LTE 700 MHz (band 28), 850 MHz (band 5 CLR), 850 MHz (bands 18 and 19 Low), 900 MHz (band 8), 1500 MHz (band 21), 1800 MHz (band 3), 2100 MHz (band 1), or 2600 MHz (band 7)</p> <p>TDD LTE 1900 MHz (band 39), 2300 MHz (band 40), 2500 MHz (band 41), or 2600 MHz (band 38)</p>
NIM-LTEA-LA	<p>Cisco 4G LTE-Advanced NIM module (LTE3.0) for LATAM/APAC carriers.</p> <p>This SKU is based on Sierra Wireless EM7430 modem.</p>	<ul style="list-style-type: none"> <li>■ LTE: FDD</li> <li>■ LTE: TDD</li> <li>■ DC-HSPA+,HSPA+, HSPA,UMTS</li> </ul>	Latin America, Asia-Pacific	<p>LTE bands 1, 3, 5, 7, 8, 18, 19, 21, 28, 38, 39, 40, and 41</p> <p>FDD LTE 700 MHz (band 28), 850 MHz (band 5 CLR), 850 MHz (bands 18 and 19 Low), 900 MHz (band 8), 1500 MHz (band 21), 1800 MHz (band 3), 2100 MHz (band 1), or 2600 MHz (band 7)</p> <p>TDD LTE 1900 MHz (band 39), 2300 MHz (band 40), 2500 MHz (band 41), or 2600 MHz (band 38)</p> <p>Carrier aggregation band combinations:</p> <p>1+(8,18,19,21); 3+(5,7,19,28); 7+(5,7,28); 19+21, 38+38, 39+39,40+40, and 41+41</p>

**Table 1 Cisco 4G LTE NIM and Cisco 4G LTE-Advanced NIM SKUs (continued)**

Cisco 4G LTE NIM and Cisco 4G LTE-Advanced NIM SKUs	Description	Mode	Operating Region	Band
NIM-LTEA-EA	<p>Cisco 4G LTE-Advanced NIM module (LTE3.0) for EU/NA carriers.</p> <p>This SKU is based on Sierra Wireless EM7455 modem.</p>	<ul style="list-style-type: none"> <li>■ LTE: FDD</li> <li>■ LTE: TDD</li> <li>■ DC-HSPA+,HSPA+, HSPA,UMTS</li> </ul>	European Union, North America	<p>LTE bands 1-5, 7, 12, 13, 20, 25, 26, 29, 30, and 41</p> <p>FDD LTE 700 MHz (band 12), 700 MHz (band 29), 800 MHz (band 20), 850 MHz (band 5 CLR), 850 MHz (band 26 Low), 900 MHz (band 8), 1800 MHz (band 3), 1900 MHz (band 2), 1900 MHz (PCS band 25), 1700 MHz and 2100 MHz (band 4 AWS), 2100 MHz (band 1), 2300 MHz (band 30), or 2600 MHz (band 7)</p> <p>TDD LTE 2500 MHz (band 41)</p> <p>Carrier aggregation band combinations:</p> <p>1+8; 2+(2,5,12,13,29); 3+(7,20); 4+(4,5,12,13,29); 7+(7,20); 12+30, 5+30, and 41+41</p>

Table 2 describes carrier aggregation combinations.


**Table 2 Carrier Aggregation Combinations**

1 + 8/18/19/21
3 + 5/7/19/28
5 + 3/7
7 + 3/5/7/28
8 + 1
18 + 1
19 + 1/3/21
21 + 1/19
28 + 3/7
38 + 38
39 + 39
40 + 40
41 + 41

## Ports and LEDs

Figure 1 shows the Cisco 4G LTE NIM front panel.

Figure 1 Front Panel of the Cisco 4G LTE NIM

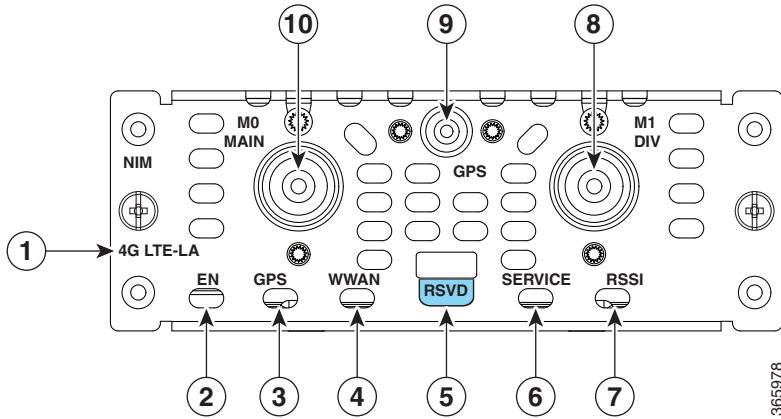

1	PID Name	2	LED-EN
3	LED-GPS (Global Positioning System)	4	LED-WWAN
5	RSVD (reserved) port, USB 2.0 mini type B	6	LED-SERVICE
7	LED-RSSI (Received Signal Strength Indicator)	8	M1 DIV-Diversity Antenna Connector Threaded Neill-Concelman (TNC), with dust cap removed.
9	GPS-Global Positioning System Antenna Connector (SubMiniature version A), with knurled metal cap removed.	10	M0 MAIN-Main Antenna Connector Threaded Neill-Concelman (TNC), with dust cap removed.

Table 3 lists the Cisco 4G LTE NIM ports and LED indicators and describes their behavior. The LEDs provide a visual indication of the NIM status and the currently selected services.

**Note:** You should remove the caps before attaching the antennas.

Table 3 Cisco 4G LTE NIM Ports and LED Indicators


Ports, Connectors, and LEDs	Description
RSVD (Port)	The reserved (RSVD) diagnostic port is not required for normal activation or operation. This port supports modem debug or provisioning.
EN (LED)	<p>The Enable (EN) LED is standard on NIMs and indicates the module state.</p> <p><b>Solid green</b>—Indicates powered on status and functioning normally.</p> <p><b>Solid amber</b>—Indicates module has some type of failure.</p> <p><b>Off</b>—Indicates module does not have power. It may also remain off the first time when the NIM is powered on, until it is configured by the host software.</p>

**Table 3 Cisco 4G LTE NIM Ports and LED Indicators (continued)**

Ports, Connectors, and LEDs	Description
WWAN (LED)	<p>Indicates the modem status.</p> <p><b>Solid green</b>—Indicates the modem is powered, associated, and authenticated but not receiving or transmitting data.</p> <p><b>Slow blinking green</b>—Indicates the modem is powered, but not associated or authenticated; still searching for service. Check the antenna, cable, SIM card, or the user account with your service provider.</p> <p><b>Fast blinking green</b>—Indicates the modem is powered and is transmitting or receiving. The blink rate is proportional to the transmitted and received data rate.</p> <p><b>Solid Amber</b>—Indicates the modem is reserved for future use.</p> <p><b>Off</b>—Indicates the modem is in reset mode.</p>
RSSI (LED)	<p>Indicates the level of signal strength received by the NIM.</p> <p><b>Solid green</b>—Indicates a high RSSI (greater than -69 dBm).</p> <p><b>Solid blue</b>—Indicates medium RSSI (-89 to -69dBm).</p> <p><b>Solid amber</b>—Indicates low RSSI (-99 to -89dBm).</p> <p><b>Amber blink</b>—Indicates RSSI is below -100dBm.</p> <p><b>Off</b>—Indicates no service detected.</p>
SERVICE (LED)	<p>Indicates which cellular service is available.</p> <p><b>Solid green</b>—Indicates 4G service is enabled (LTE).</p> <p><b>Solid blue</b>—Indicates 3G service is enabled, e.g. EDVO, HSPA+.</p> <p><b>Solid amber</b>—Indicates 2G service is enabled, e.g. 1xRTT, EDGE.</p> <p><b>Off</b>—Indicates no service detected.</p>
GPS (LED)	<p>Indicates whether GPS service is enabled.</p> <p><b>Solid green</b>—Indicates GPS service is enabled.</p> <p><b>Off</b>—Indicates the GPS is not active or not detected.</p>
M1 DIV (Port)	Diversity Antenna Connector (TNC), with dust caps removed.
GPS (Port)	GPS Antenna Connector (SMA), with knurled metal cap.
M0 MAIN (Port)	Main Antenna Connector (TNC), with dust caps removed.

Figure 2 shows the Cisco 4G LTE-Advanced NIM front panel.

Figure 2 Front Panel of the Cisco 4G LTE-Advanced NIM

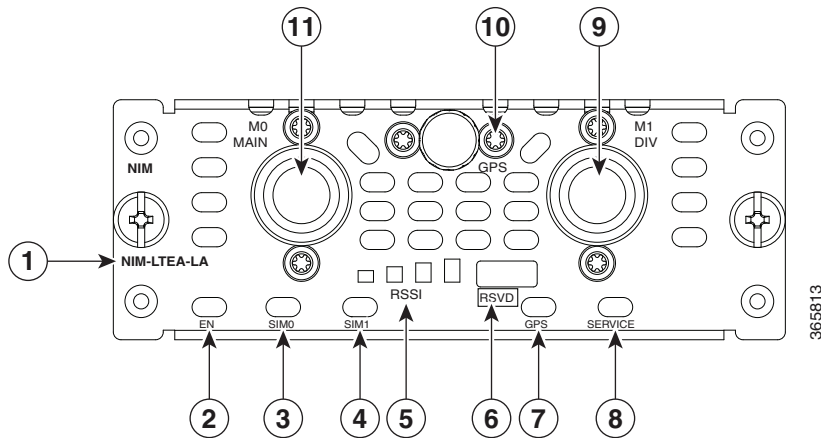

1	PID Name	2	LED-EN
3	LED-SIM0	4	LED-SIM1
5	LED-RSSI	6	RSVD (reserved) port, USB 2.0 mini type B
7	LED-GPS	8	LED-SERVICE
9	M1 DIV-Diversity Antenna Connector (TNC), with dust cap removed.	10	GPS-GPS Antenna Connector (SMA), with knurled metal cap removed.
11	M0 MAIN-Main Antenna Connector (TNC), with dust cap removed.		

Table 4 lists the Cisco 4G LTE-Advanced NIM ports and LED indicators and describes their behavior. The LEDs provide a visual indication of the NIM status and the currently selected services.

**Note:** You should remove the caps before attaching the antennas.

Table 4 Cisco 4G LTE-Advanced NIM Ports and LED Indicators

Ports, Connectors, and LEDs	Description
RSVD (Port)	The reserved (RSVD) diagnostic port is not required for normal activation or operation. This port supports modem debug or provisioning.
EN (LED)	<p>The Enable (EN) LED is standard on NIMs and indicates the module state, as shown in Figure 2.</p> <p><b>Solid green</b>—Indicates powered on status and functioning normally.</p> <p><b>Solid amber</b>—Indicates module has some type of failure.</p> <p><b>Off</b>—Indicates module does not have power. It may also remain off the first time when the NIM is powered on, until it is configured by the host software.</p>

**Table 4 Cisco 4G LTE-Advanced NIM Ports and LED Indicators (continued)**

Ports, Connectors, and LEDs	Description
SIM0 and SIM1 (LED)	<p>Indicates the modem status.</p> <p>Green when SIM card is active, amber when SIM card is standby, OFF when SIM card is absent. In addition to the green color, the blink pattern of the SIM0 and SIM1 LED indicates the modem status:</p> <p><b>Solid green</b>—Indicates the modem is powered, associated, and authenticated but not receiving or transmitting data.</p> <p><b>Slow blinking green</b> (On 5sec, Off 200ms)—Indicates the modem is powered, but not associated or authenticated; still searching for service. Check the antenna, cable, SIM card, or the user account with your service provider.</p> <p><b>Fast blinking green</b> (On 400ms, Off 100ms)—Indicates the modem is powered and is transmitting or receiving.</p> <p><b>Green blinking</b> (On 500ms, Off 500ms)—Indicates the modem is in low power mode. Modem radio is Off.</p> <p><b>Green very slow blinking</b> (On 500ms, Off 500ms, On 500ms, off 500ms, off 30ms)—Indicates the modem is receiving power, associated, and authenticated on a roaming network.</p> <p><b>Off</b>—Indicates the modem is in reset mode.</p>
RSSI (LED)	<p>Indicates the received signal strength driven by the software.</p> <p><b>One solid green LED</b>—Indicates RSSI is under -100dBm.</p> <p><b>Two solid green LEDs</b>—Indicates low RSSI (-99 to -89dBm).</p> <p><b>Three solid green LEDs</b>—Indicates medium RSSI (-89 to -69dBm).</p> <p><b>Four solid green LEDs</b> —Indicates high RSSI (greater than -69dBm).</p> <p><b>Off</b>—Indicates no service detected.</p>
SERVICE (LED)	<p>Indicates which cellular service is available.</p> <p><b>Solid green</b>—Indicates 4G service is enabled (LTE).</p> <p><b>Solid blue</b>—Indicates 3G service is enabled, e.g. EDVO, HSPA+.</p> <p><b>Solid amber</b>—Indicates 2G service is enabled, e.g. 1xRTT, EDGE.</p> <p><b>Off</b>—Indicates no service detected.</p>
GPS (LED)	<p>Indicates whether GPS service is enabled.</p> <p><b>Solid green</b>—Indicates GPS service is enabled.</p> <p><b>Off</b>—Indicates the GPS is not active or not detected.</p>
M1 DIV (Port)	Diversity Antenna Connector (TNC), with dust caps removed.
GPS (Port)	GPS Antenna Connector (SMA), with knurled metal cap.
M0 MAIN (Port)	Main Antenna Connector (TNC), with dust caps removed.

## Supported Antennas and Cables

Table 5 lists the Cisco antennas that are supported for use on the Cisco 4G LTE NIM and Cisco 4G LTE-Advanced NIM:

**Table 5 Supported Antennas**

Cisco Part Number	Description	Maximum Gain and Frequency Ranges	Notes
4G-LTE-ANTM-D	Indoor 4G dipole omnidirectional	2 dBi <ul style="list-style-type: none"> <li>■ 698-806 MHz</li> <li>■ 824-894 MHz</li> <li>■ 925-960 MHz</li> <li>■ 1710-1885 MHz</li> <li>■ 1920-1980 MHz</li> <li>■ 2110-2170 MHz</li> <li>■ 2500-2690 MHz</li> </ul>	Multiband dipole antenna. For more information, see <a href="#">Cisco 4G/3G Omnidirectional Dipole Antenna (4G-LTE-ANTM-D)</a> .
4G-ANTM-OM-CM	Indoor ceiling-mount omni-directional	698 MHz-2690 MHz	Multiband omnidirectional ceiling-mount antenna. For more information, see <a href="#">Cisco 4G Indoor Ceiling-Mount Omnidirectional Antenna (4G-ANTM-OM-CM)</a> .
ANT-4G-OMNI-OUT-N	Multiband outdoor omnidirectional stick antenna	1.5 dBi <ul style="list-style-type: none"> <li>■ 698-960 MHz</li> </ul> 3.5 dBi <ul style="list-style-type: none"> <li>■ 1710-2710 MHz</li> <li>■ 2300-2700 MHz</li> </ul>	Multiband outdoor omnidirectional stick antenna. For more information, see <a href="#">Cisco Outdoor Omnidirectional Antenna for 2G/3G/4G Cellular (ANT-4G-OMNI-OUT-N)</a> .
ANT-4G-SR-OUT-TNC	Multiband outdoor omnidirectional saucer antenna	1.5 dBi (peak gain with 10-foot cable) or 0.8 dBi (peak gain with 15-foot cable) <ul style="list-style-type: none"> <li>■ 698-960 MHz</li> </ul> 3.7 dBi (peak gain with 10-foot cable) or 0.2 dBi (peak gain with 15-foot cable) <ul style="list-style-type: none"> <li>■ 1710-2700 MHz</li> </ul>	Low-profile outdoor saucer antenna. For more information, see <a href="#">Cisco Integrated 4G Low-Profile Outdoor Saucer Antenna (ANT-4G-SR-OUT-TNC)</a> .
4G-AE010-R	Extension base with integral 10-foot cable	0.7-6.0 GHz	This is the default antenna extension base. For more information, see <a href="#">Cisco Single-Port Antenna Stand for Multiband TNC Male-Terminated Portable Antenna (Cisco 4G-AE015-R, Cisco 4G-AE010-R)</a> .



**Table 5 Supported Antennas (continued)**

Cisco Part Number	Description	Maximum Gain and Frequency Ranges	Notes
4G-AE015-R	Extension base with integral 15-foot cable	0.7-6.0 GHz	Single-port antenna extension base with 15-foot cable. For more information, see <a href="#">Cisco Single-Port Antenna Stand for Multiband TNC Male-Terminated Portable Antenna (Cisco 4G-AE015-R, Cisco 4G-AE010-R)</a> .
4G-ACC-OUT-LA	Lightning Arrestor	800-2200 MHz	4G lightning arrestor kit for use on Cisco 4G wireless devices. For more information, see <a href="#">Cisco 4G Lightning Arrestor (4G-ACC-OUT-LA)</a> .
CGR-LA-NF-NF	Lightning Arrestor	800-2200 MHz	4G lightning arrestor kit for use on Cisco 4G wireless devices. For more information, see <a href="#">Lightning Arrestor for the Cisco 1240 Connected Grid Router</a> .

**Table 6** lists loss information and operating frequency levels for the ultra-low-loss (ULL) LMR 200 cables and LMR 400 cables available from Cisco for use with the Cisco 4G LTE NIM and the Cisco 4G LTE-Advanced NIM.

**Table 6 Cisco Extension Cables for Use with the Cisco 4G LTE NIM and the Cisco 4G LTE-Advanced NIM**

Cisco Product Number	Cable Length	Maximum Insertion Loss	Frequency (MHz)	Color	Plenum Rated? <sup>1</sup>
4G-CAB-ULL-20	20 ft (6 m)	1.8 dB	700-2600 MHz	Black	Yes
4G-CAB-ULL-50	50 ft (15 m)	4.2 dB	700-2600 MHz	Black	Yes
4G-CAB-LMR240-25	25 ft (7.5 m)	2.1 dB @ 700 MHz 4.0 dB @ 2.6 GHz	800-1000 MHz 1700-2600 MHz	Black	Yes
4G-CAB-LMR240-25N	25 ft (7.5 m)	2.1 dB @ 700 MHz 4.0 dB @ 2.6 GHz	700-1000 MHz 1700-2600 MHz	Black	No
4G-CAB-LMR240-50	50 ft (15 m)	4.1 dB @ 700 MHz 7.4 dB @ 2.6 GHz	800-1000 MHz 1700-2600 MHz	Black	Yes
4G-CAB-LMR240-75	75 ft (23 m)	6.1 dB @ 700 MHz 11.0 dB @ 2.6 GHz	800-1000 MHz 1700-2600 MHz	Black	Yes
CAB-L400-20-TNC-N	20 ft (6 m)	1.75 dB	700-2600 MHz	Black	No
CAB-L400-50-TNC-N	50 ft (15 m)	4.0 dB	700-2600 MHz	Black	No
CAB-L400-20-N-N	20 ft (6 m)	2.75 dB	700-2600 MHz	Black	No
4G-AE010-R	10 ft (3 m)	1.4 dB @ 700 MHz 2.0 dB @ 1.9 GHz 2.1 dB @ 2.1 GHz 2.3 dB @ 2.5 GHz 2.4 dB @ 2.7 GHz	700-2600 MHz	Black	No
4G-AE015-R	15 ft (4.6 m)	2.3 dB @ 700 MHz 3.3 dB @ 1.9 GHz 3.7 dB @ 2.1 GHz 4.0 dB @ 2.5 GHz	700-2600 MHz	Black	No

1. Cable can be routed within building plenum spaces.

## Recommended Practices for the Cisco 4G LTE NIM and the Cisco 4G LTE-Advanced NIM

This section describes recommended practices for safe and effective installation of the hardware described in this document.

- Safety Recommendations
- Preventing Electrostatic Discharge Damage
- General Maintenance Guidelines
- Safety Warnings

Safety warnings included in this section apply to the Cisco 4G LTE NIM and the Cisco 4G LTE-Advanced NIM that is used on the Cisco 4000 series ISRs.

### Safety Recommendations

To prevent hazardous conditions, follow these safety recommendations while working with this equipment:

- Keep tools away from walk areas where you or others could trip over the tools.
- Do not wear loose clothing while working around the router. Fasten your tie or scarf and roll up your sleeves to prevent clothing from being caught in the chassis.
- Wear safety glasses when working under any conditions that might be hazardous to your eyes.
- Locate the emergency power-off switch in the room before you start working. If an electrical accident occurs, turn the power off.
- Before working on the router, turn off the power and unplug the power cord.
- Disconnect all power sources before doing the following:
  - Installing or removing a router chassis
  - Working near power supplies
- Do not work alone if potentially hazardous conditions exist.
- Always check that the power is disconnected from a circuit.
- Remove possible hazards from your work area, such as damp floors, ungrounded power extension cables, or missing safety grounds.
- If an electrical accident occurs, proceed as follows:
  - Use caution; do not become a victim yourself.
  - Using the emergency power-off switch, turn off the power to the room.
  - Determine the condition of any victims and send another person to get medical aid or call for help.
  - Determine whether the person needs rescue breathing or external cardiac compressions; then take appropriate action.

## Preventing Electrostatic Discharge Damage

Electrostatic discharge can damage equipment and electrical circuitry. Electrostatic discharge occurs when electronic printed circuit cards, such as those used in Cisco network modules, are improperly handled and can result in complete or intermittent equipment failure. Always observe the following electrostatic discharge damage (ESD) prevention procedures when installing, removing, or replacing any electronic printed circuit cards:

- Make sure that the router chassis is electrically connected to earth ground.
- Wear an ESD-preventive wrist strap and make sure that it makes good contact with your skin.
- Connect the wrist strap clip to an unpainted portion of the chassis frame to channel unwanted ESD voltages to ground.

**Caution:** The wrist strap and clip must be used correctly to ensure proper ESD protection. Periodically confirm that the resistance value of the ESD-preventive wrist strap is between 1 and 10 megohms (Mohm).

- If no wrist strap is available, ground yourself by touching the metal part of the router chassis.

## General Maintenance Guidelines

The following maintenance guidelines apply to the Cisco Network Interface Module for the Cisco 4G LTE NIM and the Cisco 4G LTE-Advanced NIM:

- Keep the router chassis area clear and dust-free during and after installation.
- If you remove the chassis cover for any reason, store it in a safe place.
- Do not perform any action that creates a hazard to people or makes equipment unsafe.
- Keep walk areas clear to prevent falls or damage to equipment.
- Follow installation and maintenance procedures as documented by Cisco Systems, Inc.

## Safety Warnings

The following safety warning statements apply to all hardware procedures involving the Cisco 4G LTE NIM and the Cisco 4G LTE-Advanced NIM for Cisco 4000 series ISRs. Translations of these warnings are available in the *Cisco Network Modules and Interface Cards Regulatory Compliance and Safety Information* document, which ships with all individual NIM orders, and is also available on <http://www.cisco.com/c/en/us/td/docs/routers/access/interfaces/rcsi/IOHrcsi.html>.

### **Warning: IMPORTANT SAFETY INSTRUCTIONS**

**This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Use the statement number provided at the end of each warning to locate its translation in the translated safety warnings that accompanied this device. Statement 1071**

### **SAVE THESE INSTRUCTIONS**

**Warning:** Before working on equipment that is connected to power lines, remove jewelry (including rings, necklaces, and watches). Metal objects will heat up when connected to power and ground and can cause serious burns or weld the metal object to the terminals. Statement 43

**Warning:** Do not work on the system or connect or disconnect cables during periods of lightning activity. Statement 1001

**Warning:** To avoid electric shock, do not connect safety extra-low voltage (SELV) circuits to telephone-network voltage (TNV) circuits. LAN ports contain SELV circuits, and WAN ports contain TNV circuits. Both LAN and WAN ports may use RJ-45 connectors. Use caution when connecting cables. Statement 1021

**Warning:** Hazardous network voltages are present in WAN ports regardless of whether power to the router is OFF or ON. To avoid electric shock, use caution when working near WAN ports. When detaching cables, detach the end away from the router first. Statement 1026

**Warning:** Read the installation instructions before connecting the system to the power source. Statement 1004

**Warning:** This unit might have more than one power supply connection. All connections must be removed to de-energize the unit. Statement 1028

**Warning:** Only trained and qualified personnel should be allowed to install, replace, or service this equipment. Statement 1030

**Warning:** Do not use this product near water; for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool. Statement 1035

**Warning:** Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations. Statement 1036

**Warning:** Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface. Statement 1037

**Warning:** Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning. Statement 1038

**Warning:** To report a gas leak, do not use a telephone in the vicinity of the leak. Statement 1039

**Warning:** Ultimate disposal of this product should be handled according to all national laws and regulations. Statement 1040

**Warning:** Before opening the chassis, disconnect the telephone-network cables to avoid contact with telephone-network voltages. Statement 1041

**Warning:** The telecommunications lines must be disconnected 1) before unplugging the main power connector and/or 2) while the housing is open. Statement 1043

**Warning:** When installing or replacing the unit, the ground connection must always be made first and disconnected last. Statement 1046

**Warning:** Do not locate the antenna near overhead power lines or other electric light or power circuits, or where it can come into contact with such circuits. When installing the antenna, take extreme care not to come into contact with such circuits, because they may cause serious injury or death. For proper installation and grounding of the antenna, please refer to national and local codes (for example, U.S.:NFPA 70, National Electrical Code, Article 810, Canada: Canadian Electrical Code, Section 54). Statement 1052


**Warning:** No user-serviceable parts inside. To avoid risk of electric shock, do not open. Statement 1073

**Warning:** Installation of the equipment must comply with local and national electrical codes. Statement 1074

## Installing the SIM card on the Cisco 4G LTE NIM

The SIM card socket is located on the bottom side of the NIM. [Figure 3](#) shows the silk-screen of the Cisco 4G LTE NIM.

**Figure 3 Silkscreen of the Cisco 4G LTE NIM**

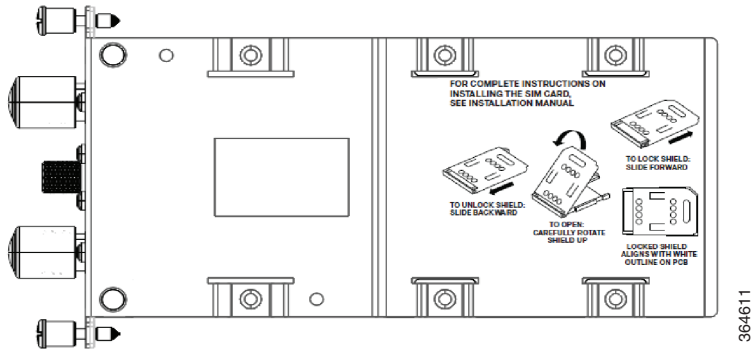


Follow these steps to install the SIM card:

1. To unlock the SIM socket cover, slide the cover toward the faceplate in the direction of the unlock arrow, as shown in [Figure 4](#).


**Note:** The SIM cover unlocks and locks with a tactile ‘click’.

**Figure 4 Unlocking the SIM Socket Cover on the Cisco 4G LTE NIM**

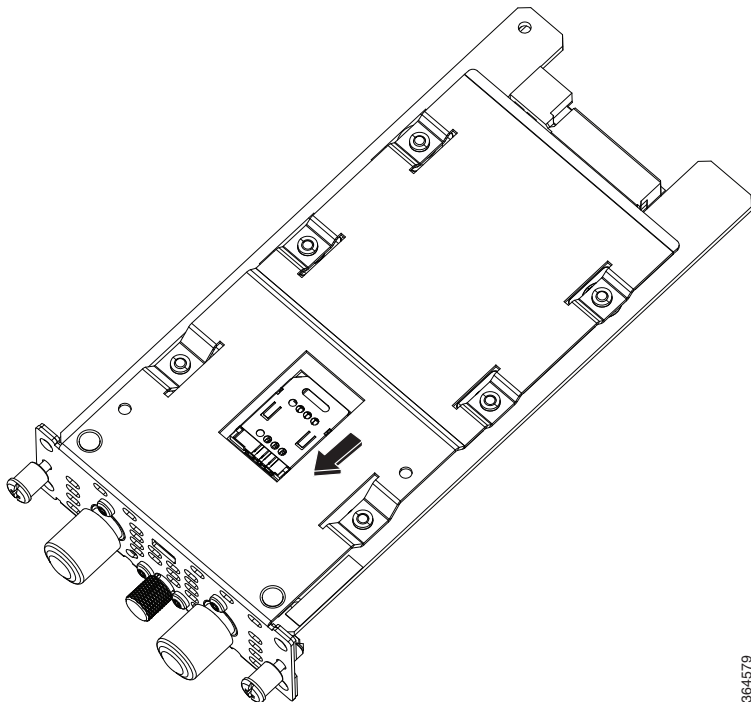

2. Gently lift the cover on its hinges, and place the SIM card down on the metallic contacts, as shown in [Figure 5](#).


**Figure 5** Opening the SIM Cover, and Placing the SIM Card on the Contacts on the Cisco 4G LTE NIM

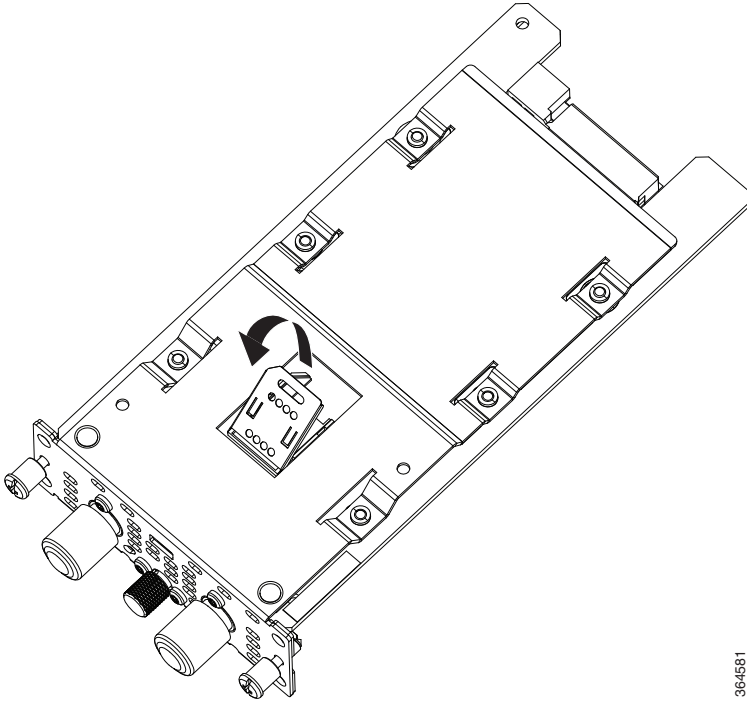

364581

3. Gently push down the cover to close.
4. To the cover, slide it away from the faceplate in the direction of the lock arrow, as shown in [Figure 6](#).

**Figure 6** Locking the SIM Socket Cover on the Cisco 4G LTE NIM

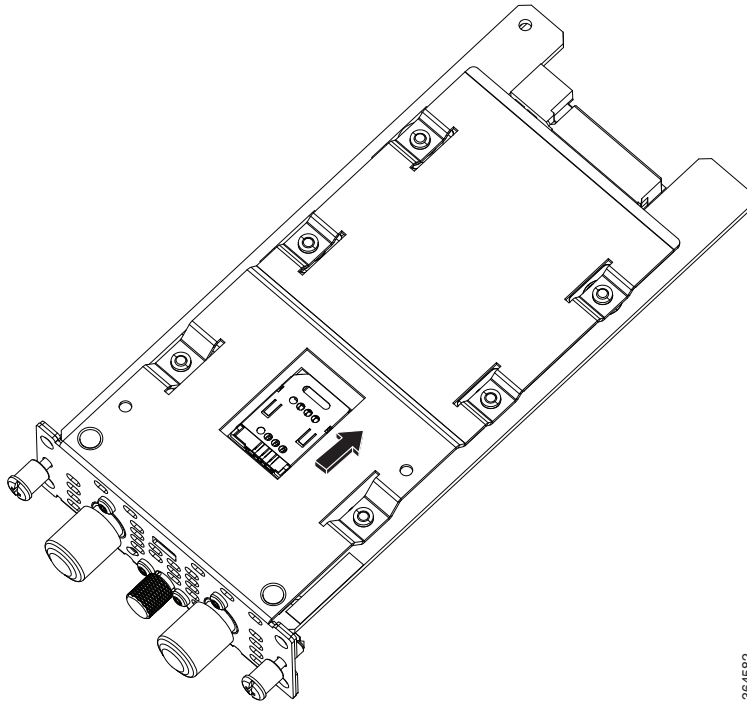


364582

## Installing the SIM card on the Cisco 4G LTE-Advanced NIM

The SIM card socket is located on the bottom side of the NIM. [Figure 3](#) shows the silk-screen of the Cisco 4G LTE-Advanced NIM.

**Figure 7 Silkscreen of the Cisco 4G LTE-Advanced NIM**

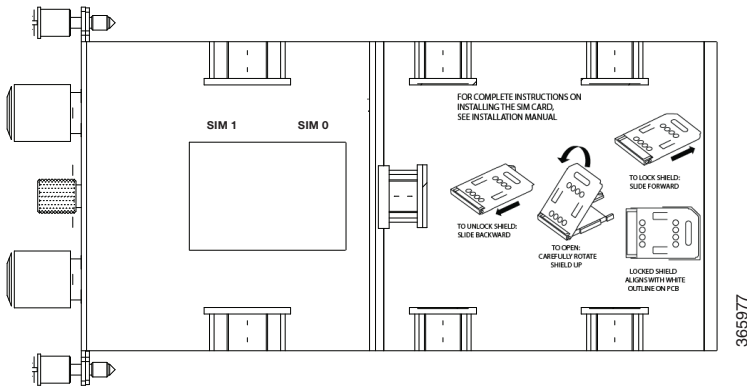


Follow these steps to install the SIM card:

1. To unlock the SIM socket cover, slide the cover toward the faceplate in the direction of the unlock arrow, as shown in [Figure 4](#).


**Note:** The SIM cover unlocks and locks with a tactile 'click'.

**Figure 8 Unlocking the SIM Socket Cover on the Cisco 4G LTE-Advanced NIM**

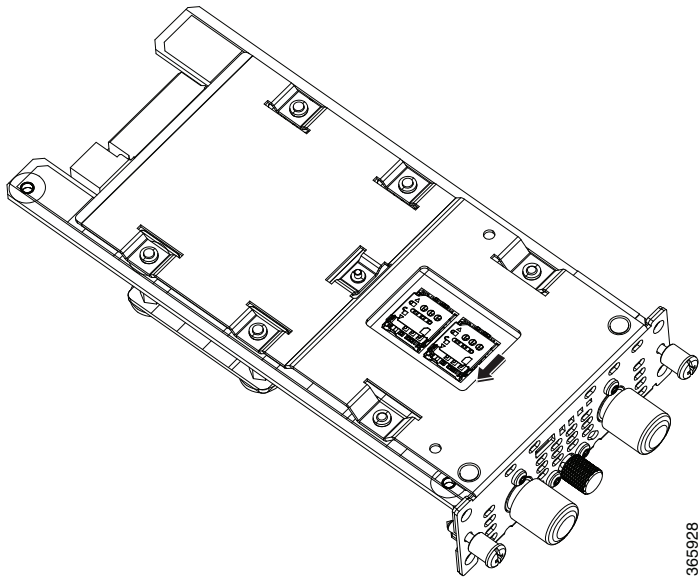


2. Gently lift the cover on its hinges, and place the SIM card down on the metallic contacts, as shown in [Figure 5](#).

**Figure 9** Opening the SIM Cover, and Placing the SIM Card on the Contacts on the Cisco 4G LTE-Advanced NIM

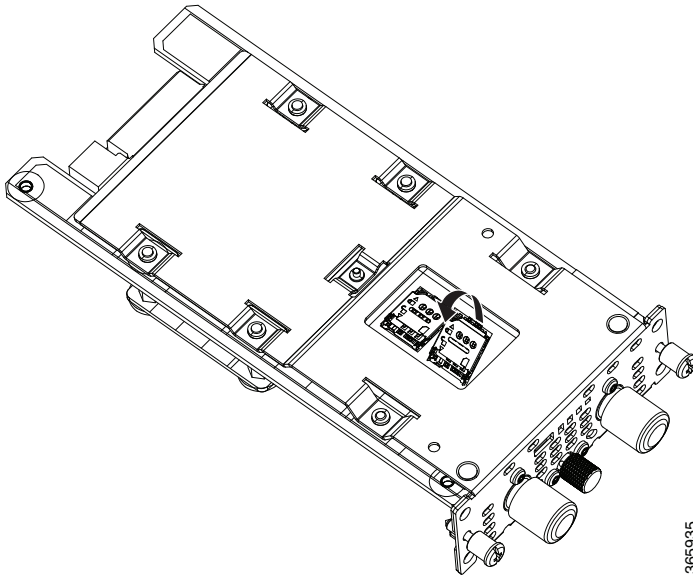

3. Gently push down the cover to close.
4. To lock the cover, slide it away from the faceplate in the direction of the lock arrow, as shown in [Figure 6](#).

**Figure 10** Locking the SIM Socket Cover on the Cisco 4G LTE-Advanced NIM

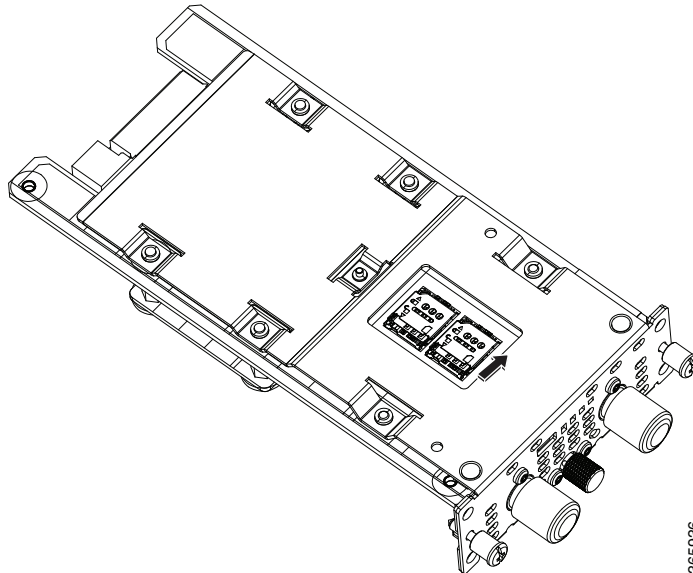




## Installing the NIM into a Cisco 4000 Series ISR

To install the NIM into a Cisco 4000 series ISR, see the following [Figure 11](#) and the procedure that follows:

**Figure 11** Installing the NIM into a Cisco 4000 Series ISR

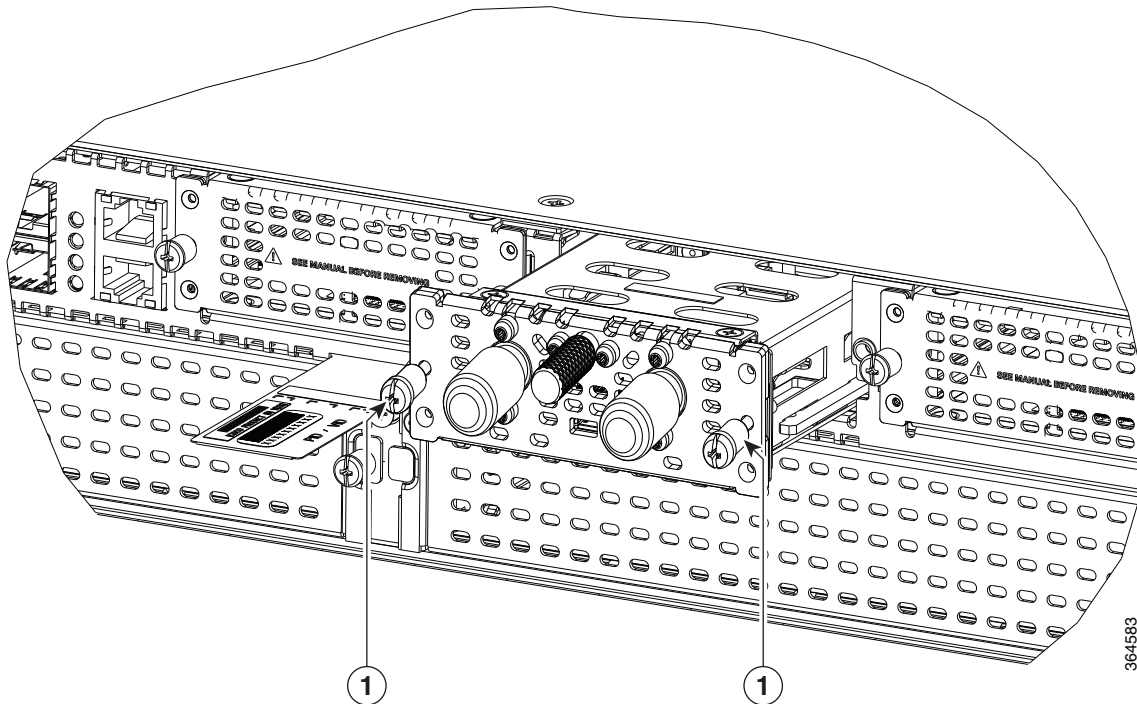

- 1 Captive screws holding the NIM to the router

### Before You Begin

Make sure that you connect the wrist-strap clip to an unpainted portion of the chassis frame to channel unwanted ESD voltages to ground.

### Procedure

Use the following procedure to install the NIM on your router:

1. Read the “[Safety Warnings](#)” section before you perform any module replacement.
2. Remove the blank faceplate installed over the NIM slot of the ISR.
3. Insert the NIM into the router. (See [Figure 11](#)).
4. Tighten the captive mounting screws on the module faceplate with the help of a number 1 Phillips or flat-blade screwdriver.
5. Check the LEDs and confirm proper operation.

## Removing the NIM from a Cisco 4000 Series ISR

### Procedure

Use the following procedure to remove the NIM from your router:

1. Read the “Safety Warnings” section before you perform any module replacement.
2. Locate the NIM card to be removed.
3. Unscrew the captive mounting screws on the module faceplate with the help of a number 1 Phillips or flat-blade screwdriver.
4. Pull the NIM out of the chassis.
5. Place the NIM card in an antistatic bag to protect it from electrostatic discharge (ESD) damage.

## Related Documents

Related Topic	Document Title
Cisco 4G LTE-Advanced NIM on the Cisco 4000 Series ISR	<a href="#">Cisco Fourth Generation LTE Network Interface Module Software Configuration Guide</a>
Hardware installation instructions for service modules	<a href="#">Hardware Installation Guide for the Cisco 4000 Series Integrated Services Router</a>
General information about configuration and the command reference.	<a href="#">Software Configuration Guide for the Cisco 4000 Series Integrated Services Router</a>
Regulatory compliance information for the Cisco 4000 Series ISR.	<a href="#">Regulatory Compliance and Safety Information for the Cisco 4000 Series Integrated Services Router</a>

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: [www.cisco.com/go/trademarks](http://www.cisco.com/go/trademarks). Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

© 2016–2017 Cisco Systems, Inc. All rights reserved.