



## **Cisco Nexus 9000 Series NX-OS Programmability Guide, Release 7.x**

**First Published:** 2015-01-31

**Last Modified:** 2023-09-11

### **Americas Headquarters**

Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA  
<http://www.cisco.com>  
Tel: 408 526-4000  
800 553-NETS (6387)  
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.

Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at [www.cisco.com/go/offices](http://www.cisco.com/go/offices).

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2015–2020 Cisco Systems, Inc. All rights reserved.



## CONTENTS

---

### PREFACE

<b>Preface</b>	<b>xv</b>
Audience	<b>xv</b>
Document Conventions	<b>xv</b>
Related Documentation for Cisco Nexus 9000 Series Switches	<b>xvi</b>
Documentation Feedback	<b>xvi</b>
Communications, Services, and Additional Information	<b>xvi</b>

---

### CHAPTER 1

<b>New and Changed Information</b>	<b>1</b>
New and Changed Information	<b>1</b>

---

### CHAPTER 2

<b>Overview</b>	<b>7</b>
Programmability Overview	<b>7</b>
Supported Platforms	<b>8</b>
Standard Network Manageability Features	<b>8</b>
Advanced Automation Feature	<b>8</b>
Programmability Support	<b>8</b>
NX-API Support	<b>8</b>
Python Scripting	<b>9</b>
Tel Scripting	<b>9</b>
Broadcom Shell	<b>9</b>
Bash	<b>9</b>
Bash Shell Access and Linux Container Support	<b>9</b>
Guest Shell	<b>9</b>
Container Tracker Support	<b>9</b>

---

### PART I

<b>Shells and Scripting</b>	<b>11</b>
-----------------------------	-----------

---

**CHAPTER 3****Bash 13**

- About Bash 13
- Guidelines and Limitations 13
- Accessing Bash 14
- Escalate Privileges to Root 15
- Examples of Bash Commands 16
  - Displaying System Statistics 16
  - Running Bash from CLI 17
- Managing Feature RPMs 17
  - RPM Installation Prerequisites 17
  - Installing Feature RPMs from Bash 18
  - Upgrading Feature RPMs 19
  - Downgrading a Feature RPM 19
  - Erasing a Feature RPM 20
- Managing Patch RPMs 20
  - RPM Installation Prerequisites 20
  - Adding Patch RPMs from Bash 21
  - Activating a Patch RPM 22
  - Committing a Patch RPM 24
  - Deactivating a Patch RPM 24
  - Removing a Patch RPM 26
- Persistently Daemonizing an SDK- or ISO-built Third Party Process 27
- Persistently Starting Your Application from the Native Bash Shell 28
- An Example Application in the Native Bash Shell 28

---

**CHAPTER 4****Guest Shell 31**

- About the Guest Shell 31
- Guidelines and Limitations 32
- Accessing the Guest Shell 36
- Resources Used for the Guest Shell 37
- Capabilities in the Guestshell 37
  - NX-OS CLI in the Guest Shell 38
  - Network Access in Guest Shell 38

Access to Bootflash in Guest Shell	40
Python in Guest Shell	41
Python 3 in Guest Shell versions up to 2.10 (CentOS 7)	41
Installing RPMs in the Guest Shell	44
Security Posture for Virtual Services	45
Digitally Signed Application Packages	45
Kernel Vulnerability Patches	46
ASLR and X-Space Support	46
Namespace Isolation	46
Root-User Restrictions	46
Resource Management	47
Guest File System Access Restrictions	47
Managing the Guest Shell	47
Disabling the Guest Shell	50
Destroying the Guest Shell	50
Enabling the Guest Shell	51
Replicating the Guest Shell	52
Exporting Guest Shell rootfs	52
Importing Guest Shell rootfs	52
Importing YAML File	53
show guestshell Command	57
Verifying Virtual Service and Guest Shell Information	57
Persistently Starting Your Application From the Guest Shell	59
Procedure for Persistently Starting Your Application from the Guest Shell	60
An Example Application in the Guest Shell	60

---

**CHAPTER 5**
**Broadcom Shell 63**

About the Broadcom Shell	63
Accessing the Broadcom Shell (bcm-shell)	63
Accessing bcm-shell with the CLI API	63
Accessing the Native bcm-shell on the Fabric Module	65
Accessing the bcm-shell on the Line Card	66
Examples of Broadcom Shell Commands	67
Displaying L2 Entries	67

Displaying Routing Information from FM and LC ASIC Instances	67
Displaying Spanning Tree Group Entries	68
Display T2 Counters for Interface xe0	68
Displaying L3 Information	68

**CHAPTER 6****Python API 69**

About the Python API	69
Using Python	69
Cisco Python Package	69
Guidelines and Limitations	70
Using the CLI Command APIs	70
Invoking the Python Interpreter from the CLI	72
Display Formats	72
Non-Interactive Python	74
Running Scripts with Embedded Event Manager	75
Python Integration with Cisco NX-OS Network Interfaces	76
Cisco NX-OS Security with Python	76
Examples of Security and User Authority	77
Example of Running Script with Scheduler	78

**CHAPTER 7****Scripting with Tcl 79**

About Tcl	79
Tclsh Command Help	79
Tclsh Command History	80
Tclsh Tab Completion	80
Tclsh CLI Command	80
Tclsh Command Separation	80
Tcl Variables	81
Tclquit	81
Tclsh Security	81
Running the Tclsh Command	81
Navigating Cisco NX-OS Modes from the Tclsh Command	82
Tcl References	84

---

<b>CHAPTER 8</b>	<b>iPXE</b>	<b>85</b>
	About iPXE	85
	Netboot Requirements	86
	Guidelines and Limitations	86
	Boot Mode Configuration	86
	Verifying the Boot Order Configuration	87

---

<b>CHAPTER 9</b>	<b>Kernel Stack</b>	<b>89</b>
	About Kernel Stack	89
	Guidelines and Limitations	89
	Changing the Port Range	90

---

<b>PART II</b>	<b>Applications</b>	<b>93</b>
----------------	---------------------	-----------

---

<b>CHAPTER 10</b>	<b>Third-Party Applications</b>	<b>95</b>
	About Third-Party Applications	95
	Guidelines and Limitations	95
	Installing Third-Party Native RPMs/Packages	95
	Persistent Third-Party RPMs	97
	Installing RPM from VSH	98
	Package Addition	98
	Package Activation	99
	Deactivating Packages	99
	Removing Packages	100
	Displaying Installed Packages	100
	Displaying Detail Logs	100
	Upgrading a Package	101
	Downgrading a Package	101
	Third-Party Applications	101
	NX-OS	101
	DevOps Configuration Management Tools	102
	V9K	102
	Automation Tool Educational Content	102

collectd 102  
Ganglia 102  
Iperf 103  
LLDP 103  
Nagios 103  
OpenSSH 103  
Quagga 103  
Splunk 104  
tcollector 104  
tcpdump 104  
TShark 104

---

**CHAPTER 11****Ansible 107**

Prerequisites 107  
About Ansible 107  
Cisco Ansible Module 107

---

**CHAPTER 12****Puppet Agent 109**

About Puppet 109  
Prerequisites 109  
Puppet Agent NX-OS Environment 110  
ciscopuppet Module 110

---

**CHAPTER 13****Using Chef Client with Cisco NX-OS 113**

About Chef 113  
Prerequisites 113  
Chef Client NX-OS Environment 114  
cisco-cookbook 114

---

**CHAPTER 14****Nexus Application Development - ISO 117**

About ISO 117  
Installing the ISO 117  
Using the ISO to Build Applications 118  
Using RPM to Package an Application 119



---

<b>CHAPTER 15</b>	<b>Nexus Application Development - SDK</b>	<b>121</b>
	About the Cisco SDK	121
	Installing the SDK	121
	Procedure for Installation and Environment Initialization	122
	Using the SDK to Build Applications	123
	Using RPM to Package an Application	124
	Creating an RPM Build Environment	125
	Using General RPM Build Procedure	125
	Example to Build RPM for collectd with No Optional Plug-Ins	126
	Example to Build RPM for collectd with Optional Curl Plug-In	127

---

<b>CHAPTER 16</b>	<b>NX-SDK</b>	<b>129</b>
	About the NX-SDK	129
	Install the NX-SDK	130
	Building and Packaging C++ Applications	130
	Installing and Running Custom Applications	133

---

<b>PART III</b>	<b>NX-API</b>	<b>137</b>
-----------------	---------------	------------

---

<b>CHAPTER 17</b>	<b>NX-API CLI</b>	<b>139</b>
	About NX-API CLI	139
	Transport	139
	Message Format	139
	Security	140
	Using NX-API CLI	140
	Escalate Privileges to Root on NX-API	142
	Sample NX-API Scripts	143
	NX-API Management Commands	143
	Working With Interactive Commands Using NX-API	146
	NX-API Request Elements	146
	NX-API Response Elements	151
	Restricting Access to NX-API	152
	Updating an iptable	153

Making an Iptable Persistent Across Reloads 154  
 Table of NX-API Response Codes 155

---

**CHAPTER 18**      **NX-API REST 157**  
                     About NX-API REST 157  
                     Guidelines and Limitations 157

---

**CHAPTER 19**      **NX-API Developer Sandbox 159**  
                     About the NX-API Developer Sandbox 159  
                     Guidelines and Restrictions for the Developer Sandbox 160  
                     Configuring the Message Format and Command Type 160  
                     Using the Developer Sandbox 162  
                     Using the Developer Sandbox to Convert CLI Commands to REST Payloads 162  
                     Using the Developer Sandbox to Convert from REST Payloads to CLI Commands 165

---

**PART IV**            **Model-Driven Programmability 171**

---

**CHAPTER 20**      **Infrastructure Overview 173**  
                     About Model-Driven Programmability 173  
                     About the Programmable Interface Infrastructure 173

---

**CHAPTER 21**      **Managing Components 177**  
                     About the Component RPM Packages 177  
                     Preparing For Installation 178  
                     Downloading Components from the Cisco Artifacts 179  
                     Installing RPM Packages 180  
                         Installing the Programmable Interface Infrastructure RPM Packages 180  
                         Installing Common Model RPM Packages 181  
                         Installing Agent RPM Packages 182

---

**CHAPTER 22**      **NETCONF Agent 183**  
                     About the NETCONF Agent 183  
                     Guidelines and Limitations 185  
                     Configuring the NETCONF Agent 185

- Using the NETCONF Agent 186
  - Error Messages 188
- Troubleshooting the NETCONF Agent 190

---

**CHAPTER 23      Converting CLI Commands to Network Configuration Format 191**

- Information About XMLIN 191
- Licensing Requirements for XMLIN 191
- Installing and Using the XMLIN Tool 192
- Converting Show Command Output to XML 192
- Configuration Examples for XMLIN 193

---

**CHAPTER 24      RESTConf Agent 197**

- About the RESTCONF Agent 197
- Guidelines and Limitations 198
- Using the RESTCONF Agent 198
- Troubleshooting the RESTCONF Agent 199

---

**CHAPTER 25      gRPC Agent 201**

- About the gRPC Agent 201
- Guidelines and Limitations 202
- Configuring the gRPC Agent for Cisco NX-OS Release 9.3(2) and Earlier 203
- Using the gRPC Agent 203
- Troubleshooting the gRPC Agent 205
- gRPC Protobuf File 205

---

**CHAPTER 26      Dynamic Logger 213**

- Prerequisites 213
- Reference 213

---

**CHAPTER 27      Model-Driven Telemetry 221**

- About Telemetry 221
  - Telemetry Components and Process 221
  - High Availability of the Telemetry Process 223

- Licensing Requirements for Telemetry 223
- Guidelines and Restrictions for Telemetry 223
- Configuring Telemetry Using the CLI 227
  - Configuring Telemetry Using the NX-OS CLI 227
  - Configuration Examples for Telemetry Using the CLI 232
  - Displaying Telemetry Configuration and Statistics 236
  - Displaying Telemetry Log and Trace Information 243
- Configuring Telemetry Using the NX-API 245
  - Configuring Telemetry Using the NX-API 245
  - Configuration Example for Telemetry Using the NX-API 254
  - Telemetry Model in the DME 257
- Additional References 258
  - Related Documents 258

---

**PART V**

**XML Management Interface 259**

---

**CHAPTER 28**

**XML Management Interface 261**

- About the XML Management Interface 261
  - Information About the XML Management Interface 261
    - NETCONF Layers 261
    - SSH xmlagent 262
- Licensing Requirements for the XML Management Interface 262
- Prerequisites to Using the XML Management Interface 263
- Using the XML Management Interface 263
  - Configuring the SSH and the XML Server Options Through the CLI 263
  - Starting an SSHv2 Session 264
  - Sending a Hello Message 265
  - Obtaining XML Schema Definition (XSD) Files 266
  - Sending an XML Document to the XML Server 266
  - Creating NETCONF XML Instances 266
    - RPC Request Tag 267
    - NETCONF Operations Tags 268
    - Device Tags 269
  - Extended NETCONF Operations 271

NETCONF Replies	275
RPC Response Tag	275
Interpreting the Tags Encapsulated in the data Tag	275
Information About Example XML Instances	276
Example XML Instances	276
NETCONF Close Session Instance	277
NETCONF Kill Session Instance	277
NETCONF Copy Config Instance	277
NETCONF Edit Config Instance	278
NETCONF Get Config Instance	279
NETCONF Lock Instance	280
NETCONF Unlock Instance	281
NETCONF Commit Instance: Candidate Configuration Capability	281
NETCONF Confirmed Commit Instance	282
NETCONF Rollback-On-Error Instance	282
NETCONF Validate Capability Instance	283
Additional References	283

---

**APPENDIX A**

<b>Streaming Telemetry Sources</b>	<b>285</b>
About Streaming Telemetry	285
Guidelines and Limitations	285
Data Available for Telemetry	285





## Preface

---

This preface includes the following sections:

- [Audience, on page xv](#)
- [Document Conventions, on page xv](#)
- [Related Documentation for Cisco Nexus 9000 Series Switches, on page xvi](#)
- [Documentation Feedback, on page xvi](#)
- [Communications, Services, and Additional Information, on page xvi](#)

## Audience

This publication is for network administrators who install, configure, and maintain Cisco Nexus switches.

## Document Conventions

Command descriptions use the following conventions:

Convention	Description
<b>bold</b>	Bold text indicates the commands and keywords that you enter literally as shown.
<i>Italic</i>	Italic text indicates arguments for which you supply the values.
[x]	Square brackets enclose an optional element (keyword or argument).
[x   y]	Square brackets enclosing keywords or arguments that are separated by a vertical bar indicate an optional choice.
{x   y}	Braces enclosing keywords or arguments that are separated by a vertical bar indicate a required choice.
[x {y   z}]	Nested set of square brackets or braces indicate optional or required choices within optional or required elements. Braces and a vertical bar within square brackets indicate a required choice within an optional element.

Convention	Description
<i>variable</i>	Indicates a variable for which you supply values, in context where italics cannot be used.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string includes the quotation marks.

Examples use the following conventions:

Convention	Description
<code>screen font</code>	Terminal sessions and information the switch displays are in screen font.
<b>boldface screen font</b>	Information that you must enter is in boldface screen font.
<i>italic screen font</i>	Arguments for which you supply values are in italic screen font.
<>	Nonprinting characters, such as passwords, are in angle brackets.
[ ]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

## Related Documentation for Cisco Nexus 9000 Series Switches

The entire Cisco Nexus 9000 Series switch documentation set is available at the following URL:

[http://www.cisco.com/en/US/products/ps13386/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/ps13386/tsd_products_support_series_home.html)

## Documentation Feedback

To provide technical feedback on this document, or to report an error or omission, please send your comments to [nexus9k-docfeedback@cisco.com](mailto:nexus9k-docfeedback@cisco.com). We appreciate your feedback.

## Communications, Services, and Additional Information

- To receive timely, relevant information from Cisco, sign up at [Cisco Profile Manager](#).
- To get the business impact you're looking for with the technologies that matter, visit [Cisco Services](#).
- To submit a service request, visit [Cisco Support](#).
- To discover and browse secure, validated enterprise-class apps, products, solutions and services, visit [Cisco Marketplace](#).
- To obtain general networking, training, and certification titles, visit [Cisco Press](#).
- To find warranty information for a specific product or product family, access [Cisco Warranty Finder](#).



### **Cisco Bug Search Tool**

[Cisco Bug Search Tool](#) (BST) is a web-based tool that acts as a gateway to the Cisco bug tracking system that maintains a comprehensive list of defects and vulnerabilities in Cisco products and software. BST provides you with detailed defect information about your products and software.





# CHAPTER 1

## New and Changed Information

This chapter provides release-specific information for each new and changed feature in the *Cisco Nexus 9000 Series NX-OS Programmability Guide, Release 7.x*.

- [New and Changed Information, on page 1](#)

## New and Changed Information

This table summarizes the new and changed features for the *Cisco Nexus 9000 Series NX-OS Programmability Guide, Release 7.x* and where they are documented.

**Table 1: New and Changed Features**

Feature	Description	Changed in Release	Where Documented
Model-Driven Telemetry	Enhanced <b>show telemetry control database sensor-paths</b> to show details about encoding, collection, transport, and streaming.	7.0(3)I7(7)	<a href="#">Displaying Telemetry Configuration and Statistics</a>
CLI Command output for NETCONF	Support for converting NX-OS CLI commands to Network Configuration format is documented.	7.0(3)I7(5)	<a href="#">Converting CLI Commands to Network Configuration Format, on page 191</a>
XML Management Interface	Support for managing the Cisco Nexus 9000 switches with an XML-based tool through the XML-based Network Configuration Protocol (NETCONF) is documented.	7.0(3)I7(5)	<a href="#">XML Management Interface, on page 261</a>
JSON-RPC as an NX-API input request format	JSON-RPC is now an accepted NX-API input request format.	7.0(3)I7(4)	<a href="#">NX-API CLI, on page 139</a>

Feature	Description	Changed in Release	Where Documented
<b>rollback</b> NX-API request element	The <b>rollback</b> NX-API request element is now available in XML, JSON and JSON-RPC input request formats.	7.0(3)I7(4)	<a href="#">NX-API CLI, on page 139</a>
Patch RPM support	Added instructions for managing patch RPMs.	7.0(3)I7(3)	<a href="#">Bash, on page 13</a>
UDP telemetry	Added information on UDP telemetry.	7.0(3)I7(3)	<a href="#">Model-Driven Telemetry, on page 221</a>
Nexus 9508 Bash shell support	Added support for Nexus 9508 running NX-OS 7.0(3)F3(1).	7.0(3)F3(1)	<a href="#">Guidelines and Limitations, on page 13</a>
Nexus 9508 Python API support	Added support for Nexus 9508 running NX-OS 7.0(3)F3(1).	7.0(3)F3(1)	<a href="#">Guidelines and Limitations, on page 70</a>
Nexus 9508 iPXE support	Added support for Nexus 9508 running NX-OS 7.0(3)F3(1).	7.0(3)F3(1)	<a href="#">Guidelines and Limitations, on page 86</a>
Nexus 9508 Kernel Stack support	Added support for Nexus 9508 running NX-OS 7.0(3)F3(1).	7.0(3)F3(1)	<a href="#">Guidelines and Limitations, on page 89</a>
Nexus 9508 RPMs for Third-Party application support	Added support for Nexus 9508 running NX-OS 7.0(3)F3(1).	7.0(3)F3(1)	<a href="#">About Third-Party Applications, on page 95</a>
Nexus 9508 Puppet Agent support	Added support for Nexus 9508 running NX-OS 7.0(3)F3(1).	7.0(3)F3(1)	<a href="#">Puppet Agent, on page 109</a>
Nexus 9508 Chef client support	Added support for Nexus 9508 running NX-OS 7.0(3)F3(1).	7.0(3)F3(1)	<a href="#">Using Chef Client with Cisco NX-OS , on page 113</a>
Nexus 9508 NX-API REST support	Added support for Nexus 9508 running NX-OS 7.0(3)F3(1).	7.0(3)F3(1)	<a href="#">Guidelines and Limitations, on page 157</a>
Nexus 9508 Guest Shell support	Added support for Nexus 9508 running NX-OS 7.0(3)F3(1).	7.0(3)F3(1)	<a href="#">About the Guest Shell, on page 31</a>
Export rootfs of Guest Shell onto multiple devices.	Support to export a specific Guest Shell rootfs and deploy it onto multiple devices.	7.0(3)I7(1)	<a href="#">Replicating the Guest Shell , on page 52</a>
Telemetry support for UDP and secure UDP (DTLS) protocols	Added telemetry support for UDP and secure UDP (DTLS) protocols	7.0(3)I7(1)	<a href="#">Telemetry Components and Process, on page 221</a>
Authentication with self signed SSL certificate	Added support for authentication with self signed SSL certificate.	7.0(3)I7(1)	<a href="#">Guidelines and Restrictions for Telemetry, on page 223</a>

Feature	Description	Changed in Release	Where Documented
Telemetry VRF Support	Added telemetry VRF support.	7.0(3)I7(1)	<a href="#">Guidelines and Restrictions for Telemetry, on page 223</a>
Telemetry Compression for gRPC Transport	Added support for telemetry compression for gRPC transport.	7.0(3)I7(1)	<a href="#">Guidelines and Restrictions for Telemetry, on page 223</a>
NX-OS Programmable Interface Component RPM packages	NX-OS Programmable Interface Component RPM packages included in the NX-OS image.	7.0(3)I7(1)	<a href="#">About the Component RPM Packages, on page 177</a>
Container Tracker	Added support to communicate with the Kubernetes API Server.	7.0(3)I6(1)	<a href="#">Container Tracker Support, on page 9</a>
NX-SDK	SDK to create native NX-OS applications.	7.0(3)I6(1)	<a href="#">NX-SDK, on page 129</a>
NETCONF Candidate	Users can change NETCONF configurations and then chose when to commit those changes.	7.0(3)I6(1)	<a href="#">NETCONF Agent, on page 183</a>
Dynamic Logger	Users can now update configurations without restarting the switch	7.0(3)I6(1)	<a href="#">Dynamic Logger, on page 213</a>
Model-Driven Telemetry	Telemetry supports the following features: <ul style="list-style-type: none"> <li>• JSON over HTTP</li> <li>• SSL/TLS certificates over gRPC</li> </ul>	7.0(3)I6(1)	<a href="#">Model-Driven Telemetry, on page 221</a>
NX-API Developer Sandbox	The Sandbox can convert REST JSON payloads into equivalent CLI commands	7.0(3)I6(1)	<a href="#">NX-API Developer Sandbox, on page 159</a>

Feature	Description	Changed in Release	Where Documented
Guest Shell	Version updated from 2.1 to 2.2. Guest shell now includes the following features: <ul style="list-style-type: none"> <li>• User accounts will have the same name as the one used to log into the switch,</li> <li>• The dohost utility will send the logged-in user name over the NX-API connection,</li> <li>• A network administrator can configure non-administrative accounts within the guest shell.</li> </ul>	7.0(3)I5(2)	<a href="#">Guest Shell, on page 31</a>
NX-API Developer Sandbox	The Sandbox now supports the generation of YANG and NX-API REST payloads.	7.0(3)I5(1)	<a href="#">NX-API Developer Sandbox, on page 159</a>
Model-Driven Programmability	Data modeling provides a programmatic and standards-based method of writing configurations to the network device.	7.0(3)I5(1)	<a href="#">Model-Driven Programmability, on page 171</a>
Model-Driven Telemetry	Enables the push model of streaming network data, providing near-real-time access to monitoring data.	7.0(3)I5(1)	<a href="#">Model-Driven Telemetry, on page 221</a>
XML Management Interface	Added the use of XML Management Interface to configure devices.	7.0(3)I4(1)	Replaced in a later release by Model-Driven Programmability
Nexus Application Development	The Cisco SDK is a development kit based on Yocto 1.2. It contains all of the tools needed to build applications for execution on a Cisco Nexus switch.	7.0(3)I2(1)	
Kernel Stack	Uses well-known Linux APIs to manage routes and front panel ports.	7.0(3)I2(1)	<a href="#">Kernel Stack, on page 89</a>

Feature	Description	Changed in Release	Where Documented
ISO	The ISO image is a bootable Wind River 5 environment that includes the necessary tools, libraries, and headers to build and RPM-package third-party applications to run natively on a Cisco Nexus switch.	7.0(3)i2(1)	<a href="#">Nexus Application Development - ISO, on page 117</a>
iPXE	Open source network boot firmware.	7.0(3)i2(1)	<a href="#">iPXE, on page 85</a>
Chef	Chef is an open-source software package developed by Chef Software, Inc.	7.0(3)i2(1)	<a href="#">Using Chef Client with Cisco NX-OS , on page 113</a>
Puppet	The Puppet software package, developed by Puppet Labs, is an open source automation toolset for managing servers and other resources by enforcing device states, such as configuration settings.	7.0(3)i2(1)	<a href="#">Puppet Agent, on page 109</a>
Third-Party Applications	Open source applications added.	7.0(3)i2(1)	<a href="#">Third-Party Applications, on page 95</a>
Guest Shell	Updated to Guest Shell 2.0	7.0(3)i2(1)	<a href="#">Guest Shell, on page 31</a>
iPXE	Open source network boot firmware.	7.0(3)i2(1)	<a href="#">iPXE, on page 85</a>
Kernel Stack	Uses well known Linux APIs to manage the routes and front panel ports.	7.0(3)i2(1)	<a href="#">Kernel Stack, on page 89</a>
No updates since release 6.x		7.0(3)I1(1)	







## CHAPTER 2

# Overview

---

- [Programmability Overview, on page 7](#)
- [Supported Platforms, on page 8](#)
- [Standard Network Manageability Features, on page 8](#)
- [Advanced Automation Feature, on page 8](#)
- [Programmability Support, on page 8](#)

## Programmability Overview

The Cisco NX-OS software running on the Cisco Nexus 9000 Series switches is as follows:

- **Resilient**  
Provides critical business-class availability.
- **Modular**  
Has extensions that accommodate business needs.
- **Highly Programmatic**  
Allows for rapid automation and orchestration through Application Programming Interfaces (APIs).
- **Secure**  
Protects and preserves data and operations.
- **Flexible**  
Integrates and enables new technologies.
- **Scalable**  
Accommodates and grows with the business and its requirements.
- **Easy to use**  
Reduces the amount of learning required, simplifies deployment, and provides ease of manageability.

With the Cisco NX-OS operating system, the device functions in the unified fabric mode to provide network connectivity with programmatic automation functions.

Cisco NX-OS contains Open Source Software (OSS) and commercial technologies that provide automation, orchestration, programmability, monitoring, and compliance support.

For more information on Open NX-OS, see <https://developer.cisco.com/site/nx-os/>.

## Supported Platforms

Starting with Cisco NX-OS release 7.0(3)I7(1), use the [Nexus Switch Platform Support Matrix](#) to know from which Cisco NX-OS releases various Cisco Nexus 9000 and 3000 switches support a selected feature.

## Standard Network Manageability Features

- SNMP (V1, V2, V3)
- Syslog
- RMON
- NETCONF
- CLI and CLI scripting

## Advanced Automation Feature

The enhanced Cisco NX-OS on the device supports automation. The platform includes support for Power On Auto Provisioning (POAP).

The enhanced Cisco NX-OS on the device supports automation. The platform includes the following features that support automation:

- Power On Auto Provisioning (POAP) support
- Chef and Puppet integration
- OpenStack integration
- OpenDayLight integration and OpenFlow support

## Programmability Support

Cisco NX-OS software on switches support several capabilities to aid programmability.

## NX-API Support

Cisco NX-API allows for HTTP-based programmatic access to the switches. This support is delivered by NX-API, an open source webserver. NX-API provides the configuration and management capabilities of the Cisco NX-OS CLI with web-based APIs. The device can be set to publish the output of the API calls in XML or JSON format. This API enables rapid development on the switches.

## Python Scripting

Cisco NX-OS supports Python v2.7.5 in both interactive and noninteractive (script) modes.

Beginning in Cisco NX-OS Release 9.3(5), Python 3 is also supported.

The Python scripting capability on the devices provides programmatic access to the switch CLI to perform various tasks, and to Power-On Auto Provisioning (POAP) and Embedded Event Manager (EEM) actions. Responses to Python calls that invoke the Cisco NX-OS CLI return text or JSON output.

The Python interpreter is included in the Cisco NX-OS software.

## Tcl Scripting

Cisco Nexus 9000 Series switches support Tcl (Tool Command Language). Tcl is a scripting language that enables greater flexibility with CLI commands on the switch. You can use Tcl to extract certain values in the output of a **show** command, perform switch configurations, run Cisco NX-OS commands in a loop, or define EEM policies in a script.

## Broadcom Shell

The Cisco Nexus 9000 Series switch front panel and fabric module line cards contain Broadcom Network Forwarding Engine (NFE). You can access the Broadcom command-line shell (bcm-shell) from these NFEs.

## Bash

Cisco Nexus switches support direct Bourne-Again Shell (Bash) access. With Bash, you can access the underlying Linux system on the device and manage the system.

## Bash Shell Access and Linux Container Support

Cisco Nexus switches support direct Linux shell access and Linux containers. With Linux shell access, you can access the underlying Linux system on the switch and manage the underlying system. You can also use Linux containers to securely install your own software and to enhance the capabilities of the Cisco Nexus switch. For example, you can install bare-metal provisioning tools like Cobbler on a Cisco Nexus switch to enable automatic provisioning of bare-metal servers from the top-of-rack switch.

## Guest Shell

The Cisco Nexus 9000 Series switches support a guest shell that provides Bash access into a Linux execution space on the host system that is decoupled from the host Cisco Nexus 9000 NX-OS software. With the guest shell, you can add software packages and update libraries as needed without impacting the host system software.

## Container Tracker Support

Cisco NX-OS is configured to communicate with the Kubernetes API Server to understand the capabilities of the containers behind a given switch port.

The following commands communicate with the Kubernetes API Server:

- The **show containers kubernetes** command obtains data from *kube-apiserver* using API calls over HTTP.
- The **kubernetes watch resource** command uses a daemon to subscribe to requested resources and process streaming data from *kube-apiserver*.
- The **action** assigned in the **watch** command is performed on pre-defined triggers. (For example, Add or Delete of a Pod.)



## PART I

# Shells and Scripting

- [Bash, on page 13](#)
- [Guest Shell, on page 31](#)
- [Broadcom Shell, on page 63](#)
- [Python API, on page 69](#)
- [Scripting with Tcl, on page 79](#)
- [iPXE, on page 85](#)
- [Kernel Stack, on page 89](#)





## CHAPTER 3

# Bash

---

- [About Bash, on page 13](#)
- [Guidelines and Limitations, on page 13](#)
- [Accessing Bash, on page 14](#)
- [Escalate Privileges to Root, on page 15](#)
- [Examples of Bash Commands, on page 16](#)
- [Managing Feature RPMs, on page 17](#)
- [Managing Patch RPMs, on page 20](#)
- [Persistently Daemonizing an SDK- or ISO-built Third Party Process, on page 27](#)
- [Persistently Starting Your Application from the Native Bash Shell, on page 28](#)
- [An Example Application in the Native Bash Shell, on page 28](#)

## About Bash

In addition to the Cisco NX-OS CLI, Cisco Nexus 9000 Series switches support access to the Bourne-Again SHell (Bash). Bash interprets commands that you enter or commands that are read from a shell script. Using Bash enables access to the underlying Linux system on the device and to manage the system.

## Guidelines and Limitations

The Bash shell has the following guidelines and limitations:

- Starting with NX-OS 7.0(3)F3(1), the Bash shell is supported on the Cisco Nexus 9508 switch.
- The binaries located in the `/isan` folder are meant to be run in an environment which is setup differently from that of the shell entered from the **run bash** command. It is advisable not to use these binaries from the Bash shell as the behavior within this environment is not predictable.
- When importing Cisco Python modules, do not use Python from the Bash shell. Instead use the more recent Python in NX-OS VSH.

# Accessing Bash

In Cisco NX-OS, Bash is accessible from user accounts that are associated with the Cisco NX-OS dev-ops role or the Cisco NX-OS network-admin role.

The following example shows the authority of the dev-ops role and the network-admin role:

```
switch# show role name dev-ops

Role: dev-ops
Description: Predefined system role for devops access. This role
cannot be modified.
Vlan policy: permit (default)
Interface policy: permit (default)
Vrf policy: permit (default)
-----
Rule      Perm   Type      Scope      Entity
-----
4         permit command   conf t ; username *
3         permit command   bcm module *
2         permit command   run bash *
1         permit command   python *

switch# show role name network-admin

Role: network-admin
Description: Predefined network admin role has access to all commands
on the switch
-----
Rule      Perm   Type      Scope      Entity
-----
1         permit read-write

switch#
```

Bash is enabled by running the **feature bash-shell** command.

The **run bash** command loads Bash and begins at the home directory for the user.

The following examples show how to enable the Bash shell feature and how to run Bash.

```
switch# configure terminal
switch(config)# feature bash-shell

switch# run?
run          Execute/run program
run-script   Run shell scripts

switch# run bash?
bash        Linux-bash

switch# run bash
bash-4.2$ whoami
admin
bash-4.2$ pwd
/bootflash/home/admin
bash-4.2$
```





**Note** You can also execute Bash commands with **run bash command**.

For instance, you can run **whoami** using **run bash command**:

```
run bash whoami
```

You can also run Bash by configuring the user **shelltype**:

```
username foo shelltype bash
```

This command puts you directly into the Bash shell upon login. This does not require **feature bash-shell** to be enabled.

## Escalate Privileges to Root

The privileges of an admin user can escalate their privileges for root access.

The following are guidelines for escalating privileges:

- admin privilege user (network-admin / vdc-admin) is equivalent of Linux root privilege user in NX-OS
- Only an authenticated admin user can escalate privileges to root, and password is not required for an authenticated admin privilege user.
- Bash must be enabled before escalating privileges.
- SSH to the switch using `root` username through a non-management interface will default to Linux Bash shell-type access for the root user. Type **vsh** to return to NX-OS shell access.

NX-OS network administrator users must escalate to root to pass configuration commands to the NX-OS VSH if:

- The NX-OS user has a shell-type Bash and logs into the switch with a shell-type Bash.
- The NX-OS user that logged into the switch in Bash continues to use Bash on the switch.

Run **sudo su 'vsh -c "<configuration commands>"** or **sudo bash -c 'vsh -c "<configuration commands>"**.

The following example demonstrates with network administrator user MyUser with a default shell type Bash using **sudo** to pass configuration commands to the NX-OS:

```
ssh -l MyUser 1.2.3.4
-bash-4.2$ sudo vsh -c "configure terminal ; interface eth1/2 ; shutdown ; sleep 2 ; show
interface eth1/2 brief"
```

```
-----
Ethernet      VLAN      Type Mode      Status Reason                               Speed      Port
Interface                                           Ch #
-----
Eth1/2        --        eth  routed down  Administratively down                auto(D)  --
```

The following example demonstrates with network administrator user MyUser with default shell type Bash entering the NX-OS and then running Bash on the NX-OS:

```
ssh -l MyUser 1.2.3.4
-bash-4.2$ vsh -h
```

```

Cisco NX-OS Software
Copyright (c) 2002-2016, Cisco Systems, Inc. All rights reserved.
Nexus 9000v software ("Nexus 9000v Software") and related documentation,
files or other reference materials ("Documentation") are
the proprietary property and confidential information of Cisco
Systems, Inc. ("Cisco") and are protected, without limitation,
pursuant to United States and International copyright and trademark
laws in the applicable jurisdiction which provide civil and criminal
penalties for copying or distribution without Cisco's authorization.

Any use or disclosure, in whole or in part, of the Nexus 9000v Software
or Documentation to any third party for any purposes is expressly
prohibited except as otherwise authorized by Cisco in writing.
The copyrights to certain works contained herein are owned by other
third parties and are used and distributed under license. Some parts
of this software may be covered under the GNU Public License or the
GNU Lesser General Public License. A copy of each such license is
available at
http://www.gnu.org/licenses/gpl.html and
http://www.gnu.org/licenses/lgpl.html
*****
* Nexus 9000v is strictly limited to use for evaluation, demonstration      *
* and NX-OS education. Any use or disclosure, in whole or in part of      *
* the Nexus 9000v Software or Documentation to any third party for any    *
* purposes is expressly prohibited except as otherwise authorized by      *
* Cisco in writing.                                                         *
*****
switch# run bash
bash-4.2$ vsh -c "configure terminal ; interface eth1/2 ; shutdown ; sleep 2 ; show interface
eth1/2 brief"

-----
Ethernet      VLAN      Type Mode      Status Reason                      Speed      Port
Interface
-----
Eth1/2        --        eth  routed down   Administratively down      auto(D)  --

```



**Note** Do not use **sudo su -** or the system hangs.

The following example shows how to escalate privileges to root and how to verify the escalation:

```

switch# run bash
bash-4.2$ sudo su root
bash-4.2# whoami
root
bash-4.2# exit
exit

```

## Examples of Bash Commands

This section contains examples of Bash commands and output.

### Displaying System Statistics

The following example displays system statistics:

```

switch# run bash
bash-4.2$ cat /proc/meminfo
<snip>
MemTotal:      16402560 kB
MemFree:       14098136 kB
Buffers:       11492 kB
Cached:        1287880 kB
SwapCached:    0 kB
Active:        1109448 kB
Inactive:      717036 kB
Active(anon):  817856 kB
Inactive(anon): 702880 kB
Active(file):  291592 kB
Inactive(file): 14156 kB
Unevictable:   0 kB
Mlocked:       0 kB
SwapTotal:     0 kB
SwapFree:      0 kB
Dirty:         32 kB
Writeback:     0 kB
AnonPages:     527088 kB
Mapped:        97832 kB
<\snip>

```

## Running Bash from CLI

The following example runs **ps** from Bash using **run bash** command:

```

switch# run bash ps -el
F S  UID  PID  PPID  C  PRI  NI ADDR SZ WCHAN  TTY          TIME CMD
4 S   0    1    0  0  80   0 -  528 poll_s ?           00:00:03 init
1 S   0    2    0  0  80   0 -    0 kthrea ?           00:00:00 kthreadd
1 S   0    3    2  0  80   0 -    0 run_ks ?           00:00:56 ksoftirqd/0
1 S   0    6    2  0 -40  - -    0 cpu_st ?           00:00:00 migration/0
1 S   0    7    2  0 -40  - -    0 watchd ?           00:00:00 watchdog/0
1 S   0    8    2  0 -40  - -    0 cpu_st ?           00:00:00 migration/1
1 S   0    9    2  0  80   0 -    0 worker ?           00:00:00 kworker/1:0
1 S   0   10    2  0  80   0 -    0 run_ks ?           00:00:00 ksoftirqd/1

```

## Managing Feature RPMs

### RPM Installation Prerequisites

Use these procedures to verify that the system is ready before installing or adding an RPM.

#### Procedure

	Command or Action	Purpose
<b>Step 1</b>	switch# show logging logfile   grep -i "System ready"	Before running Bash, this step verifies that the system is ready before installing or adding an RPM.  Proceed if you see output similar to the following:

	Command or Action	Purpose
		2018 Mar 27 17:24:22 switch %ASCII-CFG-2-CONF_CONTROL: System ready
<b>Step 2</b>	switch# <b>run bash sudo su</b>  <b>Example:</b>  switch# <b>run bash sudo su</b>  bash-4.2#	Loads Bash.

## Installing Feature RPMs from Bash

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>sudo yum installed   grep platform</b>	Displays a list of the NX-OS feature RPMs installed on the switch.
<b>Step 2</b>	<b>yum list available</b>	Displays a list of the available RPMs.
<b>Step 3</b>	<b>sudo yum -y install rpm</b>	Installs an available RPM.

### Example

The following is an example of installing the **bfd** RPM:

```
bash-4.2$ yum list installed | grep n9000
base-files.n9000                3.0.14-r74.2                installed
bfd.lib32_n9000                1.0.0-r0                    installed
core.lib32_n9000              1.0.0-r0                    installed
eigrp.lib32_n9000             1.0.0-r0                    installed
eth.lib32_n9000               1.0.0-r0                    installed
isis.lib32_n9000              1.0.0-r0                    installed
lacp.lib32_n9000              1.0.0-r0                    installed
linecard.lib32_n9000          1.0.0-r0                    installed
lldp.lib32_n9000              1.0.0-r0                    installed
ntp.lib32_n9000               1.0.0-r0                    installed
nxos-ssh.lib32_n9000          1.0.0-r0                    installed
ospf.lib32_n9000              1.0.0-r0                    installed
perf-cisco.n9000_gdb          3.12-r0                     installed
platform.lib32_n9000          1.0.0-r0                    installed
shadow-securetty.n9000_gdb    4.1.4.3-r1                  installed
snmp.lib32_n9000              1.0.0-r0                    installed
svi.lib32_n9000               1.0.0-r0                    installed
sysvinit-inittab.n9000_gdb    2.88dsf-r14                 installed
tacacs.lib32_n9000            1.0.0-r0                    installed
task-nxos-base.n9000_gdb      1.0-r0                      installed
tor.lib32_n9000               1.0.0-r0                    installed
vtp.lib32_n9000               1.0.0-r0                    installed
bash-4.2$ yum list available
bgp.lib32_n9000                1.0.0-r0
bash-4.2$ sudo yum -y install bfd
```



**Note** Upon switch reload during boot up, use the **rpm** command instead of **yum** for persistent RPMs. Otherwise, RPMs initially installed using **yum bash** or **install cli** shows `reponame` or `filename` instead of `installed`.

## Upgrading Feature RPMs

### Before you begin

There must be a higher version of the RPM in the yum repository.

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<code>sudo yum -y upgrade rpm</code>	Upgrades an installed RPM.

### Example

The following is an example of upgrading the **bfd** RPM:

```
bash-4.2$ sudo yum -y upgrade bfd
```

## Downgrading a Feature RPM

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<code>sudo yum -y downgrade rpm</code>	Downgrades the RPM if any of the dnf repositories has a lower version of the RPM.

### Example

The following example shows how to downgrade the **bfd** RPM:

```
bash-4.2$ sudo yum -y downgrade bfd
```

## Erasing a Feature RPM



**Note** The SNMP RPM and the NTP RPM are protected and cannot be erased.

You can upgrade or downgrade these RPMs. It requires a system reload for the upgrade or downgrade to take effect.

For the list of protected RPMs, see `/etc/yum/protected.d/protected_pkgs.conf`.

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<code>sudo yum -y erase rpm</code>	Erases the RPM.

### Example

The following example shows how to erase the **bfd** RPM:

```
bash-4.2$ sudo yum -y erase bfd
```

## Managing Patch RPMs

### RPM Installation Prerequisites

Use these procedures to verify that the system is ready before installing or adding an RPM.

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<code>switch# show logging logfile   grep -i "System ready"</code>	Before running Bash, this step verifies that the system is ready before installing or adding an RPM.  Proceed if you see output similar to the following:  <b>2018 Mar 27 17:24:22 switch %ASCII-CFG-2-CONF_CONTROL: System ready</b>
<b>Step 2</b>	<code>switch# run bash sudo su</code>  <b>Example:</b> <code>switch# run bash sudo su</code> <code>bash-4.2#</code>	Loads Bash.

## Adding Patch RPMs from Bash

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<code>yum list --patch-only</code>	Displays a list of the patch RPMs present on the switch.
<b>Step 2</b>	<code>sudo yum install --add <i>URL_of_patch</i></code>	Adds the patch to the repository, where <i>URL_of_patch</i> is a well-defined format, such as <code>bootflash:/patch</code> , not in standard Linux format, such as <code>/bootflash/patch</code> .
<b>Step 3</b>	<code>yum list --patch-only available</code>	Displays a list of the patches that are added to the repository but are in an inactive state.

### Example

The following is an example of installing the `nxos.CSCab00001-n9k_ALL-1.0.0-7.0.3.I7.3.lib32_n9000` RPM:

```
bash-4.2# yum list --patch-only
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
               : protect-packages
groups-repo                | 1.1 kB    00:00 ...
localdb                    | 951 B    00:00 ...
patching                   | 951 B    00:00 ...
thirdparty                 | 951 B    00:00 ...
bash-4.2#
bash-4.2# sudo yum install --add
bootflash:/nxos.CSCab00001-n9k_ALL-1.0.0-7.0.3.I7.3.lib32_n9000.rpm
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
               : protect-packages
groups-repo                | 1.1 kB    00:00 ...
localdb                    | 951 B    00:00 ...
patching                   | 951 B    00:00 ...
thirdparty                 | 951 B    00:00 ...
[#####] 70%Install operation 135 completed successfully at Tue Mar 27 17:45:34
2018.

[#####] 100%
bash-4.2#
```

Once the patch RPM is installed, verify that it was installed properly. The following command lists the patches that are added to the repository and are in the inactive state:

```
bash-4.2# yum list --patch-only available
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
               : protect-packages
groups-repo                | 1.1 kB    00:00 ...
localdb                    | 951 B    00:00 ...
patching                   | 951 B    00:00 ...
thirdparty                 | 951 B    00:00 ...
nxos.CSCab00001-n9k_ALL.lib32_n9000  1.0.0-7.0.3.I7.3  patching
bash-4.2#
```

You can also add patches to a repository from a tar file, where the RPMs are bundled in the tar file. The following example shows how to add two RPMs that are part of the `nxos.CSCab00002_CSCab00003-n9k_ALL-1.0.0-7.0.3.I7.3.lib32_n9000` tar file to the patch repository:

```
bash-4.2# sudo yum install --add
bootflash:/nxos.CSCab00002_CSCab00003-n9k_ALL-1.0.0-7.0.3.I7.3.lib32_n9000.tar
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
                : protect-packages
groups-repo                | 1.1 kB    00:00 ...
localdb                    | 951 B    00:00 ...
patching                   | 951 B    00:00 ...
thirdparty                 | 951 B    00:00 ...
[#####                ] 70%Install operation 146 completed successfully at Tue Mar 27 21:17:39
2018.

[#####                ] 100%
bash-4.2#
bash-4.2# yum list --patch-only
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
                : protect-packages
groups-repo                | 1.1 kB    00:00 ...
localdb                    | 951 B    00:00 ...
patching                   | 951 B    00:00 ...
patching/primary           | 942 B    00:00 ...
patching                   |           2/2
thirdparty                 | 951 B    00:00 ...
nxos.CSCab00003-n9k_ALL.lib32_n9000    1.0.0-7.0.3.I7.3    patching
nxos.CSCab00002-n9k_ALL.lib32_n9000    1.0.0-7.0.3.I7.3    patching
bash-4.2#
```

## Activating a Patch RPM

### Before you begin

Verify that you have added the necessary patch RPM to the repository using the instructions in [#unique\\_70](#).

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<code>sudo yum install <i>patch_RPM</i> --nocommit</code>	<p>Activates the patch RPM, where <i>patch_RPM</i> is a patch that is located in the repository. Do not provide a location for the patch in this step.</p> <p><b>Note</b> Adding the <code>--nocommit</code> flag to the command means that the patch RPM is activated in this step, but not committed. See <a href="#">Committing a Patch RPM, on page 24</a> for instructions on committing the patch RPM after you have activated it.</p>



**Example**

The following example shows how to activate the **nxos.CSCab00001-n9k\_ALL-1.0.0-7.0.3.I7.3.lib32\_n9000** patch RPM:

```
bash-4.2# sudo yum install nxos.CSCab00001-n9k_ALL-1.0.0-7.0.3.I7.3.lib32_n9000 --nocommit
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
               : protect-packages
groups-repo                               | 1.1 kB    00:00 ...
localdb                                    | 951 B    00:00 ...
patching                                   | 951 B    00:00 ...
thirdparty                                 | 951 B    00:00 ...
Setting up Install Process
Resolving Dependencies
--> Running transaction check
---> Package nxos.CSCab00001-n9k_ALL.lib32_n9000 0:1.0.0-7.0.3.I7.3 will be installed
--> Finished Dependency Resolution

Dependencies Resolved

=====
Package                                Arch          Version           Repository        Size
=====
Installing:
nxos.CSCab00001-n9k_ALL                lib32_n9000   1.0.0-7.0.3.I7.3 patching          28 k

Transaction Summary
=====
Install      1 Package

Total download size: 28 k
Installed size: 82 k
Is this ok [y/N]: y
Downloading Packages:
Running Transaction Check
Running Transaction Test
Transaction Test Succeeded
Running Transaction
  Installing : nxos.CSCab00001-n9k_ALL-1.0.0-7.0.3.I7.3.lib32_n9000                1/1
[##### ] 90%error: reading
/var/sysmgr/tmp/patches/CSCab00001-n9k_ALL/isan/bin/sysinfo manifest, non-printable characters
found

Installed:
  nxos.CSCab00001-n9k_ALL.lib32_n9000 0:1.0.0-7.0.3.I7.3

Complete!
Install operation 140 completed successfully at Tue Mar 27 18:07:40 2018.

[#####] 100%
bash-4.2#
```

Enter the following command to verify that the patch RPM was activated successfully:

```
bash-4.2# yum list --patch-only
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
               : protect-packages
groups-repo                               | 1.1 kB    00:00 ...
localdb                                    | 951 B    00:00 ...
patching                                   | 951 B    00:00 ...
thirdparty                                 | 951 B    00:00 ...
```

```
nxos.CSCab00001-n9k_ALL.lib32_n9000 1.0.0-7.0.3.I7.3 installed
bash-4.2#
```

## Committing a Patch RPM

### Procedure

	Command or Action	Purpose
Step 1	<code>sudo yum install <i>patch_RPM</i> --commit</code>	Commits the patch RPM. The patch RPM must be committed to keep it active after reloads.

### Example

The following example shows how to commit the `nxos.CSCab00001-n9k_ALL-1.0.0-7.0.3.I7.3.lib32_n9000` patch RPM:

```
bash-4.2# sudo yum install nxos.CSCab00001-n9k_ALL-1.0.0-7.0.3.I7.3.lib32_n9000 --commit
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
                : protect-packages
groups-repo                               | 1.1 kB    00:00 ...
localdb                                    | 951 B    00:00 ...
patching                                   | 951 B    00:00 ...
thirdparty                                 | 951 B    00:00 ...
Install operation 142 completed successfully at Tue Mar 27 18:13:16 2018.

[#####] 100%
bash-4.2#
```

Enter the following command to verify that the patch RPM was committed successfully:

```
bash-4.2# yum list --patch-only committed
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
                : protect-packages
groups-repo                               | 1.1 kB    00:00 ...
localdb                                    | 951 B    00:00 ...
patching                                   | 951 B    00:00 ...
thirdparty                                 | 951 B    00:00 ...
nxos.CSCab00001-n9k_ALL.lib32_n9000 1.0.0-7.0.3.I7.3 installed
bash-4.2#
```

## Deactivating a Patch RPM

### Procedure

	Command or Action	Purpose
Step 1	<code>sudo yum erase <i>patch_RPM</i> --nocomit</code>	Deactivates the patch RPM.
		<b>Note</b> Adding the <code>--nocomit</code> flag to the command means that the patch RPM is only deactivated in this step.

	Command or Action	Purpose
<b>Step 2</b>	<code>sudo yum install patch_RPM --commit</code>	Commits the patch RPM. You will get an error message if you try to remove the patch RPM without first committing it.

### Example

The following example shows how to deactivate the `nxos.CSCab00001-n9k_ALL-1.0.0-7.0.3.I7.3.lib32_n9000` patch RPM:

```
bash-4.2# sudo yum erase nxos.CSCab00001-n9k_ALL-1.0.0-7.0.3.I7.3.lib32_n9000 --nocommit
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
               : protect-packages
Setting up Remove Process
Resolving Dependencies
--> Running transaction check
---> Package nxos.CSCab00001-n9k_ALL.lib32_n9000 0:1.0.0-7.0.3.I7.3 will be erased
--> Finished Dependency Resolution

Dependencies Resolved

=====
Package                Arch           Version          Repository      Size
=====
Removing:
nxos.CSCab00001-n9k_ALL lib32_n9000     1.0.0-7.0.3.I7.3 @patching      82 k

Transaction Summary
=====
Remove      1 Package

Installed size: 82 k
Is this ok [y/N]: y
Downloading Packages:
Running Transaction Check
Running Transaction Test
Transaction Test Succeeded
Running Transaction
[#####          ] 30%error: reading
/var/sysmgr/tmp/patches/CSCab00001-n9k_ALL/isan/bin/sysinfo manifest, non-printable characters
found
Erasing      : nxos.CSCab00001-n9k_ALL-1.0.0-7.0.3.I7.3.lib32_n9000          1/1
[#####          ] 90%
Removed:
nxos.CSCab00001-n9k_ALL.lib32_n9000 0:1.0.0-7.0.3.I7.3

Complete!
Install operation 143 completed successfully at Tue Mar 27 21:03:47 2018.

[#####          ] 100%
bash-4.2#
```

You must commit the patch RPM after deactivating it. If you do not commit the patch RPM after deactivating it, you will get an error message if you try to remove the patch RPM using the instructions in [Removing a Patch RPM, on page 26](#).

```
bash-4.2# sudo yum install nxos.CSCab00001-n9k_ALL-1.0.0-7.0.3.I7.3.lib32_n9000 --commit
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
               : protect-packages
```

```

groups-repo                               | 1.1 kB    00:00 ...
localdb                                    | 951 B    00:00 ...
patching                                   | 951 B    00:00 ...
thirdparty                                 | 951 B    00:00 ...
Install operation 144 completed successfully at Tue Mar 27 21:09:28 2018.

[#####] 100%
bash-4.2#

```

Enter the following command to verify that the patch RPM has been committed successfully:

```

bash-4.2# yum list --patch-only
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
               : protect-packages

groups-repo                               | 1.1 kB    00:00 ...
localdb                                    | 951 B    00:00 ...
patching                                   | 951 B    00:00 ...
thirdparty                                 | 951 B    00:00 ...
nxos.CSCab00001-n9k_ALL.lib32_n9000      1.0.0-7.0.3.I7.3  patching
bash-4.2#

```

## Removing a Patch RPM

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<code>sudo yum install --remove patch_RPM</code>	Removes an inactive patch RPM.

### Example

The following example shows how to remove the `nxos.CSCab00001-n9k_ALL-1.0.0-7.0.3.I7.3.lib32_n9000` patch RPM:

```

bash-4.2# sudo yum install --remove nxos.CSCab00001-n9k_ALL-1.0.0-7.0.3.I7.3.lib32_n9000
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
               : protect-packages

groups-repo                               | 1.1 kB    00:00 ...
localdb                                    | 951 B    00:00 ...
patching                                   | 951 B    00:00 ...
thirdparty                                 | 951 B    00:00 ...
[##### ] 50%Install operation 145 completed successfully at Tue Mar 27 21:11:05
2018.

[#####] 100%
bash-4.2#

```



**Note** If you see the following error message after attempting to remove the patch RPM:

**Install operation 11 "failed because patch was not committed". at Wed Mar 28 22:14:05 2018**

Then you did not commit the patch RPM before attempting to remove it. See [Deactivating a Patch RPM, on page 24](#) for instructions on committing the patch RPM before attempting to remove it.

Enter the following command to verify that the inactive patch RPM was removed successfully:

```
bash-4.2# yum list --patch-only
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
               : protect-packages
groups-repo                | 1.1 kB    00:00 ...
localdb                    | 951 B     00:00 ...
patching                   | 951 B     00:00 ...
patching/primary          | 197 B     00:00 ...
thirdparty                 | 951 B     00:00 ...
bash-4.2#
```

## Persistently Daemonizing an SDK- or ISO-built Third Party Process

Your application should have a startup Bash script that gets installed in `/etc/init.d/application_name`. This startup Bash script should have the following general format (for more information on this format, see <http://linux.die.net/man/8/chkconfig>).

```
#!/bin/bash
#
# <application_name> Short description of your application
#
# chkconfig: 2345 15 85
# description: Short description of your application
#
### BEGIN INIT INFO
# Provides: <application_name>
# Required-Start: $local_fs $remote_fs $network $named
# Required-Stop: $local_fs $remote_fs $network
# Description: Short description of your application
### END INIT INFO
# See how we were called.
case "$1" in
start)
# Put your startup commands here
# Set RETVAL to 0 for success, non-0 for failure
;;
stop)
# Put your stop commands here
# Set RETVAL to 0 for success, non-0 for failure
;;
status)
# Put your status commands here
# Set RETVAL to 0 for success, non-0 for failure
;;
restart|force-reload|reload)
# Put your restart commands here
# Set RETVAL to 0 for success, non-0 for failure
;;
*)
echo $"Usage: $prog {start|stop|status|restart|force-reload}"
RETVAL=2
esac

exit $RETVAL
```

# Persistently Starting Your Application from the Native Bash Shell

## Procedure

- 
- Step 1** Install your application startup Bash script that you created into `/etc/init.d/application_name`
  - Step 2** Start your application with `/etc/init.d/application_name start`
  - Step 3** Enter `chkconfig --add application_name`
  - Step 4** Enter `chkconfig --level 3 application_name on`  
Run level 3 is the standard multi-user run level, and the level at which the switch normally runs.
  - Step 5** Verify that your application is scheduled to run on level 3 by running `chkconfig --list application_name` and confirm that level 3 is set to on
  - Step 6** Verify that your application is listed in `/etc/rc3.d`. You should see something like this, where there is an 'S' followed by a number, followed by your application name (`tcollector` in this example), and a link to your Bash startup script in `../init.d/application_name`
- 

```
bash-4.2# ls -l /etc/rc3.d/tcollector
lrwxrwxrwx 1 root root 20 Sep 25 22:56 /etc/rc3.d/S15tcollector -> ../init.d/tcollector
bash-4.2#
```

## An Example Application in the Native Bash Shell

The following example demonstrates an application in the Native Bash Shell:

```
bash-4.2# cat /etc/init.d/hello.sh
#!/bin/bash

PIDFILE=/tmp/hello.pid
OUTPUTFILE=/tmp/hello

echo $$ > $PIDFILE
rm -f $OUTPUTFILE
while true
do
    echo $(date) >> $OUTPUTFILE
    echo 'Hello World' >> $OUTPUTFILE
    sleep 10
done
bash-4.2#
bash-4.2#
bash-4.2# cat /etc/init.d/hello
#!/bin/bash
#
# hello Trivial "hello world" example Third Party App
#
```

```

# chkconfig: 2345 15 85
# description: Trivial example Third Party App
#
### BEGIN INIT INFO
# Provides: hello
# Required-Start: $local_fs $remote_fs $network $named
# Required-Stop: $local_fs $remote_fs $network
# Description: Trivial example Third Party App
### END INIT INFO

PIDFILE=/tmp/hello.pid

# See how we were called.
case "$1" in
start)
    /etc/init.d/hello.sh &
    RETVAL=$?
;;
stop)
    kill -9 `cat $PIDFILE`
    RETVAL=$?
;;
status)
    ps -p `cat $PIDFILE`
    RETVAL=$?
;;
restart|force-reload|reload)
    kill -9 `cat $PIDFILE`
    /etc/init.d/hello.sh &
    RETVAL=$?
;;
*)
echo $"Usage: $prog {start|stop|status|restart|force-reload}"
RETVAL=2
esac

exit $RETVAL
bash-4.2#
bash-4.2# chkconfig --add hello
bash-4.2# chkconfig --level 3 hello on
bash-4.2# chkconfig --list hello
hello          0:off  1:off  2:on   3:on   4:on   5:on   6:off
bash-4.2# ls -al /etc/rc3.d/*hello*
lrwxrwxrwx 1 root root 15 Sep 27 18:00 /etc/rc3.d/S15hello -> ../init.d/hello
bash-4.2#
bash-4.2# reboot

```

### After reload

```

bash-4.2# ps -ef | grep hello
root      8790      1  0 18:03 ?          00:00:00 /bin/bash /etc/init.d/hello.sh
root      8973      8775  0 18:04 ttyS0    00:00:00 grep hello
bash-4.2#
bash-4.2# ls -al /tmp/hello*
-rw-rw-rw- 1 root root 205 Sep 27 18:04 /tmp/hello
-rw-rw-rw- 1 root root   5 Sep 27 18:03 /tmp/hello.pid
bash-4.2# cat /tmp/hello.pid
8790
bash-4.2# cat /tmp/hello
Sun Sep 27 18:03:49 UTC 2015
Hello World
Sun Sep 27 18:03:59 UTC 2015
Hello World
Sun Sep 27 18:04:09 UTC 2015
Hello World

```

```
Sun Sep 27 18:04:19 UTC 2015
Hello World
Sun Sep 27 18:04:29 UTC 2015
Hello World
Sun Sep 27 18:04:39 UTC 2015
Hello World
bash-4.2#
```





## CHAPTER 4

# Guest Shell

---

- [About the Guest Shell, on page 31](#)
- [Guidelines and Limitations, on page 32](#)
- [Accessing the Guest Shell, on page 36](#)
- [Resources Used for the Guest Shell, on page 37](#)
- [Capabilities in the Guestshell, on page 37](#)
- [Security Posture for Virtual Services, on page 45](#)
- [Guest File System Access Restrictions , on page 47](#)
- [Managing the Guest Shell, on page 47](#)
- [Verifying Virtual Service and Guest Shell Information, on page 57](#)
- [Persistently Starting Your Application From the Guest Shell, on page 59](#)
- [Procedure for Persistently Starting Your Application from the Guest Shell, on page 60](#)
- [An Example Application in the Guest Shell, on page 60](#)

## About the Guest Shell

In addition to the NX-OS CLI and Bash access on the underlying Linux environment, switches support access to a decoupled execution space running within a Linux Container (LXC) called the “Guest Shell”.

From within the Guest Shell the network-admin has the following capabilities:

- Access to the network over Linux network interfaces.
- Access to the switch's bootflash.
- Access to the switch's volatile tmpfs.
- Access to the switch's CLI.
- Access to the switch's host file system.
- Access to Cisco NX-API REST.
- The ability to install and run python scripts.
- The ability to install and run 32-bit and 64-bit Linux applications.

Decoupling the execution space from the native host system allows customization of the Linux environment to suit the needs of the applications without impacting the host system or applications running in other Linux Containers.

On NX-OS devices, Linux Containers are installed and managed with the virtual-service commands. The Guest Shell will appear in the virtual-service show command output.




---

**Note** By default, the Guest Shell occupies approximately 5 MB of RAM and 200 MB of bootflash when enabled. Beginning with Cisco NX-OS Release 7.0(3)I2(1) the Guest Shell occupies approximately 35 MB of RAM. Use the **guestshell destroy** command to reclaim resources if the Guest Shell is not used.

---




---

**Note** Beginning with Cisco NX-OS 7.0(3)F3(1), the Guest Shell is supported on the Cisco Nexus 9508 switch.

---

## Guidelines and Limitations

The Guest Shell has the following guideline and limitations:

### Common Guidelines Across All Releases




---

**Important** If you have performed custom work inside your installation of the Guest Shell, save your changes to bootflash, off-box storage, or elsewhere outside the Guest Shell root file system before performing an upgrade.

The `guestshell upgrade` command essentially performs a `guestshell destroy` and `guestshell enable` in succession.

---

- Use the `run guestshell` CLI command to access the Guest Shell on the Cisco Nexus device: The `run guestshell` command parallels the `run bash` command used to access the host shell. This command allows you to access the Guest Shell and get a bash prompt or run a command within the context of the Guest Shell. The command uses password-less SSH to an available port on the localhost in the default network namespace.
- `sshd` utility can secure the pre-configured SSH access into the Guest Shell by listening on `localhost` to avoid connection attempts from outside the network. `sshd` has the following features
  - It is configured for key-based authentication without fallback to passwords.
  - Only `root` can read keys use to access the Guest Shell after Guest Shell restarts.
  - Only `root` can read the file that contains the key on the host to prevent a non-privileged user with host bash access from being able to use the key to connect to the Guest Shell. Network-admin users may start another instance of `sshd` in the Guest Shell to allow remote access directly into the Guest Shell, but any user that logs into the Guest Shell is also given network-admin privilege




---

**Note** Introduced in Guest Shell 2.2 (0.2), the key file is readable for whom the user account was created for.

In addition, the Guest Shell accounts are not automatically removed, and must be removed by the network administrator when no longer needed.

Guest Shell installations prior to 2.2 (0.2) with Cisco Nexus release 7.0(3)I5(2) will not dynamically create individual user accounts.

---

- Installing the Cisco Nexus series switch software release on a fresh out-of-the-box Cisco Nexus switch will automatically enable the Guest Shell. Subsequent upgrades to the Cisco Nexus series switch software will NOT automatically upgrade Guest Shell.
- Guest Shell releases increment the major number when distributions or distribution versions change.
- Guest Shell releases increment the minor number when CVEs have been addressed. The Guest Shell will update CVEs only when CentOS makes them publically available.
- Cisco recommends using **yum update** to pick up third-party security vulnerability fixes directly from the CentOS repository. This provides the flexibility of getting updates as, and when, available without needing to wait for a Cisco NX-OS software update.

Alternatively, using the **guestshell update** command would replace the existing Guest Shell rootfs. Any customizations and software package installations would then need to be performed again within the context of this new Guest Shell rootfs.

### Upgrading from Guest Shell 1.0 to Guest Shell 2.x

Guest Shell 2.x is based upon a CentOS 7 root file system. If you have an off-box repository of `.conf` files and/or utilities that pulled the content down into Guest Shell 1.0, you will need to repeat the same deployment steps in Guest Shell 2.x. Your deployment script may need to be adjusted to account for the CentOS 7 differences.

### Guest Shell 2.x

The Cisco NX-OS automatically installs and enables the Guest Shell by default on systems with sufficient resources. However, if the device is reloaded with a Cisco NX-OS image that does not provide Guest Shell support, the installer will automatically remove the existing Guest Shell and issue a `%VMAN-2-INVALID_PACKAGE`.




---

**Note** Systems with 4GB of RAM will not enable Guest Shell by default. Use the **guestshell enable** command to install and enable Guest Shell.

---

The **install all** command validates the compatibility between the current Cisco NX-OS image against the target Cisco NX-OS image.

The following is an example output from installing an incompatible image:

```
switch#
Installer will perform compatibility check first. Please wait.
```

```

uri is: /
2014 Aug 29 20:08:51 switch %$ VDC-1 %$ %VMAN-2-ACTIVATION_STATE:
Successfully activated virtual service 'guestshell+'
Verifying image bootflash:/n9kpregs.bin for boot variable "nxos".
[#####] 100% -- SUCCESS
Verifying image type.
[#####] 100% -- SUCCESS
Preparing "" version info using image bootflash:/.
[#####] 100% -- SUCCESS
Preparing "bios" version info using image bootflash:/.
[#####] 100% -- SUCCESS
Preparing "" version info using image bootflash:/.
[#####] 100% -- SUCCESS
Preparing "" version info using image bootflash:/.
[#####] 100% -- SUCCESS
Preparing "nxos" version info using image bootflash:/.
[#####] 100% -- SUCCESS
Preparing "" version info using image bootflash:/.
[#####] 100% -- SUCCESS
Preparing "" version info using image bootflash:/.
[#####] 100% -- SUCCESS
"Running-config contains configuration that is incompatible with the new image (strict
incompatibility).
Please run 'show incompatibility-all nxos <image>' command to find out which feature
needs to be disabled.".
Performing module support checks.
[#####] 100% -- SUCCESS
Notifying services about system upgrade.
[# ] 0% -- FAIL.
Return code 0x42DD0006 ((null)).
"Running-config contains configuration that is incompatible with the new image (strict
incompatibility).
Please run 'show incompatibility-all nxos <image>' command to find out
which feature needs to be disabled."
Service "vman" in vdc 1: Guest shell not supported, do 'guestshell destroy' to remove
it and then retry ISSU
Pre-upgrade check failed. Return code 0x42DD0006 ((null)).
switch#

```




---

**Note** As a best practice, remove the Guest Shell with the **guestshell destroy** command before reloading an older Cisco Nexus image that does not support the Guest Shell.

---

### Pre-Configured SSHD Service

The Guest Shell starts an OpenSSH server upon boot up. The server listens on a randomly generated port on the localhost IP address interface 127.0.0.1 only. This provides the password-less connectivity into the Guest Shell from the NX-OS vegas-shell when the guestshell keyword is entered. If this server is killed or its configuration (residing in /etc/ssh/sshd\_config-cisco) is altered, access to the Guest Shell from the NX-OS CLI might not work.

The following steps instantiate an OpenSSH server within the Guest Shell as root:

1. Determine which network namespace or VRF you want to establish your SSH connections through.
2. Determine port you want OpenSSH to listen on. Use the NX-OS command **show socket connection** to view ports already in use.



**Note** The Guest Shell `sshd` service for password-less access uses a randomized port starting at 17680 through 49150. To avoid port conflict choose a port outside this range.

The following steps start the OpenSSH server. The examples start the OpenSSH server for management netns on IP address 10.122.84.34:2222:

1. Create the following files: `/usr/lib/systemd/system/sshd-mgmt.service` and `/etc/ssh/sshd-mgmt_config`. The files should have the following configurations:
 

```
-rw-r--r-- 1 root root 394 Apr 7 14:21 /usr/lib/systemd/system/sshd-mgmt.service
-rw----- 1 root root 4478 Apr 7 14:22 /etc/ssh/sshd-mgmt_config
```
2. Copy the Unit and Service contents from the `/usr/lib/systemd/system/ssh.service` file to `sshd-mgmt.service`.
3. Edit the `sshd-mgmt.service` file to match the following:
 

```
[Unit]
Description=OpenSSH server daemon
After=network.target sshd-keygen.service
Wants=sshd-keygen.service

[Service]
EnvironmentFile=/etc/sysconfig/ssh
ExecStartPre=/usr/sbin/sshd-keygen
ExecStart=/sbin/ip netns exec management /usr/sbin/sshd -f /etc/ssh/sshd-mgmt_config
-D $OPTIONS
ExecReload=/bin/kill -HUP $MAINPID
KillMode=process
Restart=on-failure
RestartSec=42s
[Install]
WantedBy=multi-user.target
```
4. Copy the contents of `/etc/ssh/sshd-config` to `/etc/ssh/sshd-mgmt_config`. Modify the ListenAddress IP and port as necessary.
 

```
Port 2222
ListenAddress 10.122.84.34
```
5. Start the `systemctl` daemon using the following commands:
 

```
sudo systemctl daemon-reload
sudo systemctl start sshd-mgmt.service
sudo systemctl status sshd-mgmt.service -l
```
6. (optional) Check the configuration.
 

```
ss -tnldp | grep 2222
```
7. SSH into Guest Shell:
 

```
ssh -p 2222 guestshell@10.122.84.34
```
8. Save the configuration across multiple Guest Shell or switch reboots.
 

```
sudo systemctl enable sshd-mgmt.service
```
9. For passwordless SSH/SCP and remote execution, generate the public and private keys for the user ID you want to user for SSH/SCP using the `ssh-keygen -t dsa` command.
 

The key is then stored in the `id_rsa` and `id_rsa.pub` files in the `/.ssh` directory:

```
[root@node01 ~]# cd ~/.ssh
[root@node02 .ssh]# ls -l
total 8
-rw-----. 1 root root 1675 May 5 15:01 id_rsa
-rw-r--r--. 1 root root 406 May 5 15:01 id_rsa.pub
```

10. Copy the public key into the machine you want to SSH into and fix permissions:

```
cat id_rsa.pub >> /root/.ssh/authorized_keys
chmod 700 /root/.ssh
chmod 600 /root/.ssh/*
```

11. SSH or SCP into the remote switch without a password:

```
ssh -p <port#> userid@hostname [<remote command>]
scp -P <port#> userid@hostname/filepath /destination
```

### localtime

The Guest Shell shares `/etc/localtime` with the host system.




---

**Note** If you do not want to share the same localtime with the host, this symlink can be broken and a Guest Shell specific `/etc/localtime` can be created.

---

```
switch(config)# clock timezone PDT -7 0
switch(config)# clock set 10:00:00 27 Jan 2017
Fri Jan 27 10:00:00 PDT 2017
switch(config)# show clock
10:00:07.554 PDT Fri Jan 27 2017
switch(config)# run guestshell
guestshell:~$ date
Fri Jan 27 10:00:12 PDT 2017
```

## Accessing the Guest Shell

In Cisco NX-OS, only network-admin users can access the Guest Shell by default. It is automatically enabled in the system and can be accessed using the **run guestshell** command. Consistent with the **run bash** command, these commands can be issued within the Guest Shell with the **run guestshell** *command* form of the NX-OS CLI command.




---

**Note** The Guest Shell is automatically enabled on systems with more than 4 GB of RAM.

---

```
switch# run guestshell ls -al /bootflash/*.ova
-rw-rw-rw- 1 2002 503 83814400 Aug 21 18:04 /bootflash/pup.ova
-rw-rw-rw- 1 2002 503 40724480 Apr 15 2012 /bootflash/red.ova
```



**Note** The Guest Shell starting in 2.2(0.2) will dynamically create user accounts with the same as the user logged into switch. However, all other information is NOT shared between the switch and the Guest Shell user accounts.

In addition, the Guest Shell accounts are not automatically removed, and must be removed by the network administrator when no longer needed.

## Resources Used for the Guest Shell

By default, the resources for the Guest Shell have a small impact on resources available for normal switch operations. If the network-admin requires additional resources for the Guest Shell, the **guestshell resize** *{cpu | memory | rootfs}* command changes these limits.

Resource	Default	Minimum/Maximum
CPU	1%	1/20%
Memory	400 MB	256/3840 MB
Storage	200 MB	200/2000 MB

The CPU limit is the percentage of the system compute capacity that tasks running within the Guest Shell are given when there is contention with other compute loads in the system. When there is no contention for CPU resources, the tasks within the Guest Shell are not limited.



**Note** A Guest Shell reboot is required after changing the resource allocations. This can be accomplished with the **guestshell reboot** command.

## Capabilities in the Guestshell

The Guestshell has a number of utilities and capabilities available by default.

The Guestshell is populated with CentOS 7 Linux which provides the ability to dnf install software packages built for this distribution. The Guestshell is pre-populated with many of the common tools that would naturally be expected on a networking device including **net-tools**, **iproute**, **tcpdump** and OpenSSH. For Guestshell 2.x, python 2.7.5 is included by default as is the PIP for installing additional python packages. In Guestshell 2.11, by default, python 3.6 is also included.

By default the Guestshell is a 64-bit execution space. If 32-bit support is needed, the `glibc.i686` package can be dnf installed.

The Guestshell has access to the Linux network interfaces used to represent the management and data ports of the switch. Typical Linux methods and utilities like **ifconfig** and **ethtool** can be used to collect counters. When an interface is placed into a VRF in the NX-OS CLI, the Linux network interface is placed into a network namespace for that VRF. The name spaces can be seen at `/var/run/netns` and the **ip netns** utility can be used to run in the context of different namespaces. A couple of utilities, **chvrf** and **vrinfo**, are

provided as a convenience for running in a different namespace and getting information about which namespace/vrf a process is running in.

systemd is used to manage services in CentOS 8 environments, including the Guestshell.

## NX-OS CLI in the Guest Shell

The Guest Shell provides an application to allow the user to issue NX-OS commands from the Guest Shell environment to the host network element. The **dohost** application accepts any valid NX-OS configuration or exec commands and issues them to the host network element.

When invoking the **dohost** command each NX-OS command may be in single or double quotes:

```
dohost "<NXOS CLI>"
```

The NX-OS CLI can be chained together:

```
[guestshell@guestshell ~]$ dohost "sh lldp time | in Hold" "show cdp global"
Holdtime in seconds: 120
Global CDP information:
CDP enabled globally
Refresh time is 21 seconds
Hold time is 180 seconds
CDPv2 advertisements is enabled
DeviceID TLV in System-Name(Default) Format
[guestshell@guestshell ~]$
```

The NX-OS CLI can also be chained together using the NX-OS style command chaining technique by adding a semicolon between each command. (A space on either side of the semicolon is required.):

```
[guestshell@guestshell ~]$ dohost "conf t ; cdp timer 13 ; show run | inc cdp"
Enter configuration commands, one per line. End with CNTL/Z.
cdp timer 13
[guestshell@guestshell ~]$
```




---

**Note** For release 7.0(3)I5(2) using Guest Shell 2.2 (0.2), commands issued on the host through the **dohost** command are run with privileges based on the effective role of the Guest Shell user.

Prior versions of Guest Shell will run command with network-admin level privileges.

The **dohost** command fails when the number of UDS connections to NX-API are at the maximum allowed.

---

## Network Access in Guest Shell

The NX-OS switch ports are represented in the Guest Shell as Linux network interfaces. Typical Linux methods like view stats in `/proc/net/dev`, through `ifconfig` or `ethtool` are all supported:

The Guest Shell has a number of typical network utilities included by default and they can be used on different VRFs using the **chvrf vrf command** command.

```
[guestshell@guestshell bootflash]$ ifconfig Eth1-47
Eth1-47: flags=4163<UP,BROADCAST,RUNNING,MULTICAST> mtu 1500
```



```
inet 13.0.0.47 netmask 255.255.255.0 broadcast 13.0.0.255
ether 54:7f:ee:8e:27:bc txqueuelen 100 (Ethernet)
RX packets 311442 bytes 21703008 (20.6 MiB)
RX errors 0 dropped 185 overruns 0 frame 0
TX packets 12967 bytes 3023575 (2.8 MiB)
TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0
```

Within the Guest Shell, the networking state can be monitored, but may not be changed. To change networking state, use the NX-OS CLI or the appropriate Linux utilities in the host bash shell.

The **tcpdump** command is packaged with the Guest Shell to allow packet tracing of punted traffic on the management or switch ports.

The **sudo ip netns exec management ping** utility is a common method for running a command in the context of a specified network namespace. This can be done within the Guest Shell:

```
[guestshell@guestshell bootflash]$ sudo ip netns exec management ping 10.28.38.48
PING 10.28.38.48 (10.28.38.48) 56(84) bytes of data.
64 bytes from 10.28.38.48: icmp_seq=1 ttl=48 time=76.5 ms
```

The **chvrf** utility is provided as a convenience:

```
guestshell@guestshell bootflash]$ chvrf management ping 10.28.38.48
PING 10.28.38.48 (10.28.38.48) 56(84) bytes of data.
64 bytes from 10.28.38.48: icmp_seq=1 ttl=48 time=76.5 ms
```




---

**Note** Commands that are run without the **chvrf** command are run in the current VRF/network namespace.

---

For example, to ping IP address 10.0.0.1 over the management VRF, the command is “**chvrf management ping 10.0.0.1**”. Other utilities such as **scp** or **ssh** would be similar.

Example:

```
switch# guestshell
[guestshell@guestshell ~]$ cd /bootflash
[guestshell@guestshell bootflash]$ chvrf management scp foo@10.28.38.48:/foo/index.html
index.html
foo@10.28.38.48's password:
index.html 100% 1804 1.8KB/s 00:00
[guestshell@guestshell bootflash]$ ls -al index.html
-rw-r--r-- 1 guestshe users 1804 Sep 13 20:28 index.html
[guestshell@guestshell bootflash]$
[guestshell@guestshell bootflash]$ chvrf management curl cisco.com
<!DOCTYPE HTML PUBLIC "-//IETF//DTD HTML 2.0//EN">
<html><head>
<title>301 Moved Permanently</title>
</head><body>
<h1>Moved Permanently</h1>
<p>The document has moved <a href="http://www.cisco.com/">here</a>.</p>
</body></html>
[guestshell@guestshell bootflash]$
```

To obtain a list of VRFs on the system, use the **show vrf** command natively from NX-OS or through the **dohost** command:

Example:

```
[guestshell@guestshell bootflash]$ dohost 'sh vrf'
VRF-Name    VRF-ID    State    Reason
default     1         Up       --
management 2         Up       --
red         6         Up       --
```

Within the Guest Shell, the network namespaces associated with the VRFs are what is actually used. It can be more convenient to just see which network namespaces are present:

```
[guestshell@guestshell bootflash]$ ls /var/run/netns
default management red
[guestshell@guestshell bootflash]$
```

To resolve domain names from within the Guest Shell, the resolver needs to be configured. Edit the `/etc/resolv.conf` file in the Guest Shell to include a DNS nameserver and domain as appropriate for the network.

Example:

```
nameserver 10.1.1.1
domain cisco.com
```

The nameserver and domain information should match what is configured through the NX-OS configuration.

Example:

```
switch(config)# ip domain-name cisco.com
switch(config)# ip name-server 10.1.1.1
switch(config)# vrf context management
switch(config-vrf)# ip domain-name cisco.com
switch(config-vrf)# ip name-server 10.1.1.1
```

If the switch is in a network that uses an HTTP proxy server, the `http_proxy` and `https_proxy` environment variables must be set up within the Guest Shell also.

Example:

```
export http_proxy=http://proxy.esl.cisco.com:8080
export https_proxy=http://proxy.esl.cisco.com:8080
```

These environment variables should be set in the `.bashrc` file or in an appropriate script to ensure that they are persistent.

## Access to Bootflash in Guest Shell

Network administrators can manage files with Linux commands and utilities in addition to using NX-OS CLI commands. By mounting the system bootflash at `/bootflash` in the Guest Shell environment, the network-admin can operate on these files with Linux commands.

Example:

```
find . -name "foo.txt"
rm "/bootflash/junk/foo.txt"
```

## Python in Guest Shell

Python can be used interactively or python scripts can be run in the Guest Shell.

Example:

```
guestshell:~$ python
Python 2.7.5 (default, Jun 24 2015, 00:41:19)
[GCC 4.8.3 20140911 (Red Hat 4.8.3-9)] on linux2
Type "help", "copyright", "credits" or "license" for more information.
>>>
guestshell:~$
```

The pip python package manager is included in the Guest Shell to allow the network-admin to install new python packages.

Example:

```
[guestshell@guestshell ~]$ sudo su
[root@guestshell guestshell]# pip install Markdown
Collecting Markdown
Downloading Markdown-2.6.2-py2.py3-none-any.whl (157kB)
100% |#####| 159kB 1.8MB/s
Installing collected packages: Markdown
Successfully installed Markdown-2.6.2
[root@guestshell guestshell]# pip list | grep Markdown
Markdown (2.6.2)
[root@guestshell guestshell]#
```




---

**Note** You must enter the **sudo su** command before entering the **pip install** command.

---

## Python 3 in Guest Shell versions up to 2.10 (CentOS 7)

Guest Shell 2.X provides a CentOS 7.1 environment, which does not have Python 3 installed by default. There are multiple methods of installing Python 3 on CentOS 7.1, such as using third-party repositories or building from source. Another option is using the Red Hat Software Collections, which supports installing multiple versions of Python within the same system.

To install the Red Hat Software Collections (SCL) tool:

1. Install the scl-utils package.
2. Enable the CentOS SCL repository and install one of its provided Python 3 RPMs.

```
[admin@guestshell ~]$ sudo su
[root@guestshell admin]# yum install -y scl-utils | tail
Running transaction test
Transaction test succeeded
Running transaction
  Installing : scl-utils-20130529-19.el7.x86_64                1/1
  Verifying  : scl-utils-20130529-19.el7.x86_64                1/1

Installed:
  scl-utils.x86_64 0:20130529-19.el7
```

Complete!

```
[root@guestshell admin]# yum install -y centos-release-scl | tail
Verifying : centos-release-scl-2-3.el7.centos.noarch 1/2
Verifying : centos-release-scl-rh-2-3.el7.centos.noarch 2/2
```

Installed:

```
centos-release-scl.noarch 0:2-3.el7.centos
```

Dependency Installed:

```
centos-release-scl-rh.noarch 0:2-3.el7.centos
```

Complete!

```
[root@guestshell admin]# yum install -y rh-python36 | tail
warning: /var/cache/yum/x86_64/7/centos-scl-rh/packages/rh-python36-2.0-1.el7.x86_64.rpm:
Header V4 RSA/SHA1 Signature, key ID f2ee9d55: NOKEY
http://centos.sonn.com/7.7.1908/os/x86_64/Packages/groff-base-1.22.2-8.el7.x86_64.rpm:
[Errno 12] Timeout on
http://centos.sonn.com/7.7.1908/os/x86_64/Packages/groff-base-1.22.2-8.el7.x86_64.rpm: (28,
'Operation too slow. Less than 1000 bytes/sec transferred the last 30 seconds')
Trying other mirror.
Importing GPG key 0xF2EE9D55:
Userid : "CentOS SoftwareCollections SIG
(https://wiki.centos.org/SpecialInterestGroup/SCLo) <security@centos.org>"
Fingerprint: c4db d535 blfb ba14 f8ba 64a8 4eb8 4e71 f2ee 9d55
Package : centos-release-scl-rh-2-3.el7.centos.noarch (@extras)
From : /etc/pki/rpm-gpg/RPM-GPG-KEY-CentOS-SIG-SCLo
rh-python36-python-libs.x86_64 0:3.6.9-2.el7
rh-python36-python-pip.noarch 0:9.0.1-2.el7
rh-python36-python-setuptools.noarch 0:36.5.0-1.el7
rh-python36-python-virtualenv.noarch 0:15.1.0-2.el7
rh-python36-runtime.x86_64 0:2.0-1.el7
scl-utils-build.x86_64 0:20130529-19.el7
xml-common.noarch 0:0.6.3-39.el7
zip.x86_64 0:3.0-11.el7
```

Complete!

Using SCL, it is possible to create an interactive bash session with Python 3's environment variables automatically setup.



**Note** The root user is not needed to use the SCL Python installation.

```
[admin@guestshell ~]$ scl enable rh-python36 bash
[admin@guestshell ~]$ python3
Python 3.6.9 (default, Nov 11 2019, 11:24:16)
[GCC 4.8.5 20150623 (Red Hat 4.8.5-39)] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

The Python SCL installation also provides the pip utility.

```
[admin@guestshell ~]$ pip3 install requests --user
Collecting requests
  Downloading
https://files.pythonhosted.org/packages/51/td/23c926cc841ea67cd02a00aba99ae0f828e89d72b2190f27c11d4b7b/requests-2.22.0-py2.py3-none-any.whl
(57kB)
  100% |#####| 61kB 211kB/s
Collecting idna<2.9,>=2.5 (from requests)
  Downloading
https://files.pythonhosted.org/packages/14/2c/cd551c81d8e15200e1cf41cd03869a46fe7226e7450af7a6545bfc474c9/idna-2.8-py2.py3-none-any.whl
```

```

(58kB)
100% |#####| 61kB 279kB/s
Collecting chardet<3.1.0,>=3.0.2 (from requests)
  Downloading
https://files.pythonhosted.org/packages/bc/a9/01ffefbf562e427466487b4db1ddec7ca55ec7510b22e4c51f14098443b8/chardet-3.0.4-py2.py3-none-any.whl
(133kB)
100% |#####| 143kB 441kB/s
Collecting certifi>=2017.4.17 (from requests)
  Downloading
https://files.pythonhosted.org/packages/b9/63/d50cac9eaa05b006c55a399c3f1db9ba7b5a24b7890bc9cf5f5b9e99/certifi-2019.11.28-py2.py3-none-any.whl
(156kB)
100% |#####| 163kB 447kB/s
Collecting urllib3!=1.25.0,!1.25.1,<1.26,>=1.21.1 (from requests)
  Downloading
https://files.pythonhosted.org/packages/e8/74/6e4f91745020f967d09332b2b89b1009095734692ab88a4afe91b77f/urllib3-1.25.8-py2.py3-none-any.whl
(125kB)
100% |#####| 133kB 656kB/s
Installing collected packages: idna, chardet, certifi, urllib3, requests
Successfully installed certifi-2019.11.28 chardet-3.0.4 idna-2.8 requests-2.22.0
urllib3-1.25.8
You are using pip version 9.0.1, however version 20.0.2 is available.
You should consider upgrading via the 'pip install --upgrade pip' command.
[admin@guestshell ~]$ python3
Python 3.6.9 (default, Nov 11 2019, 11:24:16)
[GCC 4.8.5 20150623 (Red Hat 4.8.5-39)] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>> import requests
>>> requests.get("https://cisco.com")
<Response [200]>

```

The default Python 2 installation can be used alongside the SCL Python installation.

```

[admin@guestshell ~]$ which python3
/opt/rh/rh-python36/root/usr/bin/python3
[admin@guestshell ~]$ which python2
/bin/python2
[admin@guestshell ~]$ python2
Python 2.7.5 (default, Aug 7 2019, 00:51:29)
[GCC 4.8.5 20150623 (Red Hat 4.8.5-39)] on linux2
Type "help", "copyright", "credits" or "license" for more information.
>>> print 'Hello world!'
Hello world!

```

Software Collections makes it possible to install multiple versions of the same RPM on a system. In this case, it is possible to install Python 3.5 in addition to Python 3.6.

```

[admin@guestshell ~]$ sudo yum install -y rh-python35 | tail
Dependency Installed:
rh-python35-python.x86_64 0:3.5.1-13.e17
rh-python35-python-devel.x86_64 0:3.5.1-13.e17
rh-python35-python-libs.x86_64 0:3.5.1-13.e17
rh-python35-python-pip.noarch 0:7.1.0-2.e17
rh-python35-python-setuptools.noarch 0:18.0.1-2.e17
rh-python35-python-virtualenv.noarch 0:13.1.2-2.e17
rh-python35-runtime.x86_64 0:2.0-2.e17

```

Complete!

```

[admin@guestshell ~]$ scl enable rh-python35 python3
Python 3.5.1 (default, May 29 2019, 15:41:33)
[GCC 4.8.5 20150623 (Red Hat 4.8.5-36)] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>

```



**Note** Creating new interactive bash sessions when multiple Python versions are installed in SCL can cause an issue where the libpython shared object file cannot be loaded. There is a workaround where you can use the **source scl\_source enable python-installation** command to properly set up the environment in the current bash session.

The default Guest Shell storage capacity is not sufficient to install Python 3. Use the **guestshell resize rootfs size-in-MB** command to increase the size of the file system. Typically, setting the rootfs size to 550 MB is sufficient.

## Installing RPMs in the Guest Shell

The `/etc/yum.repos.d/CentOS-Base.repo` file is set up to use the CentOS mirror list by default. Follow instructions in that file if changes are needed.

Yum can be pointed to one or more repositories at any time by modifying the `yumrepo_x86_64.repo` file or by adding a new `.repo` file in the `repos.d` directory.

For applications to be installed inside Guest Shell 2.x, go to the CentOS 7 repo at [http://mirror.centos.org/centos/7/os/x86\\_64/Packages/](http://mirror.centos.org/centos/7/os/x86_64/Packages/).

Yum resolves the dependencies and installs all the required packages.

```
[guestshell@guestshell ~]$ sudo chvrf management yum -y install glibc.i686
Loaded plugins: fastestmirror
Loading mirror speeds from cached hostfile
* base: bay.uchicago.edu
* extras: pubmirrors.dal.coreospace.com
* updates: mirrors.cmich.edu
Resolving Dependencies
"-->" Running transaction check
"-->" Package glibc.i686 0:2.17-78.el7 will be installed
"-->" Processing Dependency: libfreebl3.so(NSSRAWHASH_3.12.3) for package:
glibc-2.17-78.el7.i686
"-->" Processing Dependency: libfreebl3.so for package: glibc-2.17-78.el7.i686
"-->" Running transaction check
"-->" Package nss-softokn-freebl.i686 0:3.16.2.3-9.el7 will be installed
"-->" Finished Dependency Resolution
```

Dependencies Resolved

---

Package Arch Version Repository Size

---

Installing:

glibc i686 2.17-78.el7 base 4.2 M

Installing for dependencies:

nss-softokn-freebl i686 3.16.2.3-9.el7 base 187 k

Transaction Summary

---

Install 1 Package (+1 Dependent package)

Total download size: 4.4 M

Installed size: 15 M

Downloading packages:

Delta RPMs disabled because /usr/bin/applydeltarpm not installed.

(1/2): nss-softokn-freebl-3.16.2.3-9.el7.i686.rpm | 187 kB 00:00:25

(2/2): glibc-2.17-78.el7.i686.rpm | 4.2 MB 00:00:30

---

```

Total 145 kB/s | 4.4 MB 00:00:30
Running transaction check
Running transaction test
Transaction test succeeded
Running transaction
Installing : nss-softokn-freebl-3.16.2.3-9.el7.i686 1/2
Installing : glibc-2.17-78.el7.i686 2/2
error: lua script failed: [string "%triggerin(glibc-common-2.17-78.el7.x86_64)":1: attempt
  to compare number with nil
Non-fatal "<"unknown">" scriptlet failure in rpm package glibc-2.17-78.el7.i686
Verifying : glibc-2.17-78.el7.i686 1/2
Verifying : nss-softokn-freebl-3.16.2.3-9.el7.i686 2/2

Installed:
glibc.i686 0:2.17-78.el7

Dependency Installed:
nss-softokn-freebl.i686 0:3.16.2.3-9.el7

Complete!

```




---

**Note** When more space is needed in the Guest Shell root file system for installing or running packages, the **guestshell resize roofs *size-in-MB*** command is used to increase the size of the file system.

---




---

**Note** Some open source software packages from the repository might not install or run as expected in the Guest Shell as a result of restrictions that have been put into place to protect the integrity of the host system.

---

## Security Posture for Virtual Services

Use of the Guest Shell and virtual services in switches are only two of the many ways that the network-admin can manage or extend the functionality of the system. These options are geared toward providing an execution environment that is decoupled from the native host context. This separation allows the introduction of software into the system that may not be compatible with the native execution environment. It also allows the software to run in an environment that does not interfere with the behavior, performance, or scale of the system.

### Digitally Signed Application Packages

By default, Cisco network elements require applications to provide a valid Cisco digital signature at runtime. The Cisco digital signature ensures the integrity of Cisco-developed packages and applications.

The Cisco Nexus 9000 Series switches support the configuration of a signing level policy to allow for unsigned OVA software packages. To allow unsigned and Cisco-signed packages for creating virtual-services, the network-admin can configure the following:

```

virtual-service
  signing level unsigned

```



**Note** The Guest Shell software package has a Cisco signature and does not require this configuration.

## Kernel Vulnerability Patches

Cisco responds to pertinent Common Vulnerabilities and Exposures (CVEs) with platform updates that address known vulnerabilities.

## ASLR and X-Space Support

Cisco 9000 NX-OS supports the use of Address Space Layout Randomization (ASLR) and Executable Space Protection (X-Space) for runtime defense. The software in Cisco-signed packages make use of this capability. If other software is installed on the system, it is recommended that it be built using a host OS and development toolchain that supports these technologies. Doing so reduces the potential attack surface that the software presents to potential intruders.

## Namespace Isolation

The host and virtual service are separated into separate namespaces. This provides the basis of separating the execution spaces of the virtual services from the host. Namespace isolation helps to protect against data loss and data corruption due to accidental or intentional data overwrites between trust boundaries. It also helps to ensure the integrity of confidential data by preventing data leakage between trust boundaries: an application in one virtual service cannot access data in another virtual service

## Root-User Restrictions

As a best practice for developing secure code, it is recommend running applications with the least privilege needed to accomplish the assigned task. To help prevent unintended accesses, software added into the Guest Shell should follow this best practice.

All processes within a virtual service are subject to restrictions imposed by reduced Linux capabilities. If your application must perform operations that require root privileges, restrict the use of the root account to the smallest set of operations that absolutely requires root access, and impose other controls such as a hard limit on the amount of time that the application can run in that mode.

The set of Linux capabilities that are dropped for root within virtual services follow:

CAP_SYS_BOOT	CAP_MKNOD	CAP_SYS_PACCT
CAP_SYS_MODULE	CAP_MAC_OVERRIDE	CAP_SYS_RESOURCE
CAP_SYS_TIME	CAP_SYS_RAWIO	CAP_AUDIT_WRITE
CAP_AUDIT_CONTROL	CAP_SYS_NICE	CAP_NET_ADMIN
CAP_MAC_ADMIN	CAP_SYS_PTRACE	

As root within a virtual service, bind mounts may be used as well as tmpfs and ramfs mounts. Other mounts are prevented.



## Resource Management

A Denial-of-Service (DoS) attack attempts to make a machine or network resource unavailable to its intended users. Misbehaving or malicious application code can cause DoS as the result of over-consumption of connection bandwidth, disk space, memory, and other resources. The host provides resource-management features that ensure fair allocation of resources among all virtual services on the host.

## Guest File System Access Restrictions

To preserve the integrity of the files within the virtual services, the file systems of the virtual services are not accessible from the NX-OS CLI. If a given virtual-service allows files to be modified, it needs to provide an alternate means by which this can be done (i.e. **yum install**, **scp**, **ftp**, etc).

`bootflash:` and `volatile:` of the host are mounted as `/bootflash` and `/volatile` within the Guest Shell. A network-admin can access files on this media using the NX-OS `exec` commands from the host or using Linux commands from within the Guest Shell.

## Managing the Guest Shell

The following are commands to manage the Guest Shell:

**Table 2: Guest Shell CLI Commands**

Commands	Description
<b>guestshell enable</b> { <b>package</b> [ <i>guest shell OVA file</i>   <i>rootfs-file-URI</i> ]}	<ul style="list-style-type: none"> <li>When <i>guest shell OVA file</i> is specified: Installs and activates the Guest Shell using the OVA that is embedded in the system image.  Installs and activates the Guest Shell using the specified software package (OVA file) or the embedded package from the system image (when no package is specified). Initially, Guest Shell packages are only available by being embedded in the system image.  When the Guest Shell is already installed, this command enables the installed Guest Shell. Typically this is used after a <b>guestshell disable</b> command.</li> <li>When <i>rootfs-file-URI</i> is specified: Imports a Guest Shell <b>rootfs</b> when the Guest Shell is in a destroyed state. This command brings up the Guest Shell with the specified package.</li> </ul>
<b>guestshell export rootfs package</b> <i>destination-file-URI</i>	Exports a Guest Shell <b>rootfs</b> file to a local URI (bootflash, USB1, etc.). (7.0(3)I7(1) and later releases)

Commands	Description
<b>guestshell disable</b>	Shuts down and disables the Guest Shell.
<b>guestshell upgrade</b> {package [ <i>guest shell OVA file</i>   <i>rootfs-file-URI</i> ]}	<ul style="list-style-type: none"> <li>When <i>guest shell OVA file</i> is specified: <p>Deactivates and upgrades the Guest Shell using the specified software package (OVA file) or the embedded package from the system image (if no package is specified). Initially Guest Shell packages are only available by being embedded in the system image.</p> <p>The current rootfs for the Guest Shell is replaced with the rootfs in the software package. The Guest Shell does not make use of secondary filesystems that persist across an upgrade. Without persistent secondary filesystems, a <b>guestshell destroy</b> command followed by a <b>guestshell enable</b> command could also be used to replace the rootfs. When an upgrade is successful, the Guest Shell is activated.</p> <p>You are prompted for a confirmation prior to carrying out the upgrade command.</p> </li> <li>When <i>rootfs-file-URI</i> is specified: <p>Imports a Guest Shell <b>rootfs</b> file when the Guest Shell is already installed. This command removes the existing Guest Shell and installs the specified package.</p> </li> </ul>
<b>guestshell reboot</b>	<p>Deactivates the Guest Shell and then reactivates it. You are prompted for a confirmation prior to carrying out the reboot command.</p> <p><b>Note</b> This is the equivalent of a <b>guestshell disable</b> command followed by a <b>guestshell enable</b> command in exec mode.</p> <p>This is useful when processes inside the Guest Shell have been stopped and need to be restarted. The <b>run guestshell</b> command relies on <code>sshd</code> running in the Guest Shell.</p> <p>If the command does not work, the <code>sshd</code> process may have been inadvertently stopped. Performing a reboot of the Guest Shell from the NX-OS CLI allows it to restart and restore the command.</p>

Commands	Description
<b>guestshell destroy</b>	<p>Deactivates and uninstalls the Guest Shell. All resources associated with the Guest Shell are returned to the system. The <b>show virtual-service global</b> command indicates when these resources become available.</p> <p>Issuing this command results in a prompt for a confirmation prior to carrying out the destroy command.</p>
<b>guestshell</b> <b>run guestshell</b>	Connects to the Guest Shell that is already running with a shell prompt. No username/password is required.
<b>guestshell run</b> <i>command</i> <b>run guestshell</b> <i>command</i>	<p>Executes a Linux/UNIX command within the context of the Guest Shell environment.</p> <p>After execution of the command you are returned to the switch prompt.</p>
<b>guestshell resize</b> [cpu   memory   rootfs]	<p>Changes the allotted resources available for the Guest Shell. The changes take effect the next time the Guest Shell is enabled or rebooted.</p> <p><b>Note</b>      Resize values are cleared when the <b>guestshell destroy</b> command is used.</p>
<b>guestshell sync</b>	On systems that have active and standby supervisors, this command synchronizes the Guest Shell contents from the active supervisor to the standby supervisor. The network-admin issues this command when the Guest Shell rootfs has been set up to a point that they would want the same rootfs used on the standby supervisor when it becomes the active supervisor. If this command is not used, the Guest Shell is freshly installed when the standby supervisor transitions to an active role using the Guest Shell package available on that supervisor.
<b>virtual-service reset force</b>	<p>In the event that the guestshell or virtual-services cannot be managed, even after a system reload, the reset command is used to force the removal of the Guest Shell and all virtual-services. The system needs to be reloaded for the cleanup to happen. No Guest Shell or additional virtual-services can be installed or enabled after issuing this command until after the system has been reloaded.</p> <p>You are prompted for a confirmation prior to initiating the reset.</p>




---

**Note** Administrative privileges are necessary to enable/disable and to gain access to the Guest Shell environment.

---




---

**Note** The Guest Shell is implemented as a Linux container (LXC) on the host system. On NX-OS devices, LXC's are installed and managed with the `virtual-service` commands. The Guest Shell appears in the `virtual-service` commands as a virtual service named `guestshell+`.

---

## Disabling the Guest Shell

The `guestshell disable` command shuts down and disables the Guest Shell.

When the Guest Shell is disabled and the system is reloaded, the Guest Shell remains disabled.

Example:

```
switch# show virtual-service list
Virtual Service List:
Name                               Status           Package Name
-----
guestshell+                         Activated        guestshell.ova
switch# guestshell disable
You will not be able to access your guest shell if it is disabled. Are you sure you want
to disable the guest shell? (y/n) [n] y

2014 Jul 30 19:47:23 switch %$ VDC-1 %$ %VMAN-2-ACTIVATION_STATE: Deactivating virtual
service 'guestshell+'
2014 Jul 30 18:47:29 switch %$ VDC-1 %$ %VMAN-2-ACTIVATION_STATE: Successfully deactivated
virtual service 'guestshell+'
switch# show virtual-service list
Virtual Service List:
Name                               Status           Package Name
-----
guestshell+                         Deactivated      guestshell.ova
```




---

**Note** The Guest Shell is reactivated with the `guestshell enable` command.

---

## Destroying the Guest Shell

The `guestshell destroy` command uninstalls the Guest Shell and its artifacts. The command does not remove the Guest Shell OVA.

When the Guest Shell is destroyed and the system is reloaded, the Guest Shell remains destroyed.

```
switch# show virtual-service list
Virtual Service List:
Name                               Status           Package Name
-----
guestshell+                         Deactivated      guestshell.ova

switch# guestshell destroy
```

```

You are about to destroy the guest shell and all of its contents. Be sure to save your work.
Are you sure you want to continue? (y/n) [n] y
2014 Jul 30 18:49:10 switch %$ VDC-1 %$ %VMAN-2-INSTALL_STATE: Destroying virtual service
'guestshell+'
2014 Jul 30 18:49:10 switch %$ VDC-1 %$ %VMAN-2-INSTALL_STATE: Successfully destroyed
virtual service 'guestshell +'

switch# show virtual-service list
Virtual Service List:

```




---

**Note** The Guest Shell can be re-enabled with the **guestshell enable** command.

---




---

**Note** If you do not want to use the Guest Shell, you can remove it with the **guestshell destroy** command. Once the Guest Shell has been removed, it remains removed for subsequent reloads. This means that when the Guest Shell container has been removed and the switch is reloaded, the Guest Shell container is not automatically started.

---

## Enabling the Guest Shell

The **guestshell enable** command installs the Guest Shell from a Guest Shell software package. By default, the package embedded in the system image is used for the installation. The command is also used to reactivate the Guest Shell if it has been disabled.

When the Guest Shell is enabled and the system is reloaded, the Guest Shell remains enabled.

Example:

```

switch# show virtual-service list
Virtual Service List:
switch# guestshell enable
2014 Jul 30 18:50:27 switch %$ VDC-1 %$ %VMAN-2-INSTALL_STATE: Installing virtual service
'guestshell+'
2014 Jul 30 18:50:42 switch %$ VDC-1 %$ %VMAN-2-INSTALL_STATE: Install success virtual
service 'guestshell+'; Activating

2014 Jul 30 18:50:42 switch %$ VDC-1 %$ %VMAN-2-ACTIVATION_STATE: Activating virtual service
'guestshell+'
2014 Jul 30 18:51:16 switch %$ VDC-1 %$ %VMAN-2-ACTIVATION_STATE: Successfully activated
virtual service 'guestshell+'

switch# show virtual-service list
Virtual Service List:
Name                Status           Package Name
guestshell+         Activated        guestshell.ova

```

## Replicating the Guest Shell

Beginning with Cisco NX-OS release 7.0(3)I7(1), a Guest Shell **rootfs** that is customized on one switch can be deployed onto multiple switches.

The approach is to customize and then export the Guest Shell **rootfs** and store it on a file server. A POAP script can download (import) the Guest Shell **rootfs** to other switches and install the specific Guest Shell across many devices simultaneously.

### Exporting Guest Shell **rootfs**

Use the **guestshell export rootfs package** *destination-file-URI* command to export a Guest Shell **rootfs**.

The *destination-file-URI* parameter is the name of the file that the Guest Shell **rootfs** is copied to. This file allows for local URI options (bootflash, USB1, etc.).

The **guestshell export rootfs package** command:

- Disables the Guest Shell (if already enabled).
- Creates a Guest Shell import YAML file and inserts it into the /cisco directory of the **rootfs** ext4 file.
- Copies the **rootfs** ext4 file to the target URI location.
- Re-enables the Guest Shell if it had been previously enabled.

### Importing Guest Shell **rootfs**

When importing a Guest Shell **rootfs**, there are two situations to consider:

- Use the **guestshell enable package** *rootfs-file-URI* command to import a Guest Shell **rootfs** when the Guest Shell is in a destroyed state. This command brings up the Guest Shell with the specified package.
- Use the **guestshell upgrade package** *rootfs-file-URI* command to import a Guest Shell **rootfs** when the Guest Shell is already installed. This command removes the existing Guest Shell and installs the specified package.

The *rootfs-file-URI* parameter is the **rootfs** file stored on local storage (bootflash, USB, etc.).

When this command is executed with a file that is on bootflash, the file is moved to a storage pool on bootflash.

As a best practice, you should copy the file to the bootflash and validate the md5sum before using the **guestshell upgrade package** *rootfs-file-URI* command.




---

**Note** The **guestshell upgrade package** *rootfs-file-URI* command can be executed from within the Guest Shell.

---




---

**Note** The **rootfs** file is not a Cisco signed package, you must configure to allow unsigned packages before enabling as shown in the example:

---

```
(config-virt-serv-global)# signing level unsigned
Note: Support for unsigned packages has been user-enabled. Unsigned packages are not endorsed
by Cisco. User assumes all responsibility.
```

---



- 
- Note** To restore the embedded version of the **rootfs**:
- Use the **guestshell upgrade** command (without additional parameters) when the Guest Shell has already been installed.
  - Use the **guestshell enable** command (without additional parameters) when the Guest Shell had been destroyed.
- 



- 
- Note** When running this command from within a Guest Shell, or outside a switch using NX-API, you must set **terminal dont-ask** to skip any prompts.
- 

The **guestshell enable package *rootfs-file-URI*** command:

- Performs basic validation of the **rootfs** file.
- Moves the **rootfs** into the storage pool.
- Mounts the **rootfs** to extract the YAML file from the **/cisco** directory.
- Parses the YAML file to obtain VM definition (including resource requirements).
- Activates the Guest Shell.

Example workflow for **guestshell enable** :

```
switch# copy scp://user@10.1.1.1/my_storage/gs_rootfs.ext4 bootflash: vrf management
switch# guestshell resize cpu 8
Note: System CPU share will be resized on Guest shell enable
switch# guestshell enable package bootflash:gs_rootfs.ext4
Validating the provided rootfs
switch# 2017 Jul 31 14:58:01 switch %$ VDC-1 %$ %VMAN-2-INSTALL_STATE: Installing virtual
service 'guestshell+'
2017 Jul 31 14:58:09 switch %$ VDC-1 %$ %VMAN-2-INSTALL_STATE: Install success virtual
service 'guestshell+'; Activating
2017 Jul 31 14:58:09 switch %$ VDC-1 %$ %VMAN-2-ACTIVATION_STATE: Activating virtual service
'guestshell+'
2017 Jul 31 14:58:33 switch %$ VDC-1 %$ %VMAN-2-ACTIVATION_STATE: Successfully activated
virtual service 'guestshell+'
```



- 
- Note** Workflow for **guestshell upgrade** is preceded by the existing Guest Shell being destroyed.
- 



- 
- Note** Resize values are cleared when the **guestshell upgrade** command is used.
- 

## Importing YAML File

A YAML file that defines some user modifiable characteristics of the Guest Shell is automatically created as a part of the export operation. It is embedded into the Guest Shell **rootfs** in the **/cisco** directory. It is not a

complete descriptor for the Guest Shell container. It only contains some of the parameters that are user modifiable.

Example of a Guest Shell import YAML file:

```
---
import-schema-version: "1.0"
info:
  name: "GuestShell"
  version: "2.2(0.3)"
  description: "Exported GuestShell: 20170216T175137Z"
app:
  apptype: "lxc"
  cpuarch: "x86_64"
  resources:
    cpu: 3
    memory: 307200
    disk:
      - target-dir: "/"
        capacity: 250
...
```

The YAML file is generated when the **guestshell export rootfs package** command is executed. The file captures the values of the currently running Guest Shell.

The info section contains non-operational data that is used to help identify the Guest Shell. Some of the information will be displayed in the output of the **show guestshell detail** command.

The description value is an encoding of the UTC time when the YAML file was created. The time string format is the same as DTSTAMP in RFC5545 (iCal).

The resources section describes the resources required for hosting the Guest Shell. The value "/" for the target-dir in the example identifies the disk as the **rootfs**.




---

**Note** If resized values were specified while the Guest Shell was destroyed, those values take precedence over the values in the import YAML file when the **guestshell enable package** command is used.

---

The cpuarch value indicates the CPU architecture that is expected for the container to run.

You can modify the YAML file (such as the description or increase the resource parameters, if appropriate) after the export operation is complete .

Cisco provides a python script that you can run to validate a modified YAML file with a JSON schema. It is not meant to be a complete test (for example, device-specific resource limits are not checked), but it is able to flag common errors. The python script with examples is located at [Guest Shell Import Export](#). The following JSON file describes the schema for version 1.0 of the Guest Shell import YAML .

```
{
  "$schema": "http://json-schema.org/draft-04/schema#",
  "title": "Guest Shell import schema",
  "description": "Schema for Guest Shell import descriptor file - ver 1.0",
  "copyright": "2017 by Cisco systems, Inc. All rights reserved.",
  "id": "",
  "type": "object",
  "additionalProperties": false,
  "properties": {
    "import-schema-version": {
      "id": "/import-schema-version",
```



```

    "type": "string",
    "minLength": 1,
    "maxLength": 20,
    "enum": [
      "1.0"
    ]
  },
  "info": {
    "id": "/info",
    "type": "object",
    "additionalProperties": false,
    "properties": {
      "name": {
        "id": "/info/name",
        "type": "string",
        "minLength": 1,
        "maxLength": 29
      },
      "description": {
        "id": "/info/description",
        "type": "string",
        "minLength": 1,
        "maxLength": 199
      },
      "version": {
        "id": "/info/version",
        "type": "string",
        "minLength": 1,
        "maxLength": 63
      },
      "author-name": {
        "id": "/info/author-name",
        "type": "string",
        "minLength": 1,
        "maxLength": 199
      },
      "author-link": {
        "id": "/info/author-link",
        "type": "string",
        "minLength": 1,
        "maxLength": 199
      }
    }
  },
  "app": {
    "id": "/app",
    "type": "object",
    "additionalProperties": false,
    "properties": {
      "apptype": {
        "id": "/app/apptype",
        "type": "string",
        "minLength": 1,
        "maxLength": 63,
        "enum": [
          "lxc"
        ]
      },
      "cpuarch": {
        "id": "/app/cpuarch",
        "type": "string",
        "minLength": 1,
        "maxLength": 63,
        "enum": [

```

```

    "x86_64"
  ]
},
"resources": {
  "id": "/app/resources",
  "type": "object",
  "additionalProperties": false,
  "properties": {
    "cpu": {
      "id": "/app/resources/cpu",
      "type": "integer",
      "multipleOf": 1,
      "maximum": 100,
      "minimum": 1
    },
    "memory": {
      "id": "/app/resources/memory",
      "type": "integer",
      "multipleOf": 1024,
      "minimum": 1024
    },
    "disk": {
      "id": "/app/resources/disk",
      "type": "array",
      "minItems": 1,
      "maxItems": 1,
      "uniqueItems": true,
      "items": {
        "id": "/app/resources/disk/0",
        "type": "object",
        "additionalProperties": false,
        "properties": {
          "target-dir": {
            "id": "/app/resources/disk/0/target-dir",
            "type": "string",
            "minLength": 1,
            "maxLength": 1,
            "enum": [
              "/"
            ]
          },
          "file": {
            "id": "/app/resources/disk/0/file",
            "type": "string",
            "minLength": 1,
            "maxLength": 63
          },
          "capacity": {
            "id": "/app/resources/disk/0/capacity",
            "type": "integer",
            "multipleOf": 1,
            "minimum": 1
          }
        }
      }
    }
  }
},
"required": [
  "memory",
  "disk"
]
}
},
"required": [

```

```
        "apptype",
        "cpuarch",
        "resources"
    ]
}
},
"required": [
    "app"
]
}
```

## show guestshell Command

The output of the **show guestshell detail** command includes information that indicates whether the Guest Shell was imported or was installed from an OVA.

Example of the **show guestshell detail** command after importing **rootfs**.

```
switch# show guestshell detail
Virtual service guestshell+ detail
State                : Activated
Package information
  Name                : rootfs_puppet
  Path                : usb2:/rootfs_puppet
  Application
    Name              : GuestShell
    Installed version : 2.3(0.0)
    Description       : Exported GuestShell: 20170613T173648Z
  Signing
    Key type          : Unsigned
    Method            : Unknown
  Licensing
    Name              : None
    Version           : None
```

## Verifying Virtual Service and Guest Shell Information

You can verify virtual service and Guest Shell information with the following commands:

Command	Description
<pre> <b>show virtual-service global</b>  switch# <b>show virtual-service global</b>  Virtual Service Global State and Virtualization Limits:  Infrastructure version : 1.11 Total virtual services installed : 1 Total virtual services activated : 1  Machine types supported : LXC Machine types disabled : KVM  Maximum VCPUs per virtual service : 1  Resource virtualization limits: Name Quota Committed Available ----- system CPU (%) 20 1 19 memory (MB) 3840 256 3584 bootflash (MB) 8192 200 7992 switch# </pre>	<p>Displays the global state and limits for virtual services.</p>
<pre> <b>show virtual-service list</b>  switch# <b>show virtual-service list *</b>  Virtual Service List:  Name                Status           Package Name ----- guestshell+         Activated        guestshell.ova chef                 Installed        chef-0.8.1-n9000-spa-k9.ova </pre>	<p>Displays a summary of the virtual services, the status of the virtual services, and installed software packages.</p>

Command	Description
<pre> <b>show guestshell detail</b>  switch# <b>show guestshell detail</b> Virtual service guestshell+ detail   State                : Activated   Package information     Name                : guestshell.ova     Path                : /isan/bin/guestshell.ova   Application     Name                : GuestShell     Installed version   : 2.2(0.2)     Description         : Cisco Systems Guest Shell   Signing     Key type            : Cisco key     Method              : SHA-1   Licensing     Name                : None     Version             : None   Resource reservation     Disk                : 400 MB     Memory              : 256 MB     CPU                 : 1% system CPU    Attached devices   Type                Name                Alias   -----   Disk                _rootfs   Disk                /cisco/core   Serial/shell   Serial/aux   Serial/Syslog       serial2   Serial/Trace        serial3 </pre>	<p>Displays details about the guestshell package (such as version, signing resources, and devices).</p>

## Persistently Starting Your Application From the Guest Shell

Your application should have a `systemd / systemctl` service file that gets installed in `/usr/lib/systemd/system/application_name.service`. This service file should have the following general format:

```

[Unit]
Description=Put a short description of your application here

[Service]
ExecStart=Put the command to start your application here
Restart=always
RestartSec=10s

[Install]
WantedBy=multi-user.target

```



**Note** To run `systemd` as a specific user, add `User=<username>` to the `[Service]` section of your service.

# Procedure for Persistently Starting Your Application from the Guest Shell

## Procedure

- 
- Step 1** Install your application service file that you created above into `/usr/lib/systemd/system/application_name.service`
  - Step 2** Start your application with `systemctl start application_name`
  - Step 3** Verify that your application is running with `systemctl status -l application_name`
  - Step 4** Enable your application to be restarted on reload with `systemctl enable application_name`
  - Step 5** Verify that your application is running with `systemctl status -l application_name`
- 

## An Example Application in the Guest Shell

The following example demonstrates an application in the Guest Shell:

```
root@guestshell guestshell]# cat /etc/init.d/hello.sh
#!/bin/bash

OUTPUTFILE=/tmp/hello

rm -f $OUTPUTFILE
while true
do
    echo $(date) >> $OUTPUTFILE
    echo 'Hello World' >> $OUTPUTFILE
    sleep 10
done
[root@guestshell guestshell]#
[root@guestshell guestshell]#
[root@guestshell system]# cat /usr/lib/systemd/system/hello.service
[Unit]
Description=Trivial "hello world" example daemon

[Service]
ExecStart=/etc/init.d/hello.sh &
Restart=always
RestartSec=10s

[Install]
WantedBy=multi-user.target
[root@guestshell system]#
[root@guestshell system]# systemctl start hello
[root@guestshell system]# systemctl enable hello
[root@guestshell system]# systemctl status -l hello
hello.service - Trivial "hello world" example daemon
   Loaded: loaded (/usr/lib/systemd/system/hello.service; enabled)
   Active: active (running) since Sun 2015-09-27 18:31:51 UTC; 10s ago
     Main PID: 355 (hello.sh)
       CGroup: /system.slice/hello.service
```

```
##355 /bin/bash /etc/init.d/hello.sh &
##367 sleep 10
```

```
Sep 27 18:31:51 guestshell hello.sh[355]: Executing: /etc/init.d/hello.sh &
[root@guestshell system]#
[root@guestshell guestshell]# exit
exit
[guestshell@guestshell ~]$ exit
logout
switch# reload
This command will reboot the system. (y/n)? [n] y
```

#### After reload

```
[root@guestshell guestshell]# ps -ef | grep hello
root      20      1  0 18:37 ?        00:00:00 /bin/bash /etc/init.d/hello.sh &
root      123     108  0 18:38 pts/4    00:00:00 grep --color=auto hello
[root@guestshell guestshell]#
[root@guestshell guestshell]# cat /tmp/hello
Sun Sep 27 18:38:03 UTC 2015
Hello World
Sun Sep 27 18:38:13 UTC 2015
Hello World
Sun Sep 27 18:38:23 UTC 2015
Hello World
Sun Sep 27 18:38:33 UTC 2015
Hello World
Sun Sep 27 18:38:43 UTC 2015
Hello World
[root@guestshell guestshell]#
```

Running under `systemd` / `systemctl`, your application is automatically restarted if it dies (or if you kill it). The Process ID is originally 226. After killing the application, it is automatically restarted with a Process ID of 257.

```
[root@guestshell guestshell]# ps -ef | grep hello
root      226      1  0 19:02 ?        00:00:00 /bin/bash /etc/init.d/hello.sh &
root      254     116  0 19:03 pts/4    00:00:00 grep --color=auto hello
[root@guestshell guestshell]#
[root@guestshell guestshell]# kill -9 226
[root@guestshell guestshell]#
[root@guestshell guestshell]# ps -ef | grep hello
root      257      1  0 19:03 ?        00:00:00 /bin/bash /etc/init.d/hello.sh &
root      264     116  0 19:03 pts/4    00:00:00 grep --color=auto hello
[root@guestshell guestshell]#
```







## CHAPTER 5

# Broadcom Shell

- [About the Broadcom Shell, on page 63](#)
- [Accessing the Broadcom Shell \(bcm-shell\), on page 63](#)
- [Examples of Broadcom Shell Commands, on page 67](#)

## About the Broadcom Shell

The Cisco Nexus 9000 Series device front panel and fabric module line cards contain Broadcom Network Forwarding Engines (NFE). The number of NFEs varies depending upon the specific model of the front panel line card (LC) or the fabric module (FM).

### Guidelines and Limitations

You can access and read information from the T2 ASICs without any limitations. However, Cisco does not recommend changing the T2 configuration settings. Use caution when accessing the Broadcom Shell.

## Accessing the Broadcom Shell (bcm-shell)

The following sections describe approaches to access the Broadcom Shell (bcm-shell).

### Accessing bcm-shell with the CLI API

The bcm-shell commands are passed directly from the Cisco NX-OS CLI to the specific T2 ASIC instance. The T2 ASIC instance can be on the fabric module or on the front panel line card.

The command syntax is as follows:

**bcm-shell module *module\_number* [*instance\_number:command*]**

Where

<i>module_number</i>	Module number in the chassis.
<i>instance_number</i>	T2 instance number <ul style="list-style-type: none"><li>• When not specified, the T2 instance number defaults to 0.</li><li>• When a wildcard (*) is specified, all T2 instances are processed.</li></ul>

<i>command</i>	Broadcom command
----------------	------------------



**Note** Cisco NX-OS command extensions such as ‘pipe include’ or ‘redirect output to file’ can be used to manage command output.



**Note** Entering commands with the CLI API are recorded in the system accounting log for auditing purposes. Commands that are entered directly from the bcm-shell are not recorded in the accounting log.

The following is an example when the T2 instance number not entered.:

```
switch# bcm-shell module 26 "ports"
Executing ports on bcm shell on module 26
ena/ speed/ link auto STP lrn inter max loop
port link duplex scan neg? state pause discrd ops face frame back
hg0 !ena 42G FD HW No Forward None FA XGMII 16360
hg1 !ena 42G FD HW No Forward None FA XGMII 16360
hg2 !ena 42G FD HW No Forward None FA XGMII 16360
hg3 !ena 42G FD HW No Forward None FA XGMII 16360
hg4 !ena 42G FD HW No Forward None FA XGMII 16360
<snip>
```

The following is an example when accessing the bcm-shell ‘ports’ display on module 26, T2 instance 1, and using the pipe to display only the ports in ‘up’ state:

```
switch# bcm-shell module 26 "1:ports" | inc up
port link duplex scan neg? state pause discrd ops face frame back
hg9 up 42G FD HW No Forward None FA XGMII 16360
hg10 up 42G FD HW No Forward None FA XGMII 16360
hg11 up 42G FD HW No Forward None FA XGMII 16360
```

The following example when the T2 instance number specified as a wildcard (\*)::

The first set in the output is the result for T2 instance 0. The second set is the result for instance 1 on the fabric module.

```
switch# bcm-shell module 26 "*:ports" | inc up

port link duplex scan neg? state pause discrd ops face frame back
hg9 up 42G FD HW No Forward None FA XGMII 16360
hg10 up 42G FD HW No Forward None FA XGMII 16360
hg11 up 42G FD HW No Forward None FA XGMII 16360

port link duplex scan neg? state pause discrd ops face frame back
hg9 up 42G FD HW No Forward None FA XGMII 16360
hg10 up 42G FD HW No Forward None FA XGMII 16360
hg11 up 42G FD HW No Forward None FA XGMII 16360
```



**Note** Alternatively, you can access the bcm-shell on a module (LC or FM) directly from the supervisor. The following is an example of how to access the bcm-shell from the supervisor.

```
switch# bcm-shell module 3
Entering bcm shell on module 3
Available Unit Numbers: 0 1
bcm-shell.0>
```

## Accessing the Native bcm-shell on the Fabric Module

An eight-slot line card (LC) chassis can host a maximum of six fabric modules (FMs). These slots are numbered 21 through 26. You must specify the FM that you wish to access the bcm-shell on.

The following example shows how to access the bcm-shell on the FM in slot 24, access context help, and exit the bcm-shell.

- Use the **show module** command to display the FMs.

```
switch# show module
Mod Ports Module-Type Model Status
-----
3 36 36p 40G Ethernet Module N9k-X9636PQ ok
4 36 36p 40G Ethernet Module N9k-X9636PQ ok
21 0 Fabric Module Nexus-C9508-FM ok
22 0 Fabric Module Nexus-C9508-FM ok
23 0 Fabric Module Nexus-C9508-FM ok
24 0 Fabric Module Nexus-C9508-FM ok
25 0 Fabric Module Nexus-C9508-FM ok
26 0 Fabric Module Nexus-C9508-FM ok
27 0 Supervisor Module Nexus-SUP-A active *
29 0 System Controller Nexus-SC-A active
```

- Attach to module 24 to gain access to the command line for the FM in slot 24.

```
switch# attach module 24
Attaching to module 24 ...
To exit type 'exit', to abort type '$.'
```

- Enter the command to gain root access to the fabric module software.

```
module-24# test hardware internal bcm-usd bcm-diag-shell
Available Unit Numbers: 0 1
bcm-shell.0> 1
```

At this point, you are at the Broadcom shell for the fabric module in slot 24, T2 ASIC instance 1. Any commands that you enter are specific to this specific ASIC instance.

- Enter '?' for the context help and to display the available commands.

```
help: "?" or "help" for summary
Commands common to all modes:
?      ??      ASSErt      BackGround  BCM
BCMx    break    BroadSync   CASE        CD
cint    CONFig   CONSOLE    CoPy        CPUDB
CTEcho  CTInstall CTSetup     DATE        DBDump
DBParse DeBug    DeBugMod   DELAY       DEvice
```




---

**Note** Uppercase characters indicate command abbreviations.

---




---

**Note** The Cisco CLI feature of using TAB to complete a command entry is not available.

---

- Enter an abbreviated command.

```
bcm-shell.1> conf ?
Usage (CONFIG): Parameters: show <substring> | refresh |
                        save [filename=<filename>] [pattern=<substring>] |
                        add [<var>=<value>] | delete <var>
If no parameters are given, displays the current config vars.
show                display current config vars.
                    Next parameter (optional) maybe a substring to match
refresh             reload config vars from non-volatile storage
save                save config vars to non-volatile storage.
                    it can optionally save current config to any given file
                    providing the optional <pattern> will only save variables

matching the pattern
<var>=<value>       change the value of a config var
add <var>=<value>   create a new config var
delete <var>       deletes a config var
clear              deletes all config vars
=                  prompt for new value for each config var
NOTE: changes are not retained permanently unless saved
```

- Use the exit command to exit the bcm-shell and to detach from the FM.

```
bcm-shell.1> exit
module-24# exit
rlogin: connection closed.
```

## Accessing the bcm-shell on the Line Card

When connecting to the T2 ASIC on the line card (LC), you first attach to the module, enter root mode, run the shell access exec, and select the ASIC instance to which you want to attach. The number of available ASICs depends on the model of the line card to which you are attached.

The following example shows how to access the bcm-shell of ASIC instance 1 on the LC in slot 2 and exit the bcm-shell on an LC that contains three T2 instances.

- Attach to module 2 to gain access to the command line for the LC in slot 2.

```
switch# attach module 2
Attaching to module 2 ...
To exit type 'exit', to abort type '$.'
Last login: Wed Aug 7 14:13:15 UTC 2013 from sup27 on tty0
```

- Enter the command to gain root access to the line card software.

```
switch-2# test hardware internal bcm-usd bcm-diag-shell
Available Unit Numbers: 0 1 2
bcm-shell.0> 1
bcm-shell.1>
```

At this point, you are at the Broadcom shell for the line card module in slot 2, T2 ASIC instance 1.

- Use the **exit** command to exit the bcm-shell and detach from the FM.

```
bcm-shell.1> exit
module-2# exit
rlogin: connection closed.
```

## Examples of Broadcom Shell Commands

This section contains examples of Broadcom shell commands and output.

### Displaying L2 Entries

To compare the L2 entries on an FM and an LC, display the L2 entries on the T2 instance.

- Attach to a T2 instance on an LC in the chassis and enter the show the `l2_mem_entries` command.

```
switch# bcm-shell module 2 "config show l2_mem_entries"
l2_mem_entries=163840
```

- Attach to a T2 instance on an FM in the chassis and enter the show the `l2_mem_entries` command.

```
switch# bcm-shell module 24 "config show l2_mem_entries"
l2_mem_entries=32768
```

In this example, the ASICs have different values that are configured for L2 entries because the operation mode setting of the T2 ASIC is different on the LC and the FM.

### Displaying Routing Information from FM and LC ASIC Instances

The following shows how to display the routing information from an FM instance and an LC ASIC instance.



#### Note

- FM module ASIC instances maintain the longest prefix match (LPM) entries.
- LC module ASIC instances maintain host routes.

- Attach to the bcm-shell of one of the FM ASIC instances and enter the **l3 defip show** command.

```
switch# bcm-shell module 22 "l3 defip show"
Unit 0, Total Number of DEFIP entries: 16385
# VRF Net addr Next Hop Mac INTF MODID PORT PRIO CLASS HIT VLAN
0 1 192.168.1.0/24 00:00:00:00:00:00 10000 4 0 0 0 0 n
0 1 192.168.2.0/24 00:00:00:00:00:00 10000 4 0 0 0 0 n
```

- Attach to the bcm-shell of one of the LC ASIC instances and enter the **l3 defip show** command.

```
switch# bcm-shell module 2 "l3 defip show"
Unit 2, Total Number of DEFIP entries: 8193
# VRF Net addr Next Hop Mac INTF MODID PORT PRIO CLASS HIT VLAN
2048 Override 0.0.0.0/0 00:00:00:00:00:00 10000 4 0 0 0 0 n
```

## Displaying Spanning Tree Group Entries

The following shows how to display spanning tree group (STG) entries.

```
switch# bcm-shell module 2 "stg show"
STG 0: contains 7 VLANs (4032-4035,4042,4044,4095)
Forward: xe,hg
STG 1: contains 1 VLAN (4043)
Disable: xe
Forward: hg
STG 4: contains 1 VLAN (1)
Block: xe
Forward: hg
STG 5: contains 1 VLAN (100)
Block: xe
Forward: hg
```

## Display T2 Counters for Interface xe0

The following shows how to display T2 counters for interface xe0 that maps to a front panel port.

```
switch# bcm-shell module 2 "show counters xe0"
RDBGCl.xe0 : 38,169 +4
R127.xe0 : 37,994 +4
R511.xe0 : 16,562 +2
RPKT.xe0 : 55,046 +6
RMCA.xe0 : 54,731 +6
<snip>
```




---

**Note** The numbers in the output on the far right denoted with '+', indicate the change in the counter value since the last show command was executed.

---

## Displaying L3 Information

The following shows how to display L3 information from the T2.

```
switch# bcm-shell module 2 "l3 l3table show"
Unit 0, free L3 table entries: 147448
Entry VRF IP address Mac Address INTF MOD PORT CLASS HIT
1 1 10.100.100.2 00:00:00:00:00:00 100006 0 0 0 n
2 1 10.101.101.2 00:00:00:00:00:00 100006 0 0 0 y
3 1 10.101.101.1 00:00:00:00:00:00 149151 0 0 0 y (LOCAL ROUTE)
4 1 10.100.100.1 00:00:00:00:00:00 149151 0 0 0 n (LOCAL ROUTE)
5 1 10.101.101.0 00:00:00:00:00:00 100000 0 0 0 n (LOCAL ROUTE)
6 1 10.100.100.0 00:00:00:00:00:00 100000 0 0 0 n (LOCAL ROUTE)
7 1 10.101.101.255 00:00:00:00:00:00 149150 0 0 0 n
8 1 10.100.100.255 00:00:00:00:00:00 149150 0 0 0 n
```



## CHAPTER 6

# Python API

---

- [About the Python API](#) , on page 69
- [Using Python](#), on page 69

## About the Python API

Python is an easy to learn, powerful programming language. It has efficient high-level data structures and a simple but effective approach to object-oriented programming. Python's elegant syntax and dynamic typing, together with its interpreted nature, make it an ideal language for scripting and rapid application development in many areas on most platforms.

The Python interpreter and the extensive standard library are freely available in source or binary form for all major platforms from the Python website:

<http://www.python.org/>

The same site also contains distributions of and pointers to many free third-party Python modules, programs and tools, and more documentation.

The Cisco Nexus 9000 Series devices support Python v2.7.5 in both interactive and noninteractive (script) modes and are available in the Guest Shell.

The Python scripting capability gives programmatic access to the device's command-line interface (CLI) to perform various tasks and Power On Auto Provisioning (POAP) or Embedded Event Manager (EEM) actions. Python also can be accessed from the Bash shell.

The Python interpreter is available in the Cisco NX-OS software.

For information about using Python with Cisco Nexus devices, see the Cisco Nexus 9000 Series Python SDK User Guide and API Reference at this URL: <https://developer.cisco.com/site/nx-os/docs/apis/python/>.

## Using Python

This section describes how to write and execute Python scripts.

## Cisco Python Package

Cisco NX-OS provides a Cisco Python package that enables access to many core network-device modules, such as interfaces, VLANs, VRFs, ACLs, and routes. You can display the details of the Cisco Python package

by entering the **help()** command. To obtain additional information about the classes and methods in a module, you can run the help command for a specific module. For example, **help(cisco.interface)** displays the properties of the `cisco.interface` module.

The following is an example of how to display information about the Cisco Python package:

```
>>> import cisco
>>> help(cisco)
Help on package cisco:

NAME
    cisco

FILE
    /isan/python/scripts/cisco/__init__.py

PACKAGE CONTENTS
    acl
    bgp
    cisco_secret
    cisco_socket
    feature
    interface
    key
    line_parser
    md5sum
    nxcli
    ospf
    routemap
    routes
    section_parser
    ssh
    system
    tacacs
    vrf

CLASSES
    __builtin__.object
    cisco.cisco_secret.CiscoSecret
    cisco.interface.Interface
    cisco.key.Key
```

## Guidelines and Limitations

The Python API has the following guidelines and limitations:

- Starting with NX-OS 7.0(3)F3(1), the Python API is supported on the Cisco Nexus 9508 switch.

## Using the CLI Command APIs

The Python programming language uses three APIs that can execute CLI commands. The APIs are available from the Python CLI module.

These APIs are listed in the following table. You must enable the APIs with the **from cli import \*** command. The arguments for these APIs are strings of CLI commands. To execute a CLI command through the Python interpreter, you enter the CLI command as an argument string of one of the following APIs:



Table 3: CLI Command APIs

API	Description
<b>cli()</b> Example: <pre>string = cli ("cli-command")</pre>	Returns the raw output of CLI commands, including control or special characters.  <b>Note</b> The interactive Python interpreter prints control or special characters 'escaped'. A carriage return is printed as '\n' and gives results that can be difficult to read. The <b>cli()</b> API gives results that are more readable.
<b>clid()</b> Example: <pre>json_string = clid ("cli-command")</pre>	Returns JSON output for cli-command, if XML support exists for the command, otherwise an exception is thrown.  <b>Note</b> This API can be useful when searching the output of show commands.
<b>clip()</b> Example: <pre>clip ("cli-command")</pre>	Prints the output of the CLI command directly to stdout and returns nothing to Python.  <b>Note</b> <pre>clip ("cli-command")</pre> is equivalent to <pre>r=cli("cli-command") print r</pre>

When two or more commands are run individually, the state is not persistent from one command to subsequent commands.

In the following example, the second command fails because the state from the first command does not persist for the second command:

```
>>> cli("conf t")
>>> cli("interface eth4/1")
```

When two or more commands are run together, the state is persistent from one command to subsequent commands.

In the following example, the second command is successful because the state persists for the second and third commands:

```
>>> cli("conf t ; interface eth4/1 ; shut")
```



**Note** Commands are separated with ";" as shown in the example. The semicolon (;) must be surrounded with single blank characters.

## Invoking the Python Interpreter from the CLI

The following example shows how to invoke Python 2 from the CLI:



**Note** The Python interpreter is designated with the ">>>" or "... " prompt.

```
switch# python
switch# python
```

Warning: Python 2.7 is End of Support, and future NXOS software will deprecate python 2.7 support. It is recommended for new scripts to use 'python3' instead. Type "python3" to use the new shell.

```
Python 2.7.11 (default, Jun  4 2020, 09:48:24)
[GCC 4.6.3] on linux2
Type "help", "copyright", "credits" or "license" for more information.
>>>
>>> from cli import *
>>> import json
>>> cli('configure terminal ; interface loopback 1 ; no shut')
''
>>> intflist=json.loads(clid('show interface brief'))
>>> i=0
>>> while i < len(intflist['TABLE_interface']['ROW_interface']):
...     intf=intflist['TABLE_interface']['ROW_interface'][i]
...     i=i+1
...     if intf['state'] == 'up':
...         print intf['interface']
...
mgmt0
loopback1
>>>
```

## Display Formats

The following examples show various display formats using the Python APIs:

Example 1:

```
>>> from cli import *
>>> cli("conf ; interface loopback 1")
''
>>> clip('where detail')
mode:
username:          admin
vdc:               switch
routing-context vrf: default
```

Example 2:

```
>>> from cli import *
>>> cli("conf ; interface loopback 1")
''
>>> cli('where detail')
' mode:          \n username:          admin\n vdc:
switch\n routing-context vrf: default\n'
```

```
>>>
```

### Example 3:

```
>>> from cli import *
>>> cli("conf ; interface loopback 1")
''
>>> r = cli('where detail') ; print r
mode:
username:          admin
vdc:               EOR-1
routing-context vrf: default
>>>
```

### Example 4:

```
>>> from cli import *
>>> import json
>>> out=json.loads(clid('show version'))
>>> for k in out.keys():
...   print "%30s = %s" % (k, out[k])
...
kern_uptm_secs = 21
kick_file_name = bootflash:///nxos.9.2.1.bin.S246
rr_service = None
module_id = Supervisor Module
kick_tmstamp = 07/11/2018 00:01:44
bios_cmpl_time = 05/17/2018
bootflash_size = 20971520
kickstart_ver_str = 9.2(1)
kick_cmpl_time = 7/9/2018 9:00:00
chassis_id = Nexus9000 C9504 (4 Slot) Chassis
proc_board_id = SAL171211LX
memory = 16077872
manufacturer = Cisco Systems, Inc.
kern_uptm_mins = 26
bios_ver_str = 05.31
cpu_name = Intel(R) Xeon(R) CPU D-1528 @ 1.90GHz
kern_uptm_hrs = 2
rr_usecs = 816550
rr_sys_ver = 9.2(1)
rr_reason = Reset Requested by CLI command reload
rr_ctime = Wed Jul 11 20:44:39 2018
header_str = Cisco Nexus Operating System (NX-OS) Software
TAC support: http://www.cisco.com/tac
Copyright (C) 2002-2018, Cisco and/or its affiliates.
All rights reserved.
The copyrights to certain works contained in this software are
owned by other third parties and used and distributed under their own
licenses, such as open source. This software is provided "as is," and unless
otherwise stated, there is no warranty, express or implied, including but not
limited to warranties of merchantability and fitness for a particular purpose.
Certain components of this software are licensed under
the GNU General Public License (GPL) version 2.0 or
GNU General Public License (GPL) version 3.0 or the GNU
Lesser General Public License (LGPL) Version 2.1 or
Lesser General Public License (LGPL) Version 2.0.
A copy of each such license is available at
http://www.opensource.org/licenses/gpl-2.0.php and
http://opensource.org/licenses/gpl-3.0.html and
http://www.opensource.org/licenses/lgpl-2.1.php and
http://www.gnu.org/licenses/old-licenses/library.txt.
host_name = switch
```

```

        mem_type = kB
        kern_uptm_days = 0
    >>>

```

## Non-Interactive Python

A Python script can run in non-interactive mode by providing the Python script name as an argument to the Python CLI command. Python scripts must be placed under the bootflash or volatile scheme. A maximum of 32 command-line arguments for the Python script are allowed with the Python CLI command.

The switch also supports the source CLI command for running Python scripts. The `bootflash:scripts` directory is the default script directory for the source CLI command.

This example shows the script first and then executing it. Saving is like bringing any file to the bootflash.

```

switch# show file bootflash:deltaCounters.py
#!/isan/bin/python

from cli import *
import sys, time

ifName = sys.argv[1]
delay = float(sys.argv[2])
count = int(sys.argv[3])
cmd = 'show interface ' + ifName + ' counters'

out = json.loads(clid(cmd))
rxuc = int(out['TABLE_rx_counters']['ROW_rx_counters'][0]['eth_inucast'])
rxmc = int(out['TABLE_rx_counters']['ROW_rx_counters'][1]['eth_inmcast'])
rxbc = int(out['TABLE_rx_counters']['ROW_rx_counters'][1]['eth_inbcast'])
txuc = int(out['TABLE_tx_counters']['ROW_tx_counters'][0]['eth_outucast'])
txmc = int(out['TABLE_tx_counters']['ROW_tx_counters'][1]['eth_outmcast'])
txbc = int(out['TABLE_tx_counters']['ROW_tx_counters'][1]['eth_outbcast'])
print 'row rx_ucast rx_mcast rx_bcast tx_ucast tx_mcast tx_bcast'
print '=====
      %8d %8d %8d %8d %8d %8d' % (rxuc, rxmc, rxbc, txuc, txmc, txbc)
print '=====

i = 0
while (i < count):
    time.sleep(delay)
    out = json.loads(clid(cmd))
    rxucNew = int(out['TABLE_rx_counters']['ROW_rx_counters'][0]['eth_inucast'])
    rxmcNew = int(out['TABLE_rx_counters']['ROW_rx_counters'][1]['eth_inmcast'])
    rxbcNew = int(out['TABLE_rx_counters']['ROW_rx_counters'][1]['eth_inbcast'])
    txucNew = int(out['TABLE_tx_counters']['ROW_tx_counters'][0]['eth_outucast'])
    txmcNew = int(out['TABLE_tx_counters']['ROW_tx_counters'][1]['eth_outmcast'])
    txbcNew = int(out['TABLE_tx_counters']['ROW_tx_counters'][1]['eth_outbcast'])
    i += 1
    print '%-3d %8d %8d %8d %8d %8d' % \
        (i, rxucNew - rxuc, rxmcNew - rxmc, rxbcNew - rxbc, txucNew - txuc, txmcNew - txmc,
        txbcNew - txbc)

switch# python bootflash:deltaCounters.py Ethernet1/1 1 5
row rx_ucast rx_mcast rx_bcast tx_ucast tx_mcast tx_bcast
=====
          0      791          1          0  212739          0
=====
1          0          0          0          0      26          0
2          0          0          0          0      27          0

```

```

3          0          1          0          0          54          0
4          0          1          0          0          55          0
5          0          1          0          0          81          0
switch#

```

The following example shows how a source command specifies command-line arguments. In the example, *policy-map* is an argument to the `cgrep python` script. The example also shows that a source command can follow the pipe operator (`|`).

```

switch# show running-config | source sys/cgrep policy-map

policy-map type network-qos nw-pfc
policy-map type network-qos no-drop-2
policy-map type network-qos wred-policy
policy-map type network-qos pause-policy
policy-map type qos foo
policy-map type qos classify
policy-map type qos cos-based
policy-map type qos no-drop-2
policy-map type qos pfc-tor-port

```

## Running Scripts with Embedded Event Manager

On Cisco Nexus switches, Embedded Event Manager (EEM) policies support Python scripts.

The following example shows how to run a Python script as an EEM action:

- An EEM applet can include a Python script with an action command.

```

switch# show running-config eem

!Command: show running-config eem
!Running configuration last done at: Thu Jun 25 15:29:38 2020
!Time: Thu Jun 25 15:33:19 2020

version 9.3(5) Bios:version 07.67
event manager applet a1
  event cli match "show clock"
  action 1 cli python bootflash:pydate.py

switch# show file logflash:vdc_1/event_archive_1 | last 33

eem_event_time:06/25/2020,15:34:24 event_type:cli event_id:24 slot:active(1) vdc
:1 severity:minor applets:a1
eem_param_info:command = "exshow clock"
Starting with policy a1
stty: standard input: Inappropriate ioctl for device
Executing the following commands succeeded:
    python bootflash:pydate.py
Completed executing policy a1
Event Id:24 event type:10241 handling completed

```

- You can search for the action that is triggered by the event in the log file by running the **show file logflash:event\_archive\_1** command.

```

switch# show file logflash:event_archive_1 | last 33

eem_event_time:05/01/2011,19:40:28 event_type:cli event_id:8 slot:active(1)

```

```

vdc:1 severity:minor applets:a1
eem_param_info:command = "exshow clock"
Starting with policy a1
Python

2011-05-01 19:40:28.644891
Executing the following commands succeeded:
    python bootflash:pydate.py

PC_VSH_CMD_TLV(7679) with q

```

## Python Integration with Cisco NX-OS Network Interfaces

On Cisco Nexus switches, Python is integrated with the underlying Cisco NX-OS network interfaces. You can switch from one virtual routing context to another by setting up a context through the `cisco.vrf.set_global_vrf()` API.

The following example shows how to retrieve an HTML document over the management interface of a device. You can also establish a connection to an external entity over the in-band interface by switching to a desired virtual routing context.

```

switch# python
Python 2.7.5 (default, Oct  8 2013, 23:59:43)
[GCC 4.6.3] on linux2
Type "help", "copyright", "credits" or "license" for more information.
>>> import urllib2
>>> from cisco.vrf import *
>>> set_global_vrf('management')
>>> page=urllib2.urlopen('http://172.23.40.211:8000/welcome.html')
>>> print page.read()
Hello Cisco Nexus 9000

>>>
>>> import cisco
>>> help(cisco.vrf.set_global_vrf)
Help on function set_global_vrf in module cisco.vrf:

set_global_vrf(vrf)
    Sets the global vrf. Any new sockets that are created (using socket.socket)
    will automatically get set to this vrf (including sockets used by other
    python libraries).

    Arguments:
        vrf: VRF name (string) or the VRF ID (int).

    Returns: Nothing

>>>

```

## Cisco NX-OS Security with Python

Cisco NX-OS resources are protected by the Cisco NX-OS Sandbox layer of software and by the CLI role-based access control (RBAC).

All users who are associated with a Cisco NX-OS network-admin or dev-ops role are privileged users. Users who are granted access to Python with a custom role are regarded as nonprivileged users. Nonprivileged users have limited access to Cisco NX-OS resources, such as the file system, guest shell, and Bash commands. Privileged users have greater access to all the resources of Cisco NX-OS.

## Examples of Security and User Authority

The following example shows how a privileged user runs commands:

```
switch# python
Python 2.7.5 (default, Oct  8 2013, 23:59:43)
[GCC 4.6.3] on linux2
Type "help", "copyright", "credits" or "license" for more information.
>>> import os
>>> os.system('whoami')
admin
0
>>> f=open('/tmp/test','w')
>>> f.write('hello from python')
>>> f.close()
>>> r=open('/tmp/test','r')
>>> print r.read()
hello from python
>>> r.close()
```

Python 3 example.

The following example shows a nonprivileged user being denied access:

```
switch# python
Python 2.7.5 (default, Oct  8 2013, 23:59:43)
[GCC 4.6.3] on linux2
Type "help", "copyright", "credits" or "license" for more information.
>>> import os
>>> os.system('whoami')
system(whoami): rejected!
-1
>>> f=open('/tmp/test','r')
Permission denied. Traceback (most recent call last):
  File "<stdin>", line 1, in <module>
IOError: [Errno 13] Permission denied: '/tmp/test'
>>>
```

RBAC controls CLI access based on the login user privileges. A login user's identity is given to Python that is invoked from the CLI shell or from Bash. Python passes the login user's identity to any subprocess that is invoked from Python.

The following is an example for a privileged user:

```
>>> from cli import *
>>> cli('show clock')
'Warning: No NTP peer/server configured. Time may be out of sync.\n15:39:39.513 UTC Thu Jun
 25 2020\nTime source is NTP\n'
>>> cli('configure terminal ; vrf context myvrf')
''
>>> clip('show running-config l3vm')

!Command: show running-config l3vm
!Running configuration last done at: Thu Jun 25 15:39:49 2020
!Time: Thu Jun 25 15:39:55 2020

version 9.3(5) Bios:version 07.67

interface mgmt0
  vrf member management
vrf context blue
vrf context management
```

```
vrf context myvrf
```

The following is an example for a nonprivileged user:

```
>>> from cli import *
>>> cli('show clock')
'11:18:47.482 AM UTC Sun May 08 2011\n'
>>> cli('configure terminal ; vrf context myvrf2')
Traceback (most recent call last):
  File "<stdin>", line 1, in <module>
    File "/isan/python/scripts/cli.py", line 20, in cli
      raise cmd_exec_error(msg)
errors.cmd_exec_error: '% Permission denied for the role\n\nCmd exec error.\n'
```

The following example shows an RBAC configuration:

```
switch# show user-account
user:admin
      this user account has no expiry date
      roles:network-admin
user:pyuser
      this user account has no expiry date
      roles:network-operator python-role
switch# show role name python-role
```

## Example of Running Script with Scheduler

The following example shows a Python script that is running the script with the scheduler feature:

```
#!/bin/env python
from cli import *
from nxos import *
import os

switchname = cli("show switchname")
try:
    user = os.environ['USER']
except:
    user = "No user"
    pass

msg = user + " ran " + __file__ + " on : " + switchname
print msg
py_syslog(1, msg)
# Save this script in bootflash:///scripts
```

Python 3 example.





## CHAPTER 7

# Scripting with Tcl

- [About Tcl, on page 79](#)
- [Running the Tclsh Command, on page 81](#)
- [Navigating Cisco NX-OS Modes from the Tclsh Command, on page 82](#)
- [Tcl References, on page 84](#)

## About Tcl

Tcl (pronounced "tickle") is a scripting language that increases flexibility of CLI commands. You can use Tcl to extract certain values in the output of a **show** command, perform switch configurations, run Cisco NX-OS commands in a loop, or define Embedded Event Manager (EEM) policies in a script.

This section describes how to run Tcl scripts or run Tcl interactively on switches.

## Tclsh Command Help

Command help is not available for Tcl commands. You can still access the help functions of Cisco NX-OS commands from within an interactive Tcl shell.

This example shows the lack of Tcl command help in an interactive Tcl shell:

```
switch# tclsh
switch-tcl# set x 1
switch-tcl# puts ?
           ^
% Invalid command at '^' marker.
switch-tcl# configure ?
<CR>
  session  Configure the system in a session
  terminal  Configure the system from terminal input

switch-tcl#
```



**Note** In the preceding example, the Cisco NX-OS command help function is still available but the Tcl **puts** command returns an error from the help function.

## Tclsh Command History

You can use the arrow keys on your terminal to access commands you previously entered in the interactive Tcl shell.




---

**Note** The **tclsh** command history is not saved when you exit the interactive Tcl shell.

---

## Tclsh Tab Completion

You can use tab completion for Cisco NX-OS commands when you are running an interactive Tcl shell. Tab completion is not available for Tcl commands.

## Tclsh CLI Command

Although you can directly access Cisco NX-OS commands from within an interactive Tcl shell, you can only execute Cisco NX-OS commands in a Tcl script if they are prepended with the Tcl **cli** command.

In an interactive Tcl shell, the following commands are identical and execute properly:

```
switch-tcl# cli show module 1 | incl Mod
switch-tcl# cli "show module 1 | incl Mod"
switch-tcl# show module 1 | incl Mod
```

In a Tcl script, you must prepend Cisco NX-OS commands with the Tcl **cli** command as shown in the following example:

```
set x 1
cli show module $x | incl Mod
cli "show module $x | incl Mod"
```

If you use the following commands in your script, the script fails and the Tcl shell displays an error:

```
show module $x | incl Mod
"show module $x | incl Mod"
```

## Tclsh Command Separation

The semicolon (;) is the command separator in both Cisco NX-OS and Tcl. To execute multiple Cisco NX-OS commands in a Tcl command, you must enclose the Cisco NX-OS commands in quotes ("").

In an interactive Tcl shell, the following commands are identical and execute properly:

```
switch-tcl# cli "configure terminal ; interface loopback 10 ; description loop10"
switch-tcl# cli configure terminal ; cli interface loopback 10 ; cli description loop10
switch-tcl# cli configure terminal
Enter configuration commands, one per line. End with CNTL/Z.

switch(config-tcl)# cli interface loopback 10
switch(config-if-tcl)# cli description loop10
switch(config-if-tcl)#
```

In an interactive Tcl shell, you can also execute Cisco NX-OS commands directly without prepending the Tcl **cli** command:

```
switch-tcl# configure terminal
Enter configuration commands, one per line.  End with CNTL/Z.

switch(config-tcl)# interface loopback 10
switch(config-if-tcl)# description loop10
switch(config-if-tcl)#
```

## Tcl Variables

You can use Tcl variables as arguments to the Cisco NX-OS commands. You can also pass arguments into Tcl scripts. Tcl variables are not persistent.

The following example shows how to use a Tcl variable as an argument to a Cisco NX-OS command:

```
switch# tclsh
switch-tcl# set x loop10
switch-tcl# cli "configure terminal ; interface loopback 10 ; description $x"
switch(config-if-tcl)#
```

## Tclquit

The **tclquit** command exits the Tcl shell regardless of which Cisco NX-OS command mode is currently active. You can also press **Ctrl-C** to exit the Tcl shell. The **exit** and **end** commands change Cisco NX-OS command modes. The **exit** command terminates the Tcl shell only from the EXEC command mode.

## Tclsh Security

The Tcl shell is executed in a sandbox to prevent unauthorized access to certain parts of the Cisco NX-OS system. The system monitors CPU, memory, and file system resources being used by the Tcl shell to detect events such as infinite loops, excessive memory utilization, and so on.

You configure the initial Tcl environment with the **scripting tcl init** *init-file* command.

You can define the looping limits for the Tcl environment with the **scripting tcl recursion-limit** *iterations* command. The default recursion limit is 1000 iterations.

## Running the Tclsh Command

You can run Tcl commands from either a script or on the command line using the **tclsh** command.



---

**Note** You cannot create a Tcl script file at the CLI prompt. You can create the script file on a remote device and copy it to the bootflash: directory on the Cisco NX-OS device.

---

**Procedure**

	Command or Action	Purpose
<b>Step 1</b>	<pre>tclsh [bootflash:filename [argument ... ]]</pre> <p><b>Example:</b></p> <pre>switch# tclsh ? &lt;CR&gt; bootflash: The file to run</pre>	<p>Starts a Tcl shell.</p> <p>If you run the <b>tclsh</b> command with no arguments, the shell runs interactively, reading Tcl commands from standard input and printing command results and error messages to the standard output. You exit from the interactive Tcl shell by typing <b>tclquit</b> or <b>Ctrl-C</b>.</p> <p>If you run the <b>tclsh</b> command with arguments, the first argument is the name of a script file containing Tcl commands and any additional arguments are made available to the script as variables.</p>

**Example**

The following example shows an interactive Tcl shell:

```
switch# tclsh
switch-tcl# set x 1
switch-tcl# cli show module $x | incl Mod
Mod  Ports  Module-Type          Model          Status
1    36      36p 40G Ethernet Module  N9k-X9636PQ   ok
Mod  Sw      Hw
Mod  MAC-Address(es)      Serial-Num

switch-tcl# exit
switch#
```

The following example shows how to run a Tcl script:

```
switch# show file bootflash:showmodule.tcl
set x 1
while {$x < 19} {
cli show module $x | incl Mod
set x [expr {$x + 1}]
}

switch# tclsh bootflash:showmodule.tcl
Mod  Ports  Module-Type          Model          Status
1    36      36p 40G Ethernet Module  N9k-X9636PQ   ok
Mod  Sw      Hw
Mod  MAC-Address(es)      Serial-Num

switch#
```

## Navigating Cisco NX-OS Modes from the Tclsh Command

You can change modes in Cisco NX-OS while you are running an interactive Tcl shell.

**Procedure**

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>tclsh</b> <b>Example:</b> <pre>switch# tclsh switch-tcl#</pre>	Starts an interactive Tcl shell.
<b>Step 2</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch-tcl# configure terminal switch(config-tcl)#</pre>	Runs a Cisco NX-OS command in the Tcl shell, changing modes.  <b>Note</b> The Tcl prompt changes to indicate the Cisco NX-OS command mode.
<b>Step 3</b>	<b>tclquit</b> <b>Example:</b> <pre>switch-tcl# tclquit switch#</pre>	Terminates the Tcl shell, returning to the starting mode.

**Example**

The following example shows how to change Cisco NX-OS modes from an interactive Tcl shell:

```
switch# tclsh
switch-tcl# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
switch(config-tcl)# interface loopback 10
switch(config-if-tcl)# ?
  description  Enter description of maximum 80 characters
  inherit      Inherit a port-profile
  ip           Configure IP features
  ipv6        Configure IPv6 features
  logging      Configure logging for interface
  no          Negate a command or set its defaults
  rate-limit   Set packet per second rate limit
  shutdown    Enable/disable an interface
  this        Shows info about current object (mode's instance)
  vrf         Configure VRF parameters
  end         Go to exec mode
  exit        Exit from command interpreter
  pop         Pop mode from stack or restore from name
  push        Push current mode to stack or save it under name
  where       Shows the cli context you are in

switch(config-if-tcl)# description loop10
switch(config-if-tcl)# tclquit
Exiting Tcl
switch#
```

## Tcl References

The following titles are provided for your reference:

- Mark Harrison (ed), *Tcl/Tk Tools*, O'Reilly Media, ISBN 1-56592-218-2, 1997
- Mark Harrison and Michael McLennan, *Effective Tcl/Tk Programming*, Addison-Wesley, Reading, MA, USA, ISBN 0-201-63474-0, 1998
- John K. Ousterhout, *Tcl and the Tk Toolkit*, Addison-Wesley, Reading, MA, USA, ISBN 0-201-63337-X, 1994.
- Brent B. Welch, *Practical Programming in Tcl and Tk*, Prentice Hall, Upper Saddle River, NJ, USA, ISBN 0-13-038560-3, 2003.
- J Adrian Zimmer, *Tcl/Tk for Programmers*, IEEE Computer Society, distributed by John Wiley and Sons, ISBN 0-8186-8515-8, 1998.



## CHAPTER 8

# iPXE

---

This chapter contains the following sections:

- [About iPXE, on page 85](#)
- [Netboot Requirements, on page 86](#)
- [Guidelines and Limitations, on page 86](#)
- [Boot Mode Configuration, on page 86](#)
- [Verifying the Boot Order Configuration, on page 87](#)

## About iPXE

iPXE is an open source network-boot firmware. iPXE is based on gPXE, which is an open-source PXE client firmware and bootloader derived from Etherboot. Standard PXE clients use TFTP to transfer data whereas gPXE supports more protocols.

Here is a list of additional features that iPXE provides over standard PXE:

- Boots from a web server via HTTP, iSCSI SAN, FCoE, and so on
- Supports both IPv4 and IPv6
- Netboot supports HTTP/TFTP, IPv4, and IPv6
- Supports embedded scripts into the image or served by the HTTP/TFTP, and so on
- Supports stateless address autoconfiguration (SLAAC) and stateful IP autoconfiguration variants for DHCPv6. iPXE supports boot URI and parameters for DHCPv6 options. This depends on IPv6 router advertisement.

In addition, we have disabled some of the existing features from iPXE for security reasons such as:

- Boot support for standard Linux image format such as bzImage+initramfs/initrd, or ISO, and so on
- Unused network boot options such as FCoE, iSCSI SAN, Wireless, and so on
- Loading of unsupported NBP (such as syslinux/pxelinux) because these can boot system images that are not properly code-signed.

# Netboot Requirements

The primary requirements are:

- A DHCP server with proper configuration.
- A TFTP/HTTP server.
- Enough space on the device's bootflash because NX-OS downloads the image when the device is PXE booted.
- IPv4/IPv6 support—for better deployment flexibility

# Guidelines and Limitations

PXE has the following configuration guidelines and limitations:

- Starting with NX-OS 7.0(3)F3(1), iPXE is supported on the Cisco Nexus 9508 switch.
- While auto-booting through iPXE, there is a window of three seconds where you can enter **Ctrl+B** to exit out of the PXE boot. The system prompts you with the following options:

```
Please choose a bootloader shell:
1). GRUB shell
2). PXE shell
Enter your choice:
```

- HTTP image download vs. TFTP—TFTP is UDP based and it can be problematic if packet loss starts appearing. TCP is a window-based protocol and handles bandwidth sharing/losses better. As a result, TCP-based protocols support is more suitable given the sizes of the Cisco Nexus images which are over 250 Mbytes.
- iPXE only allows/boots Cisco signed NBI images. Other standard image format support is disabled for security reasons.

# Boot Mode Configuration

## VSH CLI

```
switch# configure terminal
switch(conf)# boot order bootflash|pxe [bootflash|pxe]
switch(conf)# end
```



---

**Note** The keyword **bootflash** indicates it is Grub based booting.

---

For example, to do a PXE boot mode only, the configuration command is:

```
switch(conf)# boot order pxe
```



To boot Grub first, followed by PXE:

```
switch(conf)# boot order bootflash pxe
```

To boot PXE first, followed by Grub:

```
switch(conf)# boot order pxe bootflash
```

If you never use the **boot order** command, by default the boot order is Grub.



**Note** The following sections describe how you can toggle from Grub and iPXE.

### Grub CLI

```
bootmode [-g|-p|-p2g|-g2p]
```

Keyword	Function
-g	Grub only
-p	PXE only
-p2g	PXE first, followed by Grub if PXE failed
-g2p	Grub first, followed by PXE if Grub failed

The Grub CLI is useful if you want to toggle the boot mode from the serial console without booting a full Cisco NX-OS image. It also can be used to get a box out of the continuous PXE boot state.

### iPXE CLI

```
bootmode [-g|--grub] [-p|--pxe] [-a|--pxe2grub] [-b|--grub2pxe]
```

Keyword	Function
-- grub	Grub only
-- pxe	PXE only
-- pxe2grub	PXE first, followed by Grub if PXE failed
-- grub2pxe	Grub first, followed by PXE if Grub failed

The iPXE CLI is useful if you wish to toggle the boot mode from the serial console without booting a full Cisco NX-OS image. It also can be used to get a box out of continuous PXE boot state.

## Verifying the Boot Order Configuration

To display boot order configuration information, enter the following command:

Command	Purpose
<b>show boot order</b>	Displays the current boot order from the running configuration and the boot order value on the next reload from the startup configuration.



## CHAPTER 9

# Kernel Stack

---

This chapter contains the following sections:

- [About Kernel Stack, on page 89](#)
- [Guidelines and Limitations, on page 89](#)
- [Changing the Port Range, on page 90](#)

## About Kernel Stack

Kernel Stack (kstack) uses well known Linux APIs to manage the routes and front panel ports.

Open Containers, like the Guest Shell, are Linux environments that are decoupled from the host software. You can install or modify software within that environment without impacting the host software packages.

## Guidelines and Limitations

Using the Kernel Stack has the following guidelines and limitations:

- Starting with NX-OS 7.0(3)F3(1), the Kernel Stack is supported on the Cisco Nexus 9508 switch.
- Guest Shell, other open containers, and the host Bash Shell use Kernel Stack (kstack).
- Open containers start in the host default namespace
  - Other network namespaces might be accessed by using the **setns** system call
  - The **nsenter** and **ip netns exec** utilities can be used to execute within the context of a different network namespace.
  - The PIDs and identify options for the **ip netns** command do not work without modification because of the file system device check. A **vrinfo** utility is provided to give the network administrator the same information.
- Open containers may read the interface state from `/proc/net/dev` or use other normal Linux utilities such as **netstat** or **ifconfig** without modification. This provides counters for packets that have initiated / terminated on the switch.
- Open containers may use **ethtool -S** to get extended statistics from the net devices. This includes packets switched through the interface.

- Open containers may run packet capture applications like **tcpdump** to capture packets initiated from or terminated on the switch.
- There is no support for networking state changes (interface creation/deletion, IP address configuration, MTU change, etc.) from the Open containers
- IPv4 and IPv6 are supported
- Raw PF\_PACKET is supported
- Well-known ports (0-15000) may only be used by one stack (Netstack or kstack) at a time, regardless of the network namespace.
- There is no IP connectivity between Netstack and kstack applications. This is a host limitation which also applies to open containers.
- Open containers are not allowed to send packets directly over an Ethernet out-of-band channel (EOBC) interface to communicate with the linecards or standby Sup.
- From within an open container, direct access to the EOBC interface used for internal communication with linecards or the standby supervisor. The host bash shell should be used if this access is needed.
- The management interface (mgmt0) is represented as eth1 in the kernel netdevices.
- Use of the VXLAN overlay interface (NVE x) is not supported for applications utilizing the kernel stack. NX-OS features, including CLI commands, are able to use this interface via netstack.

For more information about the NVE interface, see the [Cisco Nexus 9000 Series NX-OS VXLAN Configuration Guide](#).

## Changing the Port Range

Netstack and kstack divide the port range between them. The default port ranges are as follows:

- Kstack—15001 to 58000
- Netstack—58001 to 65535




---

**Note** Within this range 63536 to 65535 are reserved for NAT.

---




---

**Note** The ports configured with **nxapi use-vrf management** uses kstack and are accessible.

---

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<code>[no] sockets local-port-range start-port end-port</code>	This command modifies the port range for kstack. This command does not modify the Netstack range.

**Example**

The following example sets the kstack port range:

```
switch# sockets local-port-range 15001 25000
```

**What to do next**

After you have entered the command, be aware of the following issues:

- Reload the switch after entering the command.
- Leave a minimum of 7000 ports unallocated which are used by Netstack.
- Specify the *start-port* as 15001 or the *end-port* as 65535 to avoid holes in the port range.





## PART II

# Applications

- [Third-Party Applications](#), on page 95
- [Ansible](#), on page 107
- [Puppet Agent](#), on page 109
- [Using Chef Client with Cisco NX-OS](#) , on page 113
- [Nexus Application Development - ISO](#), on page 117
- [Nexus Application Development - SDK](#), on page 121
- [NX-SDK](#), on page 129







## CHAPTER 10

# Third-Party Applications

---

This chapter contains the following sections:

- [About Third-Party Applications, on page 95](#)
- [Guidelines and Limitations, on page 95](#)
- [Installing Third-Party Native RPMs/Packages, on page 95](#)
- [Persistent Third-Party RPMs, on page 97](#)
- [Installing RPM from VSH, on page 98](#)
- [Third-Party Applications, on page 101](#)

## About Third-Party Applications

The RPMs for the Third-Party Applications are available in the repository at [https://devhub.cisco.com/artifactory/open-nxos/7.0-3-12-1/x86\\_64/](https://devhub.cisco.com/artifactory/open-nxos/7.0-3-12-1/x86_64/). These applications are installed in the native host by using the **yum** command in the Bash shell or through the NX-OS CLI.

When you enter the **yum install rpm** command, a Cisco **YUM** plug-in gets executed. This plug-in copies the RPM to a hidden location. On switch reload, the system reinstalls the RPM.

For configurations in `/etc`, a Linux process, **incron**, monitors artifacts that are created in the directory and copies them to a hidden location, which gets copied back to `/etc`.

## Guidelines and Limitations

RPMs for the Third-Party Applications have the following guidelines and limitations:

- Starting with NX-OS 7.0(3)F3(1), the RPMs for the Third-Party Applications are supported on the Cisco Nexus 9508 switch.

## Installing Third-Party Native RPMs/Packages

The complete workflow of package installation is as follows:

## Procedure

Configure the repository on the switch to point to the Cisco repository where agents are stored.

```
bash-4.2# cat /etc/yum/repos.d/open-nxos.repo
[open-nxos]
name=open-nxos
baseurl=https://devhub.cisco.com/artifactory/open-nxos/7.0-3-I2-1/x86_64/

enabled=1
gpgcheck=0
sslverify=0
```

An example of installation of an RPM using *yum*, with full install log.

### Example:

```
bash-4.2# yum install splunkforwarder
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
Setting up Install Process
Resolving Dependencies
--> Running transaction check
---> Package splunkforwarder.x86_64 0:6.2.3-264376 will be installed
--> Finished Dependency Resolution
```

Dependencies Resolved

```
=====
Package                Arch                Version             Repository          Size
=====
Installing:
splunkforwarder        x86_64              6.2.3-264376       open-nxos           13 M
```

Transaction Summary

```
=====
Install      1 Package
```

```
Total size: 13 M
Installed size: 34 M
Is this ok [y/N]: y
Downloading Packages:
Running Transaction Check
Running Transaction Test
Transaction Test Succeeded
Running Transaction
  Installing : splunkforwarder-6.2.3-264376.x86_64
```

1/1

complete

```
Installed:
 splunkforwarder.x86_64 0:6.2.3-264376
```

```
Complete!
bash-4.2#
```

An example of querying the switch for successful installation of the package, and verifying that its processes or services are up and running.

**Example:**

```

bash-4.2# yum info splunkforwarder
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
Fretta          | 951 B      00:00 ...
groups-repo    | 1.1 kB     00:00 ...
localdb        | 951 B      00:00 ...
patching       | 951 B      00:00 ...
thirdparty     | 951 B      00:00 ...
Installed Packages
Name           : splunkforwarder
Arch           : x86_64
Version        : 6.2.3
Release        : 264376
Size           : 34 M
Repo           : installed
From repo      : open-nxos
Summary        : SplunkForwarder
License        : Commercial
Description    : The platform for machine data.

```

## Persistent Third-Party RPMs

The following is the logic behind persistent third-party RPMs:

- A local **yum** repository is dedicated to persistent third-party RPMs. The `/etc/yum/repos.d/thirdparty.repo` points to `/bootflash/.rpmstore/thirdparty`.
- Whenever you enter the **yum install third-party.rpm** command, a copy of the RPM is saved in `//bootflash/.rpmstore/thirdparty`.
- During a reboot, all the RPMs in the third-party repository are reinstalled on the switch.
- Any change in the `/etc` configuration files persists under `/bootflash/.rpmstore/config/etc` and they are replayed during boot on `/etc`.
- Any script that is created in the `/etc` directory persists across reloads. For example, a third-party service script that is created under `/etc/init.d/` brings up the apps during a reload.



**Note** The rules in iptables are not persistent across reboots when they are modified in a bash-shell.

To make the modified iptables persistent, see [Making an Iptable Persistent Across Reloads, on page 154](#).

# Installing RPM from VSH

## Package Addition

NX-OS feature RPMs can also be installed by using the VSH CLIs.

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>show install package</b>	Displays the packages and versions that already exist.
<b>Step 2</b>	<b>install add ?</b>	Determine supported URIs.
<b>Step 3</b>	<b>install add rpm-packagename</b>	The <b>install add</b> command copies the package file to a local storage device or network server.

### Example

The following example shows how to activate the Chef RPM:

```
switch# show install package
switch# install add ?
WORD          Package name
bootflash:   Enter package uri
ftp:         Enter package uri
http:        Enter package uri
modflash:    Enter package uri
scp:         Enter package uri
sftp:        Enter package uri
tftp:        Enter package uri
usb1:        Enter package uri
usb2:        Enter package uri
volatile:    Enter package uri
switch# install add
bootflash:chef-12.0.0alpha.2+20150319234423.git.1608.b6eb10f-1.e15.x86_64.rpm
[#####] 100%
Install operation 314 completed successfully at Thu Aug 6 12:58:22 2015
```

### What to do next

When you are ready to activate the package, go to [Package Activation, on page 99](#).



**Note** Adding and activating an RPM package can be accomplished in a single command:

```
switch#
install add bootflash:chef-12.0.0alpha.2+20150319234423.git.1608.b6eb10f-1.e15.x86_64.rpm
activate
```

## Package Activation

### Before you begin

The RPM has to have been previously added.

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>show install inactive</b>	Displays the list of packages that were added and not activated.
<b>Step 2</b>	<b>install activate</b> <i>rpm-packagename</i>	Activates the package.

### Example

The following example shows how to activate a package:

```
switch# show install inactive
Boot image:
  NXOS Image: bootflash:///yumcli6.bin

Inactive Packages:
  sysinfo-1.0.0-7.0.3.x86_64
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
                : protect-packages
Available Packages
chef.x86_64          12.0.0alpha.2+20150319234423.git.1608.b6eb10f-1.e15  thirdparty
eigrp.lib32_n9000  1.0.0-r0                                           groups-rep
o
sysinfo.x86_64     1.0.0-7.0.3                                       patching
switch# install activate chef-12.0-1.e15.x86_64.rpm
[#####] 100%
Install operation completed successfully at Thu Aug 6 12:46:53 2015
```

## Deactivating Packages

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>install deactivate</b> <i>package-name</i>	Deactivates the RPM package.

### Example

The following example shows how to deactivate the Chef RPM package:

```
switch# install deactivate chef
```

## Removing Packages

### Before you begin

Deactivate the package before removing it. Only deactivated RPM packages can be removed.

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<code>install remove package-name</code>	Removes the RPM package.

### Example

The following example shows how to remove the Chef RPM package:

```
switch# install remove chef-12.0-1.e15.x86_64.rpm
```

## Displaying Installed Packages

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<code>show install packages</code>	Displays a list of the installed packages.

### Example

The following example shows how to display a list of the installed packages:

```
switch# show install packages
```

## Displaying Detail Logs

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<code>show tech-support install</code>	Displays the detail logs.

### Example

The following example shows how to display the detail logs:

```
switch# show tech-support install
```

## Upgrading a Package

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	install add <i>package-name</i> activate upgrade	Upgrade a package.

### Example

The following example shows how to upgrade a package:

```
switch# install add bootflash:bgp-1.0.1-r0.lib32_n9000.rpm activate ?
downgrade Downgrade package
forced Non-interactive
upgrade Upgrade package
switch# install add bootflash:bgp-1.0.1-r0.lib32_n9000.rpm activate upgrade
[#####] 100%
Install operation completed successfully at Thu Aug 6 12:46:53 2015
```

## Downgrading a Package

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	install add <i>package-name</i> activate downgrade	Downgrade a package.

### Example

The following example shows how to downgrade a package:

```
switch# install add bootflash:bgp-1.0.1-r0.lib32_n9000.rpm activate ?
downgrade Downgrade package
forced Non-interactive
upgrade Upgrade package
switch# install add bootflash:bgp-1.0.1-r0.lib32_n9000.rpm activate downgrade
[#####] 100%
Install operation completed successfully at Thu Aug 6 12:46:53 2015
```

## Third-Party Applications

### NX-OS

For more information about NX-API REST API object model specifications, see <https://developer.cisco.com/media/dme/index.html>

## DevOps Configuration Management Tools

For DevOps configuration management tools, refer to the following links:

- Ansible 2.0 Release(Nexus Support), [Ansible Release Index](#)
- Ansible NX-OS Sample Modules, [Ansible NX-OS Sample Modules](#)
- Puppet, [Puppet Forge Cisco Puppet](#)
- Cisco Puppet Module(Git), [Cisco Network Puppet Module](#)
- Chef, [Chef Supermarket Cisco Cookbook](#)
- Cisco Chef Cookbook(Git), [Cisco Network Chef Cookbook](#)

## V9K

To download a virtual Nexus 9000 switch, for an ESX5.1/5.5, VirtualBox, Fusion, and KVM, go to <https://software.cisco.com/portal/pub/download/portal/select.html?&mdfid=286312239&flowid=81422&softwareid=282088129>.

## Automation Tool Educational Content

For a free book on Open NX-OS architecture and automation, see [http://www.cisco.com/c/dam/en/us/td/docs/switches/datacenter/nexus9000/sw/open\\_nxos/programmability/guide/Programmability\\_Open\\_NX-OS.pdf](http://www.cisco.com/c/dam/en/us/td/docs/switches/datacenter/nexus9000/sw/open_nxos/programmability/guide/Programmability_Open_NX-OS.pdf)

## collectd

collectd is a daemon that periodically collects system performance statistics and provides multiple means to store the values, such as RRD files. Those statistics can then be used to find current performance bottlenecks (for example, performance analysis) and predict future system load (that is, capacity planning).

For additional information, see <https://collectd.org>.

## Ganglia

Ganglia is a scalable distributed monitoring system for high-performance computing systems such as clusters and grids. It is based on a hierarchical design that is targeted at federations of clusters. It leverages widely used technologies such as XML for data representation, XDR for compact, portable data transport, and RRDtool for data storage and visualization. It uses engineered data structures and algorithms to achieve low per-node overheads and high concurrency. The implementation is robust, has been ported to an extensive set of operating systems and processor architectures, and is currently in use on thousands of clusters around the world. It has been used to link clusters across university campuses and around the world and can scale to handle clusters with 2000 nodes.

For additional information, see <http://ganglia.info>.



## Iperf

Iperf was developed by NLANR/DAST to measure maximum TCP and UDP bandwidth performance. Iperf allows the tuning of various parameters and UDP characteristics. Iperf reports bandwidth, delay jitter, datagram loss.

For additional information, see <http://sourceforge.net/projects/iperf/> or <http://iperf.sourceforge.net>.

## LLDP

The link layer discover protocol (LLDP) is an industry standard protocol that is designed to supplant proprietary link layer protocols such as EDP or CDP. The goal of LLDP is to provide an intervendor compatible mechanism to deliver link layer notifications to adjacent network devices.

For more information, see <https://vincentbernat.github.io/lldpd/index.html>.

## Nagios

Nagios is open source software that monitors the following through the Nagios remote plug-in executor (NRPE) and through SSH or SSL tunnels:

- Network services through ICMP, SNMP, SSH, FTP, HTTP, and so on
- Host resources, such as CPU load, disk usage, system logs, and so on
- Alert services for servers, switches, applications
- Services

For more information, see <https://www.nagios.org/>.

## OpenSSH

OpenSSH is an open-source version of the SSH connectivity tools that encrypts all traffic (including passwords) to eliminate eavesdropping, connection hijacking, and other attacks. OpenSSH provides secure tunneling capabilities and several authentication methods, and supports all SSH protocol versions.

For more information, see <http://www.openssh.com>.

## Quagga

Quagga is a network routing software suite that implements various routing protocols. Quagga daemons are configured through a network accessible CLI called a "vty."



---

**Note** Only Quagga BGP has been validated.

---

For more information, see <http://www.nongnu.org/quagga/>.

## Splunk

Splunk is a web-based data collection, analysis, and monitoring tool that has search, visualization, and prepackaged content for use-cases. The raw data is sent to the Splunk server using the Splunk Universal Forwarder. Universal Forwarders provide reliable, secure data collection from remote sources and forward that data into the Splunk Enterprise for indexing and consolidation. They can scale to tens of thousands of remote systems, collecting terabytes of data with a minimal impact on performance.

For additional information, see [http://www.splunk.com/en\\_us/download/universal-forwarder.html](http://www.splunk.com/en_us/download/universal-forwarder.html).

## tcollector

tcollector is a client-side process that gathers data from local collectors and pushes the data to Open Time Series Database (OpenTSDB).

tcollector has the following features:

- Runs data collectors and collates the data.
- Manages connections to the time series database (TSD).
- Eliminates the need to embed TSD code in collectors.
- Deduplicates repeated values.
- Handles wire protocol work.

For additional information, see [http://opentsdb.net/docs/build/html/user\\_guide/utilities/tcollector.html](http://opentsdb.net/docs/build/html/user_guide/utilities/tcollector.html).

## tcpdump

tcpdump is a CLI application that prints a description of the contents of packets on a network interface that match a Boolean expression. The description is preceded by a timestamp, printed, by default, as hours, minutes, seconds, and fractions of a second since midnight.

tcpdump can be run with the following flags:

- `-w`, which causes it to save the packet data to a file for later analysis.
- `-r`, which causes it to read from a saved packet file rather than to read packets from a network interface.
- `-V`, which causes it to read a list of saved packet files.

In all cases, tcpdump processes only the packets that match the expression.

For more information, see <http://www.tcpdump.org/manpages/tcpdump.1.html>.

## TShark

TShark is a network protocol analyzer on the CLI. Tshar lets you capture packet data from a live network, or read packets from a previously saved capture file. You can print either a decoded form of those packets to the standard output or write the packets to a file. TShark's native capture file format is pcap, the format that is used by **tcpdump** and various other tools also. TShark can be used within the Guest Shell after removing the `cap_net_admin` file capability.

```
setcap  
cap_net_raw=ep /sbin/dumppcap
```



---

**Note** This command must be run within the Guest Shell.

---

For more information, see <https://www.wireshark.org/docs/man-pages/tshark.html>.





# CHAPTER 11

## Ansible

- [Prerequisites](#), on page 107
- [About Ansible](#), on page 107
- [Cisco Ansible Module](#), on page 107

## Prerequisites

Go to [https://docs.ansible.com/ansible/latest/getting\\_started/index.html](https://docs.ansible.com/ansible/latest/getting_started/index.html) for installation requirements for supported control environments.

## About Ansible

Ansible is an open-source IT automation engine that automates cloud provisioning, configuration management, application deployment, intraservice orchestration, and other IT needs.

Ansible uses small programs that are called Ansible modules to make API calls to your nodes, and apply configurations that are defined in playbooks.

By default, Ansible represents what machines it manages using a simple INI file that puts all your managed machines in groups of your own choosing.

More information can be found from Ansible:

Ansible	<a href="https://www.ansible.com/">https://www.ansible.com/</a>
Ansible Automation Solutions. Includes installation instructions, playbook instructions and examples, module lists, and so on.	<a href="https://docs.ansible.com/">https://docs.ansible.com/</a>

## Cisco Ansible Module

There are multiple Cisco NX-OS-supported modules and playbooks for Ansible, as per the following table of links:

NX-OS developer landing page.	<a href="#">Configuration Management Tools</a>
-------------------------------	--

Ansible NX-OS playbook examples	<a href="#">Repo for ansible nxos playbooks</a>
Ansible NX-OS network modules	<a href="#">nxos network modules</a>



## CHAPTER 12

# Puppet Agent

This chapter includes the following sections:

- [About Puppet, on page 109](#)
- [Prerequisites, on page 109](#)
- [Puppet Agent NX-OS Environment, on page 110](#)
- [ciscopuppet Module, on page 110](#)

## About Puppet

The Puppet software package, developed by Puppet Labs, is an open source automation toolset for managing servers and other resources. The Puppet software accomplishes server and resource management by enforcing device states, such as configuration settings.

Puppet components include a puppet agent which runs on the managed device (node) and a Puppet Primary (server). The Puppet Primary typically runs on a separate dedicated server and serves multiple devices. The operation of the puppet agent involves periodically connecting to the Puppet Primary, which in turn compiles and sends a configuration manifest to the agent. The agent reconciles this manifest with the current state of the node and updates state that is based on differences.

A puppet manifest is a collection of property definitions for setting the state on the device. The details for checking and setting these property states are abstracted so that a manifest can be used for more than one operating system or platform. Manifests are commonly used for defining configuration settings, but they also can be used to install software packages, copy files, and start services.

More information can be found from Puppet Labs:

Puppet Labs	<a href="https://puppetlabs.com">https://puppetlabs.com</a>
Puppet Labs FAQ	<a href="https://puppet.com/blog/how-get-started-puppet-enterprise-faq/">https://puppet.com/blog/how-get-started-puppet-enterprise-faq/</a>
Puppet Labs Documentation	<a href="https://puppet.com/docs">https://puppet.com/docs</a>

## Prerequisites

The following are prerequisites for the Puppet Agent:

- You must have a Cisco Nexus switch and operating system software release that supports the installation.
  - Cisco Nexus 9300 Series switch.
  - Cisco Nexus 9500 Series switch.
  - Cisco NX-OS release 7.0(3)I2(5) or later.
- You must have the required disk storage available on the device for virtual services installation and deployment of Puppet Agent.
  - A minimum of 450-MB free disk space on the bootflash.
- You must have a Puppet Primary server with Puppet 4.0 or later.
- You must have Puppet Agent 4.0 or later.

## Puppet Agent NX-OS Environment

The Puppet Agent software must be installed on a switch in the Guest Shell (the Linux container environment running CentOS). The Guest Shell provides a secure, open execution environment that is decoupled from the host.

Starting with the Cisco NX-OS Release 9.2(1), the Bash-shell (native WindRiver Linux environment underlying Cisco NX-OS) install of Puppet Agent is no longer supported.

The following provides information about agent-software download, installation, and setup:

Puppet Agent: Installation & Setup on Cisco Nexus switches (Manual Setup)	<a href="https://github.com/cisco/cisco-network-puppet-module/blob/develop/docs/README-agent-install.md">https://github.com/cisco/cisco-network-puppet-module/blob/develop/docs/README-agent-install.md</a>
---	---

## ciscopuppet Module

The ciscopuppet module is a Cisco developed open-source software module. It interfaces between the abstract resources configuration in a puppet manifest and the specific implementation details of the Cisco NX-OS operating system and platform. This module is installed on the Puppet Primary and is required for puppet agent operation on Cisco Nexus switches.

The ciscopuppet module is available on Puppet Forge.

The following provide additional information about the ciscopuppet module installation procedures:

ciscopuppet Module location (Puppet Forge)	<a href="#">Puppet Forge</a>
Resource Type Catalog	<a href="#">Cisco Puppet Resource Reference</a>
ciscopuppet Module: Source Code Repository	<a href="#">Cisco Network Puppet Module</a>
ciscopuppet Module: Setup & Usage	<a href="#">Cisco Puppet Module::README.md</a>



Puppet Labs: Installing Modules	<a href="https://puppet.com/docs/puppet/7/modules_installing.html">https://puppet.com/docs/puppet/7/modules_installing.html</a>
Puppet NX-OS Manifest Examples	<a href="#">Cisco Network Puppet Module Examples</a>
NX-OS developer landing page.	<a href="#">Configuration Management Tools</a>





# CHAPTER 13

## Using Chef Client with Cisco NX-OS

This chapter includes the following sections:

- [About Chef, on page 113](#)
- [Prerequisites, on page 113](#)
- [Chef Client NX-OS Environment, on page 114](#)
- [cisco-cookbook, on page 114](#)

### About Chef

Chef is an open-source software package that is developed by Chef Software, Inc. The software package is a systems and cloud infrastructure automation framework that deploys servers and applications to any physical, virtual, or cloud location, no matter the size of the infrastructure. Each organization consists of one or more workstations, a single server, and every node that the chef-client has configured and is maintaining. Cookbooks and recipes are used to tell the chef-client how each node should be configured. The chef-client, which is installed on every node, does the actual configuration.

A Chef cookbook is the fundamental unit of configuration and policy distribution. A cookbook defines a scenario and contains everything that is required to support that scenario, including libraries, recipes, files, and more. A Chef recipe is a collection of property definitions for setting state on the device. The details for checking and setting these property states are abstracted away so that a recipe may be used for more than one operating system or platform. While recipes are commonly used for defining configuration settings, they also can be used to install software packages, copy files, start services, and more.

The following references provide more information from Chef:

Topic	Link
Chef home	<a href="https://www.chef.io">https://www.chef.io</a>
Chef overview	<a href="https://docs.chef.io/chef_overview.html">https://docs.chef.io/chef_overview.html</a>
Chef documentation (all)	<a href="https://docs.chef.io/">https://docs.chef.io/</a>

### Prerequisites

The following are prerequisites for Chef:

- You must have a Cisco device and operating system software release that supports the installation:
  - Cisco Nexus 9500 Series switch
  - Cisco Nexus 9300 Series switch
  - Cisco NX-OS Release 7.0(3)I2(5) or later
- You must have the required disk storage available on the device for Chef deployment:
  - A minimum of 500 MB of free disk space on bootflash
- You need a Chef server with Chef 12.4.1 or higher.
- You need Chef Client 12.4.1 or higher.

## Chef Client NX-OS Environment

The chef-client software must be installed on a switch in the Guest Shell (the Linux container environment running CentOS). This software provides a secure, open execution environment that is decoupled from the host.

Starting with the Cisco NX-OS Release 9.2(1), the Bash-shell (native WindRiver Linux environment underlying NX-OS) install of chef-client is no longer supported.

The following documents provide step-by-step guidance about agent-software download, installation, and setup:

Topic	Link
Chef Client: Installation and setup on Cisco Nexus platform (manual setup)	<a href="#">cisco-cookbook::README-install-agent.md</a>
Chef Client: Installation and setup on a switch (automated installation using the Chef provisioner)	<a href="#">cisco-cookbook::README-chef-provisioning.md</a>

## cisco-cookbook

cisco-cookbook is a Cisco-developed open-source interface between the abstract resources configuration in a Chef recipe and the specific implementation details of the switch. This cookbook is installed on the Chef Server and is required for proper Chef Client operation on switches.

The cisco-cookbook can be found on Chef Supermarket.

The following documents provide more detail for cisco-cookbook and generic cookbook installation procedures:

Topic	Link
cisco-cookbook location	<a href="#">Chef Supermarket Cisco Cookbook</a>
Resource Type Catalog	<a href="#">Resource Catalog (by Technology)</a>
cisco-cookbook: Source Code Repository	<a href="#">Cisco Network Chef Cookbook</a>

Topic	Link
cisco-cookbook: Setup and usage	<a href="#">Chef Cookbook Setup and Usage</a>
Chef Supermarket	<a href="#">Chef Supermarket</a>
Chef NX-OS Manifest Examples	<a href="#">Cisco Network Chef Cookbook Recipes</a>





## CHAPTER 14

# Nexus Application Development - ISO

---

This chapter contains the following sections:

- [About ISO, on page 117](#)
- [Installing the ISO, on page 117](#)
- [Using the ISO to Build Applications, on page 118](#)
- [Using RPM to Package an Application, on page 119](#)

## About ISO

The ISO image is a bootable Wind River 5 environment that includes the necessary tools, libraries, and headers to build and RPM-package third-party applications to run natively on a switch.

The content is not exhaustive, and it might be required that the user download and build any dependencies needed for any particular application.



---

**Note** Some applications are ready to be downloaded and used from the Cisco devhub website and do not require building.

---

## Installing the ISO

The ISO image is available for download at: [http://devhub.cisco.com/artifactory/simple/open-nxos/7.0-3-12-1/x86\\_64/satori-vm-intel-xeon-core.iso](http://devhub.cisco.com/artifactory/simple/open-nxos/7.0-3-12-1/x86_64/satori-vm-intel-xeon-core.iso).

The ISO is intended to be installed as a virtual machine. Use instructions from your virtualization vendor to install the ISO.

### Procedure

---

**Step 1** (Optional) VMware-based installation.

The ISO image installation on a VMWare virtual machine requires the virtual disk to be configured as SATA and not SCSI.

**Step 2** (Optional) QEMU-based installation.

Enter the following commands:

```
bash$ qemu-img create satori.img 10G
bash$ qemu-system-x86_64 -cdrom ./satori-vm-intel-xeon-core.iso -hda ./satori.img -m 8192
```

Once the ISO starts to boot, a menu is displayed. Choose the **Graphics Console Install** option. This installs to the virtual HD. Once the install is complete, the virtual machine must be rebooted.

**What to do next**

To login to the system, enter **root** as the login and **root** as the password.

Using the ISO to Build Applications Most of the build procedures that work with the SDK, and Linux in general, also apply to the ISO environment. However, there is no shell environment script to run. The default paths should be fine to use the tools installed. The source code for applications needs to be obtained through the usual mechanisms such as a source tar file or git repository.

Build the source code:

```
bash$ tar --xvzf example-lib.tgz
bash$ mkdir example-lib-install
bash$ cd example-lib/
bash$ ./configure --prefix=/path/to/example_lib_install
bash$ make

bash$ make install
```

## Using the ISO to Build Applications

Most of the build procedures that work with the SDK, and Linux in general, also apply to the ISO environment. However, there is no shell environment script to run. The default paths should be fine to use the tools installed. The source code for applications needs to be obtained through the usual mechanisms such as a source tar file or git repository.

**Procedure**

Build the source code.

- a) **tar -xvzf example-lib.tgz**
- b) **mkdir example-lib-install**
- c) **cd example-lib/**
- d) **./configure --prefix=path\_to\_example-lib-install**
- e) **make**
- f) **make install**

The steps are normal Linux.

**Example:**

The following example shows how to build the source code:



```
bash$ tar -xvzf example-lib.tgz
bash$ mkdir example-lib-install
bash$ cd example-lib/
bash$ ./configure --prefix=<path_to_example-lib-install>
bash$ make
bash$ make install
```

---

## Using RPM to Package an Application

If the application successfully builds using "make", then it can be packaged into an RPM.



---

### Note RPM and spec files

The RPM package format is designed to package up all files (binaries, libraries, configurations, documents, etc) that are needed for a complete install of the given application. The process of creating an RPM file is therefore somewhat non-trivial. To aid in the RPM build process, a .spec file is used that controls everything about the build process.

---



**Note** Many third-party applications are available on the internet in the form of source code packaged into tarballs. In many cases, these tarballs will include a .spec file to help with RPM build process. Unfortunately, many of these .spec files are not updated as frequently as the source code itself. Even worse, sometimes there is no spec file at all. In these cases the spec file may need editing or even creating from scratch so that RPMs can be built.

---





## CHAPTER 15

# Nexus Application Development - SDK

---

This chapter contains the following sections:

- [About the Cisco SDK, on page 121](#)
- [Installing the SDK, on page 121](#)
- [Procedure for Installation and Environment Initialization, on page 122](#)
- [Using the SDK to Build Applications, on page 123](#)
- [Using RPM to Package an Application, on page 124](#)
- [Creating an RPM Build Environment, on page 125](#)
- [Using General RPM Build Procedure, on page 125](#)
- [Example to Build RPM for collectd with No Optional Plug-Ins, on page 126](#)
- [Example to Build RPM for collectd with Optional Curl Plug-In, on page 127](#)

## About the Cisco SDK

The Cisco SDK is a development kit based on Yocto 1.2. It contains all of the tools needed to build applications for execution on a switch running the Cisco NX-OS Release 7.0(3)I2(1) and later. The basic components are the C cross-compiler, linker, libraries, and header files that are commonly used in many applications. The list is not exhaustive, and it might be required that you download and build any dependencies needed for any particular application. Note that some applications are ready to be downloaded and used from the Cisco devhub website and do not require building. The SDK can be used to build RPM packages which may be directly installed on a switch.

## Installing the SDK

The following lists the system requirements:

- The SDK can run on most modern 64-bit x86\_64 Linux systems. It has been verified on CentOS 7 and Ubuntu 14.04. Install and run the SDK under the Bash shell.
- The SDK includes binaries for both 32-bit and 64-bit architectures, so it must be run on an x86\_64 Linux system that also has 32-bit libraries installed.

## Procedure

---

Check if the 32-bit libraries are installed:

### Example:

```
bash$ ls /lib/ld-linux.so.2
```

If this file exists, then 32-bit libraries should be installed already. Otherwise, install 32-bit libraries as follows:

- For CentOS 7:

```
bash$ sudo yum install glibc.i686
```

- For Ubuntu 14.04:

```
bash$ sudo apt-get install gcc-multilib
```

---

# Procedure for Installation and Environment Initialization

The SDK is available for download at: [https://devhub.cisco.com/artifactory/open-nxos/10.0.1/nx-linux-x86\\_64-nxos-rootfs-n9k-sup-toolchain-1.1.0.sh](https://devhub.cisco.com/artifactory/open-nxos/10.0.1/nx-linux-x86_64-nxos-rootfs-n9k-sup-toolchain-1.1.0.sh)

This file is a self-extracting archive that installs the SDK into a directory of your choice. You are prompted for a path to an SDK installation directory.

```
bash$ ./wrlinux-8.0.0.25-glibc-x86_64-n9000-nxos-image-rpm-sdk-sdk.sh
Wind River Linux SDK installer version 8.0-n9000
=====
Enter target directory for SDK (default: /opt/windriver/wrlinux/8.0-n9000):
You are about to install the SDK to "/opt/windriver/wrlinux/8.0-n9000". Proceed[Y/n]? Y
Extracting
SDK.....done
Setting it up...done
SDK has been successfully set up and is ready to be used.

. environment-setup-corei7-64-nxos-linux
. environment-setup-corei7-32-nxosmllib32-linux

source environment-setup-corei7-64-nxos-linux
source environment-setup-corei7-32-nxosmllib32-linux
=====
```

Use the **source environment-setup-x86\_64-wrs-linux** command to add the SDK-specific paths to your shell environment. This must be done for each shell you intend to use with the SDK. This is the key to setting up the SDK in order to use the correct versions of the build tools and libraries.

## Procedure

---

- Step 1** Browse to the installation directory.

**Step 2** Enter the following command at the Bash prompt:

```
bash$ source environment-setup-x86_64-wrs-linux
```

## Using the SDK to Build Applications

Many of the common Linux build processes work for this scenario. Use the techniques that are best suited for your situation.

The source code for an application package can be retrieved in various ways. For example, you can get the source code either in tar file form or by downloading from a git repository where the package resides.

The following are examples of some of the most common cases.

**(Optional) Verify that the application package builds using standard configure/make/make install.**

```
bash$ tar --xvzf example-app.tgz
bash$ mkdir example-lib-install
bash$ cd example-app/
bash$ ./configure --prefix=/path/to/example-app-install
bash$ make
bash$ make install
```

Sometimes it is necessary to pass extra options to the `./configure` script, for example to specify which optional components and dependencies are needed. Passing extra options depends entirely on the application being built.

### Example - Build Ganglia and its dependencies

In this example, we build ganglia, along with the third-party libraries that it requires - libexpat, libapr, and libconfuse.

#### libexpat

```
bash$ wget 'http://downloads.sourceforge.net/project/expat/expat/2.1.0/expat-2.1.0.tar.gz'
bash$ mkdir expat-install
bash$ tar xvzf expat-2.1.0.tar.gz
bash$ cd expat-2.1.0
bash$ ./configure --prefix=/home/sdk-user/expat-install
bash$ make
bash$ make install
bash$ cd ..
```

#### libapr

```
bash$ wget 'http://www.eu.apache.org/dist/apr/apr-1.5.2.tar.gz'
bash$ mkdir apr-install
bash$ tar xvzf apr-1.5.2.tar.gz
bash$ cd apr-1.5.2
bash$ ./configure --prefix=/home/sdk-user/apr-install
bash$ make
bash$ make install
bash$ cd ..
```

#### libconfuse



**Note** confuse requires the extra `--enable-shared` option to `./configure`, otherwise it builds a statically linked library instead of the required shared library.

```
bash$ wget 'http://savannah.nongnu.org/download/confuse/confuse-2.7.tar.gz'
bash$ mkdir confuse-install
bash$ tar xvzf confuse-2.7.tar.gz
bash$ cd confuse-2.7
bash$ ./configure --prefix=/home/sdk-user/confuse-install --enable-shared
bash$ make
bash$ make install
bash$ cd ..
```

### ganglia



**Note** The locations to all the required libraries are passed to `./configure`.

```
bash$ wget
'http://downloads.sourceforge.net/project/ganglia/ganglia%20monitoring%20core/3.7.2/ganglia-3.7.2.tar.gz'
bash$ mkdir ganglia-install
bash$ tar xvzf ganglia-3.7.2.tar.gz
bash$ cd ganglia-3.7.2
bash$ ./configure --with-libexpat=/home/sdk-user/expat-install
--with-libapr=/home/sdk-user/apr-install/bin/apr-1-config
--with-libconfuse=/home/sdk-user/confuse-install --prefix=/home/sdk-user/ganglia-install
bash$ make
bash$ make install
bash$ cd ..
```

## Using RPM to Package an Application

If the application successfully builds using "make", then it can be packaged into an RPM.



**Note** **RPM and spec files**

The RPM package format is designed to package up all files (binaries, libraries, configurations, documents, etc) that are needed for a complete install of the given application. The process of creating an RPM file is therefore somewhat non-trivial. To aid in the RPM build process, a `.spec` file is used that controls everything about the build process.



**Note** Many third-party applications are available on the internet in the form of source code packaged into tarballs. In many cases, these tarballs will include a `.spec` file to help with RPM build process. Unfortunately, many of these `.spec` files are not updated as frequently as the source code itself. Even worse, sometimes there is no `spec` file at all. In these cases the `spec` file may need editing or even creating from scratch so that RPMs can be built.

# Creating an RPM Build Environment

Before using the SDK to build RPMs, an RPM build directory structure must be created, and some RPM macros set.

## Procedure

**Step 1** Create the directory structure:

```
bash$ mkdir rpmbuild
bash$ cd rpmbuild
bash$ mkdir BUILD RPMS SOURCES SPECS SRPMS
```

**Step 2** Set the topdir macro to point to the directory structure created above:

```
bash$ echo "_topdir ${PWD}" > ~/.rpmmacros
```

**Note** This step assumes that the current user does not already have a .rpmmacros file that is already set up. If it is inconvenient to alter an existing .rpmmacros file, then the following may be added to all rpmbuild command lines:

```
--define "_topdir ${PWD}"
```

**Step 3** Refresh the RPM DB:

```
bash$ rm /path/to/sdk/sysroots/x86_64-wrlinuxsdk-linux/var/lib/rpm/__db.*
bash$ rpm --rebuilddb
```

**Note** The rpm and rpmbuild tools in the SDK have been modified to use /path/to/sdk/sysroots/x86\_64-wrlinuxsdk-linux/var/lib/rpm as the RPM database instead of the normal /var/lib/rpm. This modification prevents any conflicts with the RPM database for the host when not using the SDK and removes the need for root access. After SDK installation, the SDK RPM database must be rebuilt through this procedure.

# Using General RPM Build Procedure

General RPM Build procedure is as follows:

```
bash$ wget --no-check-certificate --directory-prefix=SOURCES http://<URL of example-app tarball>
bash$ # determine location of spec file in tarball:
bash$ tar tf SOURCES/example-app.tar.bz2 | grep '.spec$'
bash$ tar xkvf SOURCES/example-app.tar.bz2 example-app/example-app.spec
bash$ mv example-app/example-app.spec SPECS/
bash$ rm -rf example-app
bash$ rpmbuild -v --bb SPECS/example-app.spec
```

The result is a binary RPM in RPMS/ that can be copied to the switch and installed. Installation and configuration of applications can vary. Refer to the application documents for those instructions.

This rpmbuild and installation on the switch is required for every software package that is required to support the application. If a software dependency is required that is not already included in the SDK, the source code must be obtained and the dependencies built. On the build machine, the package can be built manually for verification of dependencies. The following example is the most common procedure:

```
bash$ tar xkzf example-lib.tgz
bash$ mkdir example-lib-install
bash$ cd example-lib/
bash$ ./configure --prefix=/path/to/example-lib-install
bash$ make
bash$ make install
```

These commands place the build files (binaries, headers, libraries, and so on) into the installation directory. From here, you can use standard compiler and linker flags to pick up the location to these new dependencies. Any runtime code, such as libraries, are required to be installed on the switch also, so packaging required runtime code into an RPM is required.




---

**Note** There are many support libraries already in RPM form on the Cisco devhub website.

---

## Example to Build RPM for collectd with No Optional Plug-Ins

Download source tarball and extract spec file:

```
bash$ wget --no-check-certificate --directory-prefix=SOURCES
https://collectd.org/files/collectd-5.5.0.tar.bz2
bash$ tar tf SOURCES/collectd-5.5.0.tar.bz2 | grep '.spec$'
collectd-5.5.0/contrib/redhat/collectd.spec
collectd-5.5.0/contrib/aix/collectd.spec
collectd-5.5.0/contrib/sles10.1/collectd.spec
collectd-5.5.0/contrib/fedora/collectd.spec
bash$ tar xkvf SOURCES/collectd-5.5.0.tar.bz2 collectd-5.5.0/contrib/redhat/collectd.spec
bash$ mv collectd-5.5.0/contrib/redhat/collectd.spec SPECS/
bash$ rm -rf collectd-5.5.0
```

There are four spec files in this tarball. The Red Hat spec file is the most comprehensive and is the only one that contains the correct collectd version. We will use it as an example.

This spec file sets the RPM up to use /sbin/chkconfig to install collectd. However on a switch, you will use the /usr/sbin/chkconfig instead. Edit the following edited in the spec file:

```
bash$ sed -r -i.bak 's%(^|\s)/sbin/chkconfig%\1/usr/sbin/chkconfig%' SPECS/collectd.spec
```

*collectd* has numerous optional plug-ins. This spec file enables many plug-ins by default. Many plug-ins have external dependencies, so options to disable these plug-ins must be passed to the **rpmbuild** command line. Instead of typing out one long command line, we can manage the options in a Bash array as follows:

```
bash$ rpmbuild_opts=()
bash$ for rmddep in \
> amqp apache ascent bind curl curl_xml dbi ipmi java memcached mysql nginx \
> notify_desktop notify_email nut openldap perl pinba ping postgresql python \
> rrdtool sensors snmp varnish virt write_http write_riemann
> do
>   rpmbuild_opts+=("--without")
>   rpmbuild_opts+=(${rmddep})
```



```
> done
bash$ rpmbuild_opts+=(--nodeps)
bash$ rpmbuild_opts+=(--define)
bash$ rpmbuild_opts+=("_unpackaged_files_terminate_build 0")
```

It is then passed to rpmbuild as follows to start the entire build and RPM package process:

```
bash$ rpmbuild "${rpmbuild_opts[@]}" -bb SPECS/collectd.spec
```

You can then find the resulting RPMs for collectd in the RPMS directory.

These RPM files can now be copied to the switch and installed from the switch Bash shell:

```
bash$ rpm --noparentdirs -i /bootflash/collectd-5.5.0-1.ia32e.rpm
```

## Example to Build RPM for collectd with Optional Curl Plug-In

The collectd curl plug-in has libcurl as a dependency.

In order to satisfy this link dependency during the RPM build process, it is necessary to download and build curl under the SDK:

```
bash$ wget --no-check-certificate http://curl.haxx.se/download/curl-7.24.0.tar.gz
bash$ tar xkvf curl-7.24.0.tar.gz
bash$ cd curl-7.24.0
bash$ ./configure --without-ssl --prefix /path/to/curl-install
bash$ make
bash$ make install
bash$ cd ..
```



**Note** The curl binaries and libraries are installed to /path/to/curl-install. This directory will be created if it does not already exist, so you must have write permissions for the current user. Next, download the source tarball and extract the spec file. This step is exactly the same as in the collectd example for no plugins.

```
bash$ wget --no-check-certificate --directory-prefix=SOURCES
https://collectd.org/files/collectd-5.5.0.tar.bz2
bash$ tar tf SOURCES/collectd-5.5.0.tar.bz2 | grep '.spec$'
collectd-5.5.0/contrib/redhat/collectd.spec
collectd-5.5.0/contrib/aix/collectd.spec
collectd-5.5.0/contrib/sles10.1/collectd.spec
collectd-5.5.0/contrib/fedora/collectd.spec
bash$ tar xkvf SOURCES/collectd-5.5.0.tar.bz2 collectd-5.5.0/contrib/redhat/collectd.spec
bash$ mv collectd-5.5.0/contrib/redhat/collectd.spec SPECS/
bash$ rm -rf collectd-5.5.0
```

This spec file sets the RPM up to use /sbin/chkconfig to install collectd. However on a switch, you must use /usr/sbin/chkconfig instead, so the following can be edited in the spec file:



**Note** There are four spec files in this tarball. The Red Hat spec file is the most comprehensive, and it is the only one to contain the correct collectd version. We will use that one as an example.

```
bash$ sed -r -i.bak 's%(^|\s)/sbin/chkconfig%\1/usr/sbin/chkconfig%' SPECS/collectd.spec
```

Here a deviation from the previous example is encountered. The collectd rpmbuild process needs to know the location of libcurl. Edit the collectd spec file to add the following.

Find the string `%configure` in `SPECS/collectd.spec`. This line and those following it define the options that rpmbuild will pass to the `./configure` script.

Add the following option:

```
--with-libcurl=/path/to/curl-install/bin/curl-config \
```

Next a Bash array is built again to contain the rpmbuild command options. Note the following differences:

- `curl` is removed from the list of plug-ins not to be built
- The addition of `--with curl=force`

```
bash$ rpmbuild_opts=()
bash$ for rmdep in \
> amqp apache ascent bind curl_xml dbi ipmi java memcached mysql nginx \
> notify_desktop notify_email nut openldap perl pinba ping postgresql python \
> rrdtool sensors snmp varnish virt write_http write_riemann
> do
>   rpmbuild_opts+=("--without")
>   rpmbuild_opts+=(${rmdep})
> done
bash$ rpmbuild_opts+=("--with")
bash$ rpmbuild_opts+=("curl=force")bash$ rpmbuild_opts+=(--nodeps)
bash$ rpmbuild_opts+=(--define)
bash$ rpmbuild_opts+=("_unpackaged_files_terminate_build 0")
```

It is then passed to rpmbuild as follows to start the entire build and RPM package process:

```
bash$ rpmbuild "${rpmbuild_opts[@]}" -bb SPECS/collectd.spec
```

The resulting RPMs in the RPMs directory will now also include collectd-curl. These RPM files can now be copied to the switch and installed from the switch Bash shell:

```
bash$ rpm --noparentdirs -i /bootflash/collectd-5.5.0-1.ia32e.rpm
bash$ rpm --noparentdirs -i /bootflash/collectd-curl-5.5.0-1.ia32e.rpm
```



# CHAPTER 16

## NX-SDK

---

- [About the NX-SDK, on page 129](#)
- [Install the NX-SDK, on page 130](#)
- [Building and Packaging C++ Applications, on page 130](#)
- [Installing and Running Custom Applications, on page 133](#)

## About the NX-SDK

The Cisco NX-OS SDK (NX-SDK) is a C++ abstraction and plugin-library layer that streamlines access to infrastructure for automation and custom application creation, such as generating custom:

- CLIs
- Syslogs
- Event and Error managers
- Inter-application communication
- High availability (HA)
- Route manager

You can use C++, Python, or Go for application development with NX-SDK.

### Requirements

The NX-SDK has the following requirements:

- Docker
- A Linux environment (either Ubuntu 14.04, or Centos 6.7). Cisco recommends using the provided NX-SDK Docker containers. For more information, see [Cisco DevNet NX-SDK](#).

### Related Information

For more information about Cisco NX-SDK, go to:

- [Cisco DevNet NX-SDK](#). Click the `versions.md` link (<https://github.com/CiscoDevNet/NX-SDK/blob/master/versions.md>) to get information about features and details on each supported release.

# Install the NX-SDK

## Procedure

---

- Step 1** **Note** The Cisco SDK is required for applications started in VSH.  
The Cisco SDK is optional for applications started in Bash.

(Optional) Build the Cisco SDK RPM to persist on switch reloads and from standby mode.

- a) Pull the Docker image for Ubuntu 14.04+ or Centos 6.7+ from <https://hub.docker.com/r/dockercisco/nxsdk>.
- b) Source for a 32-bit environment:

**Example:**

```
export ENXOS_SDK_ROOT=/enxos-sdk
cd $ENXOS_SDK_Root
source environment-setup-x86-linux
```

- Step 2** Clone the NX-SDK toolkit from <https://github.com/CiscoDevNet/NX-SDK.git>.

**Example:**

```
git clone https://github.com/CiscoDevNet/NX-SDK.git
```

---

## What to do next

The following references to the API can be found in `$PWD/nxsdk` and includes the following:

- The NX-SDK public C++ classes and APIs,
- Example applications, and
- Example Python applications.

# Building and Packaging C++ Applications

The following instructions describes how to build and package your custom C++ NX-OS application.

## Procedure

---

- Step 1** Build your application files..
- a) Building a C++ application requires adding your source files to the `Makefile`

**Example:**

The example below uses the `customCliApp.cpp` file from `/examples`

```

...
##Directory Structure
...
ENXSDK_BIN:= customCliApp
...

```

- b) Build the C++ application using the **make** command.

**Example:**

```

$PWD/nxSDK# make clean
$PWD/nxSDK# make all

```

**Step 2** (Optional) Package your application.

**Auto-generate RPM package**

Custom RPM packages for your applications are required to run on VSH and allow you to specify whether a given application persists on switch reloads or system switchovers. Use the following to create a custom specification file for your application.

**Note** RPM packaging is required to be done within the provided ENXOS Docker image.

- a) Use the [rpm\\_gen.py](#) script to auto-generate RPM package for a custom application.

**Example:**

Specify the **-h** option of the script to display the usages of the script.

```

/NX-SDK# python scripts/rpm_gen.py -h

```

- b) By default, `NXSDK_ROOT` is set to `/NX-SDK`. If `NX-SDK` is installed in another location other than the default, then you must set `NXSDK_ROOT` env to the appropriate location for the script to run correctly.

**Example:**

```

export NXSDK_ROOT=<absolute-path-to-NX-SDK>

```

Example of Auto-generate RPM package for C++ App examples/customCliApp.cpp

```

/NX-SDK/scripts# python rpm_gen.py CustomCliApp
#####
Generating rpm package...

Executing(%prep): /bin/sh -e /enxos-sdk/sysroots/x86_64-wrlinuxsdk-linux/var/tmp/rpm-tmp.49266
+ umask 022
+ cd /enxos-sdk/sysroots/x86_64-wrlinuxsdk-linux/usr/lib/rpm/../../src/rpm/BUILD
+ exit 0
Executing(%build): /bin/sh -e
/enxos-sdk/sysroots/x86_64-wrlinuxsdk-linux/var/tmp/rpm-tmp.49266
+ umask 022
+ cd /enxos-sdk/sysroots/x86_64-wrlinuxsdk-linux/usr/lib/rpm/../../src/rpm/BUILD
+ exit 0
Executing(%install): /bin/sh -e
/enxos-sdk/sysroots/x86_64-wrlinuxsdk-linux/var/tmp/rpm-tmp.49266
+ umask 022
+ cd /enxos-sdk/sysroots/x86_64-wrlinuxsdk-linux/usr/lib/rpm/../../src/rpm/BUILD
+ /bin/rm -rf
/enxos-sdk/sysroots/x86_64-wrlinuxsdk-linux/usr/lib/rpm/../../var/tmp/customCliApp-root
+ /bin/mkdir -p
/enxos-sdk/sysroots/x86_64-wrlinuxsdk-linux/usr/lib/rpm/../../var/tmp/customCliApp-root//isan/bin

```

```

+ cp -R /NX-SDK/bin /enxos-sdk/sysroots/x86_64-wrlinuxsdk-linux/usr/lib/rpm/..
/../../var/tmp/customCliApp-root//isan/bin
+ exit 0
Processing files: customCliApp-1.0-7.03.I6.1.x86_64
Requires: libc.so.6 libc.so.6(GLIBC 2.0) 3.0) Libc.so.6(GLIBC_2.1.3) libdl.so.2 libgcc_s.so.1
  libgcc_s.so.1(GCC_3.0) libm.so.6 libnxsdk.so libstdc++.so.6 libstdc++.so.6 (CXXABI 1.3)
libstdc++.so.6(GLIBCXX 3.4) libstdc++.so.6(GLIBCXX_3.4.14) rtld(GNU HASH)
Checking for unpackaged file(s):
/enxos-sdk/sysroots/x86_64-wrlinuxsdk-linux/usr/lib/rpm/check-files
/enxos-sdk/sysroots/x86_64-wrlinuxsdk-linux/usr/lib/rpm/../../var/tmp/customCliApp-root
Wrote:
/enxos-sdk/sysroots/X86_64-wrlinuxsdk-linux/usr/src/rpm/SRPMs/customCliApp-1.0-7.0.3.I6.1.src-rpm

Wrote:
/enxos-sdk/sysroots/X86_64-wrlinuxsdk-linux/usr/src/rpm/RPMS/x86_64/customCliApp-1.0-7.0.3.I6.1.x86_64.rpm
Executing(%clean): /bin/sh -e
/enxos-sdk/sysroots/x86_64-wrlinuxsdk-linux/var/tmp/rpm-tmp.49266
+ umask 022
+ cd /enxos-sdk/sysroots/x86_64-wrlinuxsdk-linux/usr/lib/rpm/../../src/rpm/BUILD
+ /bin/rm -rf
/enxos-sdk/sysroots/x86_64-wrlinuxsdk-linux/usr/lib/rpm/../../var/tmp/customCliApp-root

RPM package has been built
#####

SPEC file: /NX-SDK/rpm/SPECS/customCliApp.spec
RPM file : /NX-SDK/rpm/RPMS/customCliApp-1.0-7.0.3.I6.1.x86_64.rpm

```

### Manually-generate RPM Package

Custom RPM packages for your applications are required to run on VSH and allow you to specify whether a given application persists on switch reloads or system switchovers. Use the following steps to create a custom specification file (\* .spec) for your application.

- a) Export the Cisco SDK RPM source to \$RPM\_ROOT.

**Example:**

```
export RPM_ROOT=$ENXOS_SDK_ROOT/sysroots/x86_64-wrlinuxsdk-linux/usr/src/rpm
```

- b) Enter the \$RPM\_ROOT directory.

**Example:**

```
ls $RPM_ROOT (BUILD RPMS SOURCES SPECS SRPMS)
```

- c) Create/edit your application-specific \* .spec file.

Refer to the customCliApp.spec file in the /rpm/SPECS directory for an example specification file.

**Note** We recommend installing application files to /isan/bin/nxsdk on the switch as per the example customCliApp.spec file.

**Example:**

```
vi $RPM_ROOT/SPECS/<application>.spec
```

- d) Build your RPM package.

**Example:**

```
rpm -ba $RPM_ROOT/SPECS/<application>.spec
```

A successful build will generate an RPM file in `$RPMS_ROOT/RPMS/x86_64/`

---

## Installing and Running Custom Applications

You can install applications by copying binaries to the switch, or installing unpacking the binaries from the RPM package.



---

**Note** Only custom applications that are installed from RPM packages can persist on switch reload or system switchovers. We recommend reserving copying binaries to the switch for simple testing purposes.

---

To run NX-SDK apps inside the switch (on box), you must have the Cisco SDK build environment that is installed.



---

**Note** The Cisco SDK is required to start applications in VSH: VSH requires that all applications be installed through RPMs, which requires that being built in the Cisco SDK.

The Cisco SDK is not required for Python application.

The Cisco SDK is not required for C++ application, but is still recommended: Using `g++` to build applications and then copying the built files to the switch may pose stability risks as `g++` is not supported.

---

To install or run custom applications on the switch, use this procedure:

### Before you begin

The switch must have the NX-SDK enabled before running any custom application. Run **feature nxsdk** on the switch.

### Procedure

---

**Step 1** Install your application using either VSH or Bash.

To install your application using VSH, perform the following:

a) Add the RPM package to the installer.

**Example:**

```
switch(config)# install add bootflash:<app-rpm-package>.rpm
```

b) After installation, check if the RPM is listed as inactive.

**Example:**

```
switch(config)# show install inactive
```

c) Activate the RPM package.

**Example:**

```
switch(config)# install activate <app-rpm-package>
```

d) After activation, check if the RPM is listed as active.

**Example:**

```
switch(config)# show install active
```

To install your application using Bash, run the following commands:

```
switch(config)# run bash sudo su
bash# yum install /bootflash/<app-rpm-package>.rpm
```

## Step 2

Start your application.

C++ applications can run from VSH or Bash.

- To run a C++ application in VSH, run the **nxsdk** command:

```
switch(config)# nxsdk service-name /<install directory>/<application>
```

**Note** If the application is installed in `/isan/bin/nxsdk`, the full file path is not required. You can use the **nxsdk service-name app-name** form of the command.

- To run a C++ application in Bash, start Bash then start the application.

```
switch(config)# run bash sudo su
bash# <app-full-path> &
```

Python applications can run from VSH or Bash.

- To run a Python application from VSH, run the **nxsdk** command:

```
switch(config)# nxsdk service-name <app-full-path>
```

**Note** The Python application must be made executable to start from VSH:

- Run **chmod +x app-full-path**
- Add `#!/isan/bin/nxpython` to the first line of your Python application.

- To run a Python application from Bash,

```
switch(config)# run bash sudo su
bash# /isan/bin/nxsdk <app-full-path>
```

**Note** By default, NX-SDK uses `/isan/bin/nxsdk` to run Python applications in Bash, but you can specify a different install directory if needed.

## Step 3

Run **show nxsdk internal service** to verify that your application is running

**Example:**

```
switch(config)# show nxsdk internal service
```

```
switch(config)# show nxsdk internal service
```

```
NXSDK total services (Max Allowed) : 2 (32)
NXSDK Default App Path           : /isan/bin/nxsdk
NXSDK Supported Versions        : 1.0
```

Service-name	Base App	Started (PID)	Version	RPM Package
-----	-----	-----	-----	-----



```

/isan/bin/capp1          nxsdk_app2      VSH (25270)      1.0
capp1-1.0-7.0.3.I6.1.x86_64
/isan/bin/TestApp.py    nxsdk_app3      BASH (27823)    -      -

```

#### Step 4 Stop you application.

You can stop your application in the following ways:

- To stop all NX-SDK applications, run **no feature nxsdk**.
- To stop a specific application in VSH, run **no nxsdk service-name /install directory/application**
- To stop a specific application in Bash, run **application stop-event-loop**

#### Step 5 Uninstall your application.

To uninstall the RPM from the switch using VSH, perform the following:

- Deactivate the active RPM package.

**Example:**

```
switch# install deactivate <app-rpm-package>
```

- Verify that the package is deactivated.

**Example:**

```
switch# show install inactive
```

- Remove the RPM package.

**Example:**

```
switch# install remove <app-rpm-package>
```

To uninstall the RPM from the switch using Bash, run **yum remove app-full-path**





## PART **III**

# NX-API

- [NX-API CLI, on page 139](#)
- [NX-API REST, on page 157](#)
- [NX-API Developer Sandbox, on page 159](#)





## CHAPTER 17

# NX-API CLI

---

- [About NX-API CLI, on page 139](#)
- [Using NX-API CLI, on page 140](#)
- [Table of NX-API Response Codes, on page 155](#)

## About NX-API CLI

NX-API CLI is an enhancement to the Cisco NX-OS CLI system, which supports XML output. NX-API CLI also supports JSON output format for specific commands.

On Cisco Nexus switches, command-line interfaces (CLIs) are run only on the switch. NX-API CLI improves the accessibility of these CLIs by making them available outside of the switch by using HTTP/HTTPS. You can use this extension to the existing Cisco NX-OS CLI system on the switches. NX-API CLI supports **show** commands, configurations, and Linux Bash.

NX-API CLI supports JSON-RPC.

## Transport

NX-API uses HTTP/HTTPS as its transport. CLIs are encoded into the HTTP/HTTPS POST body.

NX-API is also supported through UNIX Domain Sockets for applications running natively on the host or within Guest Shell.

The NX-API backend uses the Nginx HTTP server. The Nginx process, and all its children processes, are under the Linux cgroup protection where the CPU and memory usage is capped. If the Nginx memory usage exceeds the cgroup limitations, the Nginx process is restarted and the NX-API configuration (the VRF, port, and certificate configurations) is restored.

## Message Format

NX-API is an enhancement to the Cisco NX-OS CLI system, which supports XML output. NX-API also supports JSON output format for specific commands.



- 
- Note**
- NX-API XML output presents information in a user-friendly format.
  - NX-API XML does not map directly to the Cisco NX-OS NETCONF implementation.
  - NX-API XML output can be converted into JSON.
- 

## Security

- NX-API supports HTTPS. All communication to the device is encrypted when you use HTTPS.

NX-API is integrated into the authentication system on the device. Users must have appropriate accounts to access the device through NX-API. NX-API uses HTTP basic authentication. All requests must contain the username and password in the HTTP header.



- 
- Note** You should consider using HTTPS to secure your user's login credentials.
- 

You can enable NX-API by using the **feature** manager CLI command. NX-API is disabled by default.

NX-API provides a session-based cookie, **nxapi\_auth** when users first successfully authenticate. With the session cookie, the username and password are included in all subsequent NX-API requests that are sent to the device. The username and password are used with the session cookie to bypass performing the full authentication process again. If the session cookie is not included with subsequent requests, another session cookie is required and is provided by the authentication process. Avoiding unnecessary use of the authentication process helps to reduce the workload on the device.



- 
- Note** A **nxapi\_auth** cookie expires in 600 seconds (10 minutes). This value is a fixed and cannot be adjusted.
- 



- 
- Note** NX-API performs authentication through a programmable authentication module (PAM) on the switch. Use cookies to reduce the number of PAM authentications, which reduces the load on the PAM.
- 

## Using NX-API CLI

The commands, command type, and output type for the Cisco Nexus 9000 Series switches are entered using NX-API by encoding the CLIs into the body of a HTTP/HTTPS POST. The response to the request is returned in XML or JSON output format.



- 
- Note** For more details about NX-API response codes, see [Table of NX-API Response Codes, on page 155](#).
- 

NX-API CLI is enabled by default for local access. The remote HTTP access is disabled by default.

The following example shows how to configure and launch the NX-API CLI:

- Enable the management interface.

```
switch# conf t
Enter configuration commands, one per line.
End with CNTL/Z.
switch(config)# interface mgmt 0
switch(config-if)# ip address 10.126.67.53/25
switch(config-if)# vrf context management
switch(config-vrf)# ip route 0.0.0.0/0 10.126.67.1
switch(config-vrf)# end
switch#
```

- Enable the NX-API **nxapi** feature.

```
switch# conf t
switch(config)# feature nxapi
```

The following example shows a request and its response in XML format:

Request:

```
<?xml version="1.0" encoding="ISO-8859-1"?>
<ins_api>
  <version>0.1</version>
  <type>cli_show</type>
  <chunk>0</chunk>
  <sid>session1</sid>
  <input>show switchname</input>
  <output_format>xml</output_format>
</ins_api>
```

Response:

```
<?xml version="1.0"?>
<ins_api>
  <type>cli_show</type>
  <version>0.1</version>
  <sid>eoc</sid>
  <outputs>
    <output>
      <body>
        <hostname>switch</hostname>
      </body>
      <input>show switchname</input>
      <msg>Success</msg>
      <code>200</code>
    </output>
  </outputs>
</ins_api>
```

The following example shows a request and its response in JSON format:

Request:

```
{
  "ins_api": {
    "version": "0.1",
    "type": "cli_show",
    "chunk": "0",
    "sid": "session1",
    "input": "show switchname",
    "output_format": "json"
  }
}
```

```
    }
  }
```

Response:

```
{
  "ins_api": {
    "type": "cli_show",
    "version": "0.1",
    "sid": "eoc",
    "outputs": {
      "output": {
        "body": {
          "hostname": "switch"
        },
        "input": "show switchname",
        "msg": "Success",
        "code": "200"
      }
    }
  }
}
```



**Note** There is a known issue where an attempt to delete a user might fail, resulting in an error message similar to the following appearing every 12 hours or so:

```
user delete failed for username:userdel: user username is currently logged in - securityd
```

This issue might occur in a scenario where you try to delete a user who is still logged into a switch through NX-API. Enter the following command in this case to try to log the user out first:

```
switch(config)# clear user username
```

Then try to delete the user again. If the issue persists after attempting this workaround, contact Cisco TAC for further assistance.

## Escalate Privileges to Root on NX-API

For NX-API, the privileges of an admin user can escalate their privileges for root access.

The following are guidelines for escalating privileges:

- Only an admin user can escalate privileges to root.
- Escalation to root is password protected.

The following examples show how an admin escalates privileges to root and how to verify the escalation. Note that after becoming root, the **whoami** command shows you as admin; however, the admin account has all the root privileges.

First example:

```
<?xml version="1.0"?>
<ins_api>
  <version>1.0</version>
  <type>bash</type>
```



```

<chunk>0</chunk>
<sid>sid</sid>
<input>sudo su root ; whoami</input>
<output_format>xml</output_format>
</ins_api>

<?xml version="1.0" encoding="UTF-8"?>
<ins_api>
  <type>bash</type>
  <version>1.0</version>
  <sid>eoc</sid>
  <outputs>
    <output>
      <body>admin </body>
      <code>200</code>
      <msg>Success</msg>
    </output>
  </outputs>
</ins_api>

```

Second example:

```

<?xml version="1.0"?>
<ins_api>
  <version>1.0</version>
  <type>bash</type>
  <chunk>0</chunk>
  <sid>sid</sid>
  <input>sudo cat path_to_file </input>
  <output_format>xml</output_format>
</ins_api>

<?xml version="1.0" encoding="UTF-8"?>
<ins_api>
  <type>bash</type>
  <version>1.0</version>
  <sid>eoc</sid>
  <outputs>
    <output>
      <body>[Contents of file]</body>
      <code>200</code>
      <msg>Success</msg>
    </output>
  </outputs>
</ins_api>

```

## Sample NX-API Scripts

You can access sample scripts that demonstrate how to use a script with NX-API. To access a sample script, click the following link then choose the directory that corresponds to the required software release: [Cisco Nexus 9000 NX-OS NX-API](#)

## NX-API Management Commands

You can enable and manage NX-API with the CLI commands listed in the following table.

Table 4: NX-API Management Commands

NX-API Management Command	Description
<b>feature nxapi</b>	Enables NX-API.
<b>no feature nxapi</b>	Disables NX-API.
<b>nxapi {http   https} port <i>port</i></b>	Specifies a port.
<b>no nxapi {http   https}</b>	Disables HTTP/HTTPS.
<b>show nxapi</b>	Displays port and certificate information.
<b>nxapi certificate {httpsert certfile   httpskey keyfile} <i>filename</i></b>	<p>Specifies the upload of the following:</p> <ul style="list-style-type: none"> <li>• HTTPS certificate when <code>httpsert</code> is specified.</li> <li>• HTTPS key when <code>httpskey</code> is specified.</li> </ul> <p>Example of HTTPS certificate:  <code>nxapi certificate httpsert certfile bootflash:cert.crt</code></p> <p>Example of HTTPS key:  <code>nxapi certificate httpskey keyfile bootflash:privkey.key</code></p>
<b>nxapi certificate enable</b>	Enables a certificate.

NX-API Management Command	Description
<b>nxapi certificate sudi</b>	<p>This CLI provides a secure way of authenticating to the device by using Secure Unique Device Identifier (SUDI).</p> <p>The SUDI based authentication in nginx will be used by the CISCO SUDI compliant controllers.</p> <p>SUDI is an IEEE 802.1AR-compliant secure device identity in an X.509v3 certificate which maintains the product identifier and serial number of Cisco devices. The identity is implemented at manufacturing and is chained to a publicly identifiable root certificate authority.</p> <p><b>Note</b> When NX-API comes up with the SUDI certificate, it is not accessible by any third-party applications like browser, curl, and so on.</p> <p><b>Note</b> "nxapi certificate sudi" will overwrite the custom certificate/key if configured, and there is no way to get the custom certificate/key back.</p> <p><b>Note</b> "nxapi certificate sudi" and "nxapi certificate trustpoint" and "nxapi certificate enable" are mutually exclusive, and configuring one will delete the other configuration.</p> <p><b>Note</b> NX-API do not support SUDI certificate-based client certificate authentication. If client certificate authentication is needed, then Identity certificate need to be used.</p> <p><b>Note</b> As NX-API certificate CLI is not present in show run output, CR/Rollback case currently does not go back to the custom certificate once it is overwritten with "nxapi certificate sudi" options.</p>
<b>nxapi use-vrf vrf</b>	<p>Specifies the default VRF, management VRF, or named VRF.</p> <p><b>Note</b> In Cisco NX-OS Release 7.0(3)I2(1) NGINX listens on only one VRF.</p>

NX-API Management Command	Description
<b>ip netns exec management iptables</b>	<p>Implements any access restrictions and can be run in management VRF.</p> <p><b>Note</b> You must enable <b>feature bash-shell</b> and then run the command from Bash Shell. For more information on Bash Shell, see the chapter on Bash.</p> <p><i>Iptables is a command-line firewall utility that uses policy chains to allow or block traffic and almost always comes pre-installed on any Linux distribution.</i></p> <p><b>Note</b> For more information about making iptables persistent across reloads when they are modified in a bash-shell, see <a href="#">Making an Iptable Persistent Across Reloads</a>, on page 154.</p>

Following is an example of a successful upload of an HTTPS certificate:

```
switch(config)# nxapi certificate httpsCRT certfile certificate.crt
Upload done. Please enable. Note cert and key must match.
switch(config)# nxapi certificate enable
switch(config)#
```



**Note** You must configure the certificate and key before enabling the certificate.

Following is an example of a successful upload of an HTTPS key:

```
switch(config)# nxapi certificate httpskey keyfile bootflash:privkey.key
Upload done. Please enable. Note cert and key must match.
switch(config)# nxapi certificate enable
switch(config)#
```

## Working With Interactive Commands Using NX-API

To disable confirmation prompts on interactive commands and avoid timing out with an error code 500, prepend interactive commands with **terminal dont-ask**. Use **;** to separate multiple interactive commands, where each **;** is surrounded with single blank characters.

Following are several examples of interactive commands where **terminal dont-ask** is used to avoid timing out with an error code 500:

```
terminal dont-ask ; reload module 21
terminal dont-ask ; system mode maintenance
```

## NX-API Request Elements

NX-API request elements are sent to the device in XML format or JSON format. The HTTP header of the request must identify the content type of the request.

You use the NX-API elements that are listed in the following table to specify a CLI command:



---

**Note** Users need to have permission to execute "configure terminal" command. When JSON-RPC is the input request format, the "configure terminal" command will always be executed before any commands in the payload are executed.

---

**Table 5: NX-API Request Elements for XML or JSON Format**

NX-API Request Element	Description
version	Specifies the NX-API version.

NX-API Request Element	Description
<i>type</i>	<p>Specifies the type of command to be executed.</p> <p>The following types of commands are supported:</p> <ul style="list-style-type: none"> <li>• <b>cli_show</b> CLI <b>show</b> commands that expect structured output. If the command does not support XML output, an error message is returned.</li> <li>• <b>cli_show_array</b> CLI <b>show</b> commands that expect structured output. Only for show commands. Similar to <b>cli_show</b>, but with <b>cli_show_array</b>, data is returned as a list of one element, or an array, within square brackets [ ].</li> <li>• <b>cli_show_ascii</b> CLI <b>show</b> commands that expect ASCII output. This aligns with existing scripts that parse ASCII output. Users are able to use existing scripts with minimal changes.</li> <li>• <b>cli_conf</b> CLI configuration commands.</li> <li>• <b>bash</b> Bash commands. Most non-interactive Bash commands are supported by NX-API.</li> </ul> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• Each command is only executable with the current user's authority.</li> <li>• The pipe operation is supported in the output when the message type is ASCII. If the output is in XML format, the pipe operation is not supported.</li> <li>• A maximum of 10 consecutive <b>show</b> commands are supported. If the number of <b>show</b> commands exceeds 10, the 11th and subsequent commands are ignored.</li> <li>• No interactive commands are supported.</li> </ul>

NX-API Request Element	Description				
<i>chunk</i>	<p>Some <b>show</b> commands can return a large amount of output. For the NX-API client to start processing the output before the entire command completes, NX-API supports output chunking for <b>show</b> commands.</p> <p>Enable or disable chunk with the following settings:</p> <table border="1" data-bbox="954 485 1516 596"> <tr> <td data-bbox="954 485 1047 539">0</td> <td data-bbox="1047 485 1516 539">Do not chunk output.</td> </tr> <tr> <td data-bbox="954 539 1047 596">1</td> <td data-bbox="1047 539 1516 596">Chunk output.</td> </tr> </table> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• Only <b>show</b> commands support chunking. When a series of <b>show</b> commands are entered, only the first command is chunked and returned.</li> <li>• For the XML output message format (XML is the default.), special characters, such as &lt; or &gt;, are converted to form a valid XML message (&lt; is converted into &amp;lt; &gt; is converted into &amp;gt;). You can use XML SAX to parse the chunked output.</li> </ul> <p><b>Note</b> When chunking is enabled, the message format is limited to XML. JSON output format is not supported when chunking is enabled.</p>	0	Do not chunk output.	1	Chunk output.
0	Do not chunk output.				
1	Chunk output.				
<i>rollback</i>	<p>Valid only for configuration CLIs, not for show commands. Specifies the configuration rollback options. Specify one of the following options.</p> <ul style="list-style-type: none"> <li>• Stop-on-error—Stops at the first CLI that fails.</li> <li>• Continue-on-error—Ignores and continues with other CLIs.</li> <li>• Rollback-on-error—Performs a rollback to the previous state the system configuration was in.</li> </ul> <p><b>Note</b> The rollback element is available in the cli_conf mode when the input request format is XML or JSON.</p>				
<i>sid</i>	<p>The session ID element is valid only when the response message is chunked. To retrieve the next chunk of the message, you must specify a <i>sid</i> to match the <i>sid</i> of the previous response message.</p>				

NX-API Request Element	Description						
<i>input</i>	<p>Input can be one command or multiple commands. However, commands that belong to different message types should not be mixed. For example, <b>show</b> commands are cli_show message type and are not supported in cli_conf mode.</p> <p><b>Note</b> Except for <b>bash</b>, multiple commands are separated with ";". (The ; must be surrounded with single blank characters.)</p> <p>Prepend commands with <code>terminal dont-ask</code> to avoid timing out with an error code 500. For example:</p> <pre>terminal dont-ask ; cli_conf ; interface Eth4/1 ; no shut ; switchport</pre> <p>For <b>bash</b>, multiple commands are separated with ";". (The ; is <b>not</b> surrounded with single blank characters.)</p> <p>The following are examples of multiple commands:</p> <p><b>Note</b></p> <table border="1" data-bbox="919 863 1479 1115"> <tbody> <tr> <td data-bbox="919 863 1019 940">cli_show</td> <td data-bbox="1019 863 1479 940">show version ; show interface brief ; show vlan</td> </tr> <tr> <td data-bbox="919 940 1019 1039">cli_conf</td> <td data-bbox="1019 940 1479 1039">interface Eth4/1 ; no shut ; switchport</td> </tr> <tr> <td data-bbox="919 1039 1019 1115">bash</td> <td data-bbox="1019 1039 1479 1115">cd /bootflash;mkdir new_dir</td> </tr> </tbody> </table>	cli_show	show version ; show interface brief ; show vlan	cli_conf	interface Eth4/1 ; no shut ; switchport	bash	cd /bootflash;mkdir new_dir
cli_show	show version ; show interface brief ; show vlan						
cli_conf	interface Eth4/1 ; no shut ; switchport						
bash	cd /bootflash;mkdir new_dir						
<i>output_format</i>	<p>The available output message formats are the following:</p> <p><b>Note</b></p> <table border="1" data-bbox="919 1205 1479 1318"> <tbody> <tr> <td data-bbox="919 1205 1109 1262">xml</td> <td data-bbox="1109 1205 1479 1262">Specifies output in XML format.</td> </tr> <tr> <td data-bbox="919 1262 1109 1318">json</td> <td data-bbox="1109 1262 1479 1318">Specifies output in JSON format.</td> </tr> </tbody> </table> <p><b>Note</b></p> <p>The Cisco NX-OS CLI supports XML output, which means that the JSON output is converted from XML. The conversion is processed on the switch.</p> <p>To manage the computational overhead, the JSON output is determined by the amount of output. If the output exceeds 1 MB, the output is returned in XML format. When the output is chunked, only XML output is supported.</p> <p>The content-type header in the HTTP/HTTPS headers indicate the type of response format (XML or JSON).</p>	xml	Specifies output in XML format.	json	Specifies output in JSON format.		
xml	Specifies output in XML format.						
json	Specifies output in JSON format.						

When JSON-RPC is the input request format, use the NX-API elements that are listed in the following table to specify a CLI command:



Table 6: NX-API Request Elements for JSON-RPC Format

NX-API Request Element	Description
<i>jsonrpc</i>	A string specifying the version of the JSON-RPC protocol. Version must be 2.0.
<i>method</i>	A string containing the name of the method to be invoked. NX-API supports either: <ul style="list-style-type: none"> <li>• <b>cli</b>—show or configuration commands</li> <li>• <b>cli_ascii</b>—show or configuration commands; output without formatting</li> <li>• <b>cli_array</b>—only for show commands; similar to <b>cli</b>, but with <b>cli_array</b>, data is returned as a list of one element, or an array, within square brackets, [ ].</li> </ul>
<i>params</i>	A structured value that holds the parameter values used during the invocation of a method. It must contain the following: <ul style="list-style-type: none"> <li>• <b>cmd</b>—CLI command</li> <li>• <b>version</b>—NX-API request version identifier</li> </ul>
<i>rollback</i>	Valid only for configuration CLIs, not for show commands. Configuration rollback options. You can specify one of the following options. <ul style="list-style-type: none"> <li>• Stop-on-error—Stops at the first CLI that fails.</li> <li>• Continue-on-error—Ignores the failed CLI and continues with other CLIs.</li> <li>• Rollback-on-error—Performs a rollback to the previous state the system configuration was in.</li> </ul>
<i>id</i>	An optional identifier established by the client that must contain a string, number, or null value, if it is specified. The value should not be null and numbers contain no fractional parts. If a user does not specify the id parameter, the server assumes that the request is simply a notification, resulting in a no response, for example, <i>id</i> : 1

## NX-API Response Elements

The NX-API elements that respond to a CLI command are listed in the following table:

Table 7: NX-API Response Elements

NX-API Response Element	Description
version	NX-API version.
type	Type of command to be executed.
sid	Session ID of the response. This element is valid only when the response message is chunked.
outputs	Tag that encloses all command outputs.  When multiple commands are in <code>cli_show</code> or <code>cli_show_ascii</code> , each command output is enclosed by a single output tag.  When the message type is <code>cli_conf</code> or <code>bash</code> , there is a single output tag for all the commands because <code>cli_conf</code> and <code>bash</code> commands require context.
output	Tag that encloses the output of a single command output.  For <code>cli_conf</code> and <code>bash</code> message types, this element contains the outputs of all the commands.
input	Tag that encloses a single command that was specified in the request. This element helps associate a request input element with the appropriate response output element.
body	Body of the command response.
code	Error code returned from the command execution.  NX-API uses standard HTTP error codes as described by the Hypertext Transfer Protocol (HTTP) Status Code Registry ( <a href="http://www.iana.org/assignments/http-status-codes/http-status-codes.xhtml">http://www.iana.org/assignments/http-status-codes/http-status-codes.xhtml</a> ).
msg	Error message associated with the returned error code.

## Restricting Access to NX-API

There are two methods for restricting HTTP and HTTPS access to a device: ACLs and iptables. The method that you use depends on whether you have configured a VRF for NX-API communication using the `nxapi use-vrf <vrf-name>` CLI command.

Use ACLs to restrict HTTP or HTTPS access to a device only if you have not configured NXAPI to use a specific VRF. For information about configuring ACLs, see the *Cisco Nexus Series NX-OS Security Configuration Guide* for your switch family.

If you have configured a VRF for NX-API communication, however, ACLs will not restrict HTTP or HTTPS access. Instead, create a rule for an iptable. For more information about creating a rule, see [Updating an iptable, on page 153](#).

## Updating an iptable

An iptable enables you to restrict HTTP or HTTPS access to a device when a VRF has been configured for NX-API communication. This section demonstrates how to add, verify, and remove rules for blocking HTTP and HTTPS access to an existing iptable.

### Procedure

**Step 1** To create a rule that blocks HTTP access:

```
bash-4.3# ip netns exec management iptables -A INPUT -p tcp --dport 80 -j DROP
```

**Step 2** To create a rule that blocks HTTPS access:

```
bash-4.3# ip netns exec management iptables -A INPUT -p tcp --dport 443 -j DROP
```

**Step 3** To verify the applied rules:

```
bash-4.3# ip netns exec management iptables -L

Chain INPUT (policy ACCEPT)
target     prot opt source                destination           tcp dpt:http
DROP      tcp  --  anywhere              anywhere              tcp dpt:https
DROP      tcp  --  anywhere              anywhere             

Chain FORWARD (policy ACCEPT)
target     prot opt source                destination

Chain OUTPUT (policy ACCEPT)
target     prot opt source                destination
```

**Step 4** To create and verify a rule that blocks all traffic with a 10.155.0.0/24 subnet to port 80:

```
bash-4.3# ip netns exec management iptables -A INPUT -s 10.155.0.0/24 -p tcp --dport 80 -j
DROP
bash-4.3# ip netns exec management iptables -L

Chain INPUT (policy ACCEPT)
target     prot opt source                destination           tcp dpt:http
DROP      tcp  --  10.155.0.0/24        anywhere              tcp dpt:http

Chain FORWARD (policy ACCEPT)
target     prot opt source                destination

Chain OUTPUT (policy ACCEPT)
target     prot opt source                destination
```

**Step 5** To remove and verify previously applied rules:

This example removes the first rule from INPUT.

```
bash-4.3# ip netns exec management iptables -D INPUT 1
bash-4.3# ip netns exec management iptables -L

Chain INPUT (policy ACCEPT)
target     prot opt source                destination

Chain FORWARD (policy ACCEPT)
```

```
target      prot opt source                destination
Chain OUTPUT (policy ACCEPT)
target      prot opt source                destination
```

---

### What to do next

The rules in iptables are not persistent across reloads when they are modified in a bash-shell. To make the rules persistent, see [Making an Iptable Persistent Across Reloads, on page 154](#).

## Making an Iptable Persistent Across Reloads

The rules in iptables are not persistent across reloads when they are modified in a bash-shell. This section explains how to make a modified iptable persistent across a reload.

### Before you begin

You have modified an iptable.

### Procedure

---

**Step 1** Create a file called iptables\_init.log in the /etc directory with full permissions:

```
bash-4.3# touch /etc/iptables_init.log; chmod 777 /etc/iptables_init.log
```

**Step 2** Create the /etc/sys/iptables file where your iptables changes will be saved:

```
bash-4.3# ip netns exec management iptables-save > /etc/sysconfig/iptables
```

**Step 3** Create a startup script called iptables\_init in the /etc/init.d directory with the following set of commands:

```
#!/bin/sh

### BEGIN INIT INFO

# Provides:          iptables_init

# Required-Start:

# Required-Stop:

# Default-Start:    2 3 4 5

# Default-Stop:

# Short-Description: init for iptables

# Description:      sets config for iptables

#                   during boot time

### END INIT INFO

PATH=/usr/local/sbin:/usr/local/bin:/sbin:/bin:/usr/sbin:/usr/bin
```

```

start_script() {
    ip netns exec management iptables-restore < /etc/sysconfig/iptables
    ip netns exec management iptables
    echo "iptables init script executed" > /etc/iptables_init.log
}
case "$1" in
    start)
        start_script
        ;;
    stop)
        ;;
    restart)
        sleep 1
        $0 start
        ;;
    *)
        echo "Usage: $0 {start|stop|status|restart}"
        exit 1
esac
exit 0

```

**Step 4** Set the appropriate permissions to the startup script:

```
bash-4.3# chmod 777 /etc/init.d/iptables_int
```

**Step 5** Set the iptables\_int startup script to on with the chkconfig utility:

```
bash-4.3# chkconfig iptables_init on
```

The iptables\_init startup script will now execute each time that you perform a reload, making the iptable rules persistent.

## Table of NX-API Response Codes

The following are the possible NX-API errors, error codes, and messages of an NX-API response.



**Note** The standard HTTP error codes are at the Hypertext Transfer Protocol (HTTP) Status Code Registry (<http://www.iana.org/assignments/http-status-codes/http-status-codes.xhtml>).

**Table 8: NX-API Response Codes**

NX-API Response	Code	Message
SUCCESS	200	Success.
CUST_OUTPUT_PIPED	204	Output is piped elsewhere due to request.
BASH_CMD_ERR	400	Bash command error.
CHUNK_ALLOW_ONE_CMD_ERR	400	Chunking honors only one command.
CLI_CLIENT_ERR	400	CLI execution error.

CLI_CMD_ERR	400	Input CLI command error.
IN_MSG_ERR	400	Incoming message is invalid.
NO_INPUT_CMD_ERR	400	No input command.
PERM_DENY_ERR	401	Permission denied.
CONF_NOT_ALLOW_SHOW_ERR	405	Configuration mode does not allow <b>show</b> .
SHOW_NOT_ALLOW_CONF_ERR	405	Show mode does not allow configuration.
EXCEED_MAX_SHOW_ERR	413	Maximum number of consecutive show commands exceeded. The maximum is 10.
MSG_SIZE_LARGE_ERR	413	Response size too large.
BACKEND_ERR	500	Backend processing error.
FILE_OPER_ERR	500	System internal file operation error.
LIBXML_NS_ERR	500	System internal LIBXML NS error. This is a request format error.
LIBXML_PARSE_ERR	500	System internal LIBXML parse error. This is a request format error.
LIBXML_PATH_CTX_ERR	500	System internal LIBXML path context error. This is a request format error.
MEM_ALLOC_ERR	500	System internal memory allocation error.
USER_NOT_FOUND_ERR	500	User not found from input or cache.
XML_TO_JSON_CONVERT_ERR	500	XML to JSON conversion error.
BASH_CMD_NOT_SUPPORTED_ERR	501	Bash command not supported.
CHUNK_ALLOW_XML_ONLY_ERR	501	Chunking allows only XML output.
JSON_NOT_SUPPORTED_ERR	501	JSON not supported due to a potential large amount of output.
MSG_TYPE_UNSUPPORTED_ERR	501	Message type not supported.
PIPE_XML_NOT_ALLOWED_IN_INPUT	501	Pipe XML for this command is not allowed in input.
STRUCT_NOT_SUPPORTED_ERR	501	Structured output unsupported.
ERR_UNDEFINED	600	Unknown error.



## CHAPTER 18

# NX-API REST

---

- [About NX-API REST, on page 157](#)
- [Guidelines and Limitations, on page 157](#)

## About NX-API REST

### NX-API REST

In Release 7.0(3)I2(1), the NX-API REST SDK has been added.

On Cisco Nexus switches, configuration is performed using command-line interfaces (CLIs) that run only on the switch. NX-API REST improves the accessibility of the Cisco Nexus configuration by providing HTTP/HTTPS APIs that:

- Make specific CLIs available outside of the switch.
- Enable configurations that would require issuing many CLI commands by combining configuration actions in relatively few HTTP/HTTPS operations.

NX-API REST supports **show** commands, basic and advanced switch configurations, and Linux Bash.

NX-API REST uses HTTP/HTTPS as its transport. CLIs are encoded into the HTTP/HTTPS POST body. The NX-API REST backend uses the Nginx HTTP server. The Nginx process, and all of its children processes, are under Linux cgroup protection where the CPU and memory usage is capped. If the Nginx memory usage exceeds the cgroup limitations, the Nginx process is restarted and the NX-API configuration (the VRF, port, and certificate configurations) is restored.

For more information about the Cisco Nexus 3000 and 9000 Series NX-API REST SDK, see <https://developer.cisco.com/docs/nx-os-n3k-n9k-api-ref/>.

## Guidelines and Limitations

NX-API REST has the following guidelines and limitations:

- Starting with NX-OS 7.0(3)F3(1), NX-API REST is supported on the Cisco Nexus 9508 switch.







# CHAPTER 19

## NX-API Developer Sandbox


- About the NX-API Developer Sandbox, on page 159
- Guidelines and Restrictions for the Developer Sandbox, on page 160
- Configuring the Message Format and Command Type, on page 160
- Using the Developer Sandbox, on page 162
- Using the Developer Sandbox to Convert CLI Commands to REST Payloads, on page 162
- Using the Developer Sandbox to Convert from REST Payloads to CLI Commands, on page 165

### About the NX-API Developer Sandbox

The NX-API Developer Sandbox is a web form hosted on the switch. It translates NX-OS CLI commands into equivalent XML or JSON payloads, and converts NX-API REST payloads into their CLI equivalents.

The web form is a single screen with three panes — Command (top pane), Request, and Response — as shown in the figure.

**Figure 1: NX-API Developer Sandbox with Example Request and Output Response**

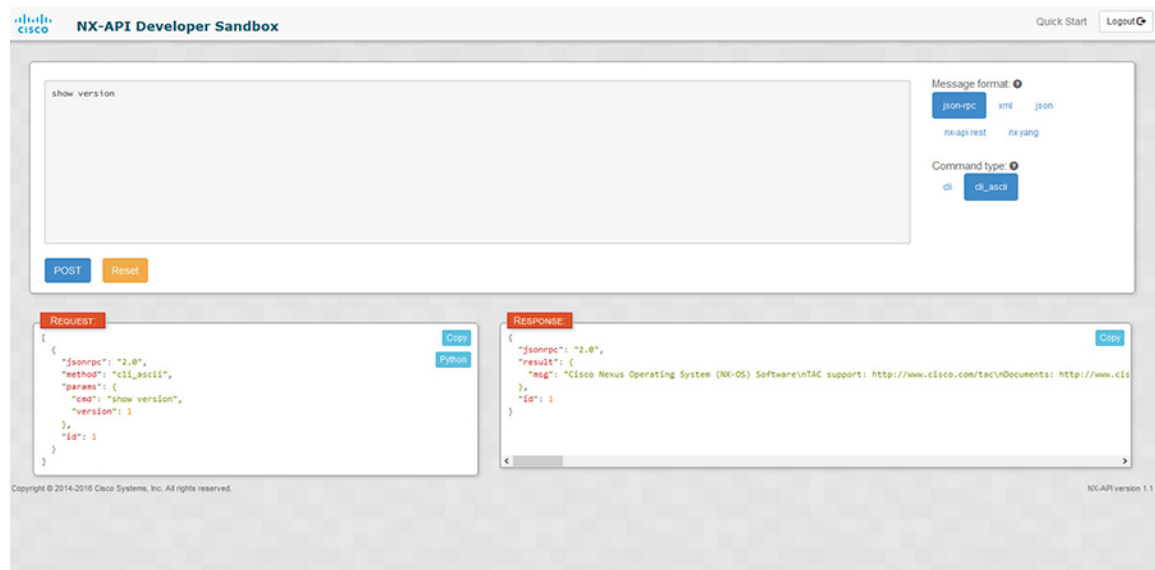

Controls in the Command pane allow you to choose a message format for a supported API, such as NX-API REST, and a command type, such as XML or JSON. The available command type options vary depending on the selected message format.

When you type or paste one or more CLI commands into the Command pane, the web form converts the commands into an API payload, checking for configuration errors, and displays the resulting payload in the Request pane. If you then choose to post the payload directly from the Sandbox to the switch, using the POST button in the Command pane, the Response pane displays the API response.

Conversely, when you type an NX-API REST designated name (DN) and payload into the Command pane and select the **nx-api rest** Message format and the **model** Command type, Developer Sandbox checks the payload for configuration errors, then the Response pane displays the equivalent CLIs.

## Guidelines and Restrictions for the Developer Sandbox

- Clicking **POST** in the Sandbox commits the command to the switch, which can result in a configuration or state change.
- Some feature configuration commands are not available until their associated feature has been enabled.

## Configuring the Message Format and Command Type

The **Message Format** and **Command Type** are configured in the upper right corner of the Command pane (the top pane). For **Message Format**, choose the format of the API protocol that you want to use. The Developer Sandbox supports the following API protocols:

*Table 9: NX-OS API Protocols*

Protocol	Description
json-rpc	A standard lightweight remote procedure call (RPC) protocol that can be used to deliver NX-OS CLI commands in a JSON payload. The JSON-RPC 2.0 specification is outlined by <a href="http://jsonrpc.org">jsonrpc.org</a> .
xml	Cisco NX-API proprietary protocol for delivering NX-OS CLI or bash commands in an XML payload.
json	Cisco NX-API proprietary protocol for delivering NX-OS CLI or bash commands in a JSON payload.
nx-api rest	Cisco NX-API proprietary protocol for manipulating and reading managed objects (MOs) and their properties in the internal NX-OS data management engine (DME) model. For more information about the Cisco Nexus 3000 and 9000 Series NX-API REST SDK, see <a href="https://developer.cisco.com/site/cisco-nexus-nx-api-references/">https://developer.cisco.com/site/cisco-nexus-nx-api-references/</a> .
nx yang	The YANG ("Yet Another Next Generation") data modeling language for configuration and state data.

When the **Message Format** has been chosen, a set of **Command Type** options are presented just below the **Message Format** control. The **Command Type** setting can constrain the input CLI and can determine the

**Request** and **Response** format. The options vary depending on the **Message Format** selection. For each **Message Format**, the following table describes the **Command Type** options:

**Table 10: Command Types**

Message format	Command type
json-rpc	<ul style="list-style-type: none"> <li>cli — show or configuration commands</li> <li>cli-ascii — show or configuration commands, output without formatting</li> </ul>
xml	<ul style="list-style-type: none"> <li>cli_show — show commands. If the command does not support XML output, an error message will be returned.</li> <li>cli_show_ascii — show commands, output without formatting</li> <li>cli_conf — configuration commands. Interactive configuration commands are not supported.</li> <li>bash — bash commands. Most non-interactive bash commands are supported.</li> </ul> <p><b>Note</b> The bash shell must be enabled in the switch.</p>
json	<ul style="list-style-type: none"> <li>cli_show — show commands. If the command does not support XML output, an error message will be returned.</li> <li>cli_show_ascii — show commands, output without formatting</li> <li>cli_conf — configuration commands. Interactive configuration commands are not supported.</li> <li>bash — bash commands. Most non-interactive bash commands are supported.</li> </ul> <p><b>Note</b> The bash shell must be enabled in the switch.</p>
nx-api rest	<ul style="list-style-type: none"> <li>cli — configuration commands</li> <li>model — DN and corresponding payload.</li> </ul>
nx yang	<ul style="list-style-type: none"> <li>json — JSON structure is used for payload</li> <li>xml — XML structure is used for payload</li> </ul>

### Output Chunking

In order to handle large show command output, some NX-API message formats support output chunking for show commands. In this case, an **Enable chunk mode** checkbox appears below the **Command Type** control along with a session ID (**SID**) type-in box.

When chunking is enabled, the response is sent in multiple "chunks," with the first chunk sent in the immediate command response. In order to retrieve the next chunk of the response message, you must send an NX-API request with **SID** set to the session ID of the previous response message.

# Using the Developer Sandbox

## Using the Developer Sandbox to Convert CLI Commands to REST Payloads



---


**Tip** Online help is available by clicking **Quick Start** in the upper right corner of the Sandbox window. Additional details, such as response codes and security methods, can be found in the chapter "NX-API CLI". Only configuration commands are supported.

---

### Procedure

---

- Step 1** Configure the **Message Format** and **Command Type** for the API protocol you want to use. For detailed instructions, see [Configuring the Message Format and Command Type, on page 160](#).
- Step 2** Type or paste NX-OS CLI configuration commands, one command per line, into the text entry box in the top pane. You can erase the contents of the text entry box (and the **Request** and **Response** panes) by clicking **Reset** at the bottom of the top pane.

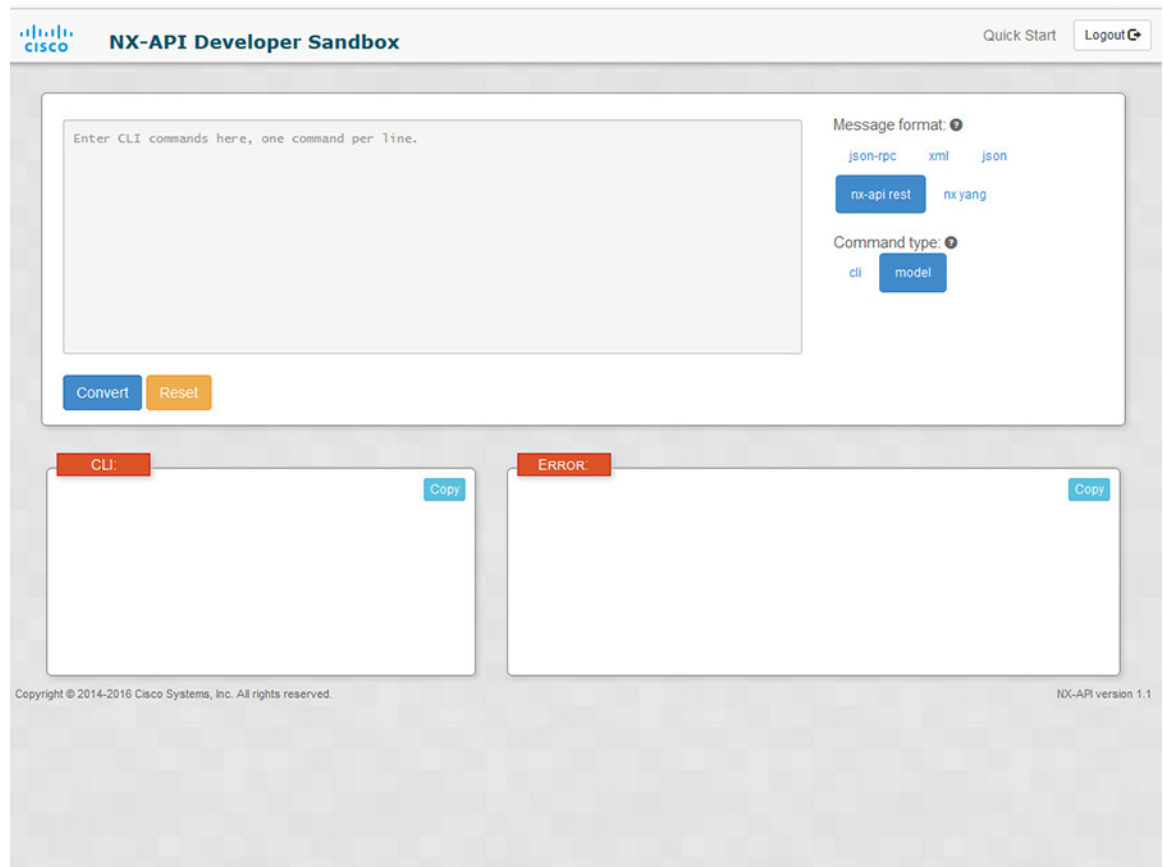

**Step 3** Click the **Convert** at the bottom of the top pane.

If the CLI commands contain no configuration errors, the payload appears in the **Request** pane. If errors are present, a descriptive error message appears in the **Response** pane.

The screenshot displays the Cisco NX-API Developer Sandbox interface. At the top, the Cisco logo and 'NX-API Developer Sandbox' are visible, along with 'Quick Start' and 'Logout' links. The main workspace is divided into a 'Request' pane and a 'Response' pane. The 'Request' pane contains a JSON payload: `api/mo/sys.json` with a nested structure for `topSystem` and `attributes`. To the right of the 'Request' pane are controls for 'Message format' (json-rpc, xml, json) and 'Command type' (cli, model). Below the 'Request' pane are 'Convert' and 'Reset' buttons. The 'Response' pane is split into two sections: 'CLI' showing 'hostname REST2CLI' and 'ERROR'. Both sections have 'Copy' buttons. At the bottom, there is a status bar with 'Waiting for bam.nr-data.net...' and copyright information.

**Step 4** When a valid payload is present in the **Request** pane, you can click **POST** to send the payload as an API call to the switch.

The response from the switch appears in the **Response** pane.

**Warning** Clicking **POST** commits the command to the switch, which can result in a configuration or state change.

The screenshot shows the NX-API Developer Sandbox interface. At the top, there is a header with the Cisco logo and 'NX-API Developer Sandbox', along with 'Quick Start' and 'Logout' links. The main area contains a text input field with the text 'Logging level netstack 6'. To the right of the input field, there are two dropdown menus: 'Message format' with options 'json-rpc', 'xml', 'json', and 'nx-api rest' (selected), and 'Command type' with options 'cli' (selected) and 'model'. Below the input field are three buttons: 'POST', 'Reset', and 'Convert'. Below these are two panes: 'REQUEST' and 'RESPONSE'. The 'REQUEST' pane contains a JSON payload:
 

```
{
  "topSystem": {
    "children": [
      {
        "ipv4Entity": {
          "children": [
            {
              "ipv4Inst": {
                "attributes": {
                  "loggingLevel": "informational"
                }
              }
            }
          ]
        }
      }
    ]
  }
}
```

 To the right of the 'REQUEST' pane are buttons for 'Copy', 'Python', and 'Python3'. The 'RESPONSE' pane contains an empty JSON object:
 

```
{
  "imdata": []
}
```

 To the right of the 'RESPONSE' pane is a 'Copy' button.

**Step 5** You can copy the contents of the **Request** or **Response** pane to the clipboard by clicking **Copy** in the pane.

**Step 6** You can obtain a Python implementation of the request on the clipboard by clicking **Python** in the **Request** pane.

## Using the Developer Sandbox to Convert from REST Payloads to CLI Commands




**Tip** Online help is available by clicking **Quick Start** in the upper right corner of the Sandbox window. Additional details, such as response codes and security methods, can be found in the chapter "NX-API CLI".

### Procedure

**Step 1** Select **nx-api rest** as the **Message Format** and **model** as the **Command Type**.

**Example:**

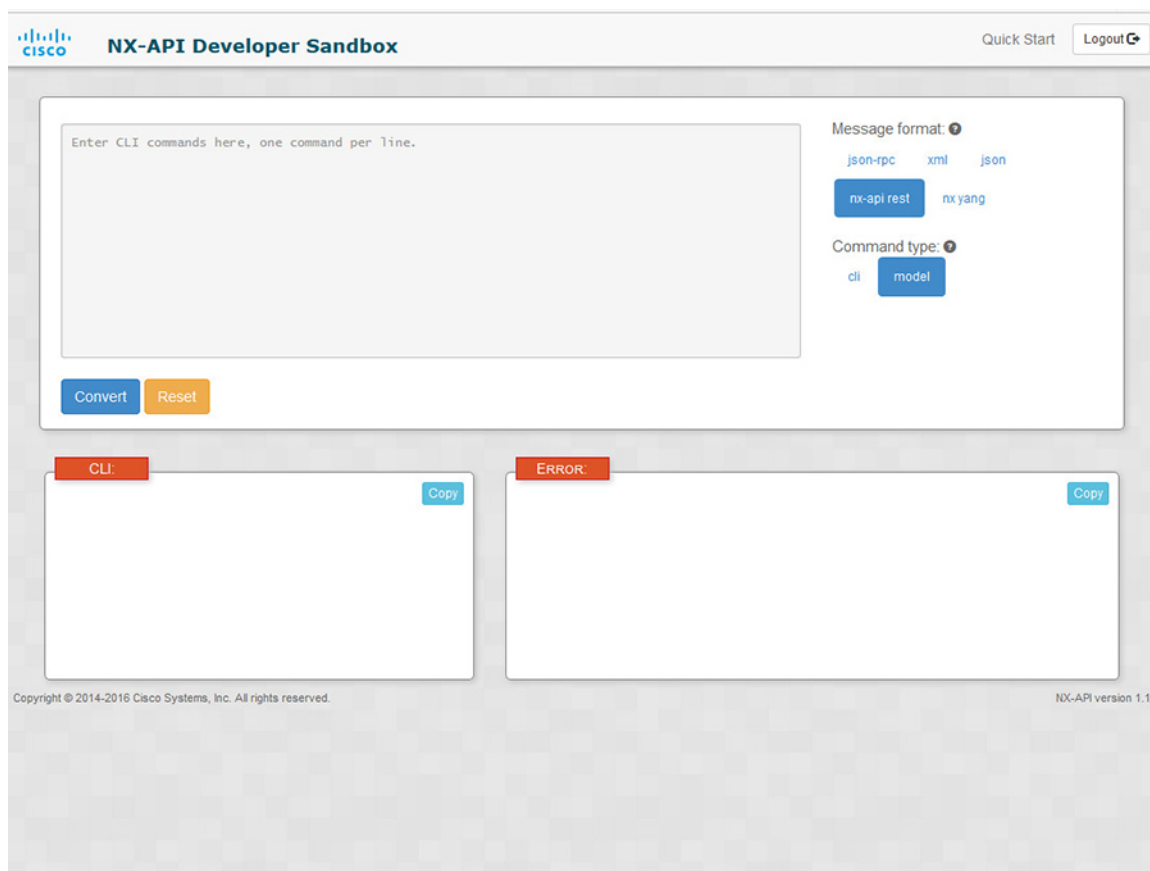

**Step 2** Enter a DN and payload into the text entry box in the top pane. Then click on the **Convert** button below the top pane.

**Example:**

For this example, the DN is `api/mo/sys.json` and the NX-API REST payload is:

```
{
  "topSystem": {
    "attributes": {
      "name": "REST2CLI"
    }
  }
}
```



The screenshot displays the NX-API Developer Sandbox interface. At the top left is the Cisco logo and the title "NX-API Developer Sandbox". On the top right, there are links for "Quick Start" and "Logout". The main area is divided into several sections:

- Input Area:** A text area containing a REST payload: 

```
api/mo/sys.json
{
  "topSystem": {
    "attributes": {
      "name": "REST2CLI"
    }
  }
}
```
- Message format:** A dropdown menu with options: json-pc, xml, json, nx-api rest (selected), and nx.yang.
- Command type:** A dropdown menu with options: cli and model (selected).
- Buttons:** "Convert" (blue) and "Reset" (orange) buttons are located below the input area.
- Output Panes:** Two panes are visible below the input area. The left pane is labeled "CLI:" and is currently empty. The right pane is labeled "ERROR:" and is also empty. Both panes have a "Copy" button in the top right corner.

At the bottom of the interface, there is a copyright notice: "Copyright © 2014-2016 Cisco Systems, Inc. All rights reserved." and the version "NX-API version 1.1". A status bar at the very bottom shows "Waiting for bam.nr-data.net..."

When you click on the **Convert** button, the CLI equivalent appears in the **CLI** pane as shown in the following image.

The screenshot displays the NX-API Developer Sandbox interface. At the top left is the Cisco logo and the title "NX-API Developer Sandbox". On the top right are links for "Quick Start" and "Logout".

The main workspace contains a text area with a REST payload:

```
api/mo/sys.json
{
  "topSystem": {
    "attributes": {
      "name": "REST2CLI"
    }
  }
}
```

To the right of the text area are two dropdown menus. The "Message format" dropdown is set to "nx-api rest", with other options being "json-rpc", "xml", and "nx.yang". The "Command type" dropdown is set to "model", with other options being "cli".

Below the text area are two buttons: "Convert" (blue) and "Reset" (orange).

Below the "Convert" button, the "CLI:" section shows the resulting command: "hostname REST2CLI". A "Copy" button is located to the right of the command.

To the right of the CLI section is an "ERROR:" section, which is currently empty. A "Copy" button is also present to its right.

At the bottom of the interface, there is a status bar with the text "Waiting for bam.nr-data.net...".

Copyright © 2014-2016 Cisco Systems, Inc. All rights reserved. NX-API version 1.1

**Note** The Developer Sandbox cannot convert all payloads into equivalent CLIs, even if the Sandbox converted the CLIs to NX-API REST payloads. The following is a list of possible sources of error that can prevent a payload from completely converting to CLI commands:

**Table 11: Sources of REST2CLI Errors**

Payload Issue	Result
<p>The payload contains an attribute that does not exist in the MO.</p> <p>Example:</p> <pre>api/mo/sys.json {   "topSystem": {     "children": [       {         "interfaceEntity": {           "children": [             {               "l1PhysIf": {                 "attributes": {                   "id": "eth1/1",                   "fakeattribute": "totallyFake"                 }               }             }           ]         }       }     ]   } }</pre>	<p>The <b>Error</b> pane will return an error related to the attribute.</p> <p>Example:</p> <p><b>CLI</b></p> <p><b>Error</b> unknown attribute 'fakeattribute' in element 'l1PhysIf'</p>
<p>The payload includes MOs that aren't yet supported for conversion:</p> <p>Example:</p> <pre>api/mo/sys.json {   "topSystem": {     "children": [       {         "dhcpEntity": {           "children": [             {               "dhcpInst": {                 "attributes": {                   "SnoopingEnabled": "yes"                 }               }             }           ]         }       }     ]   } }</pre>	<p>The <b>Error</b> Pane will return an error related to the unsupported MO.</p> <p>Example:</p> <p><b>CLI</b></p> <p><b>Error</b> The entire subtree of "sys/dhcp" is not converted.</p>





## PART **IV**

# Model-Driven Programmability

- [Infrastructure Overview, on page 173](#)
- [Managing Components, on page 177](#)
- [NETCONF Agent, on page 183](#)
- [Converting CLI Commands to Network Configuration Format, on page 191](#)
- [RESTConf Agent, on page 197](#)
- [gRPC Agent, on page 201](#)
- [Dynamic Logger, on page 213](#)
- [Model-Driven Telemetry, on page 221](#)





## CHAPTER 20

# Infrastructure Overview

---

- [About Model-Driven Programmability, on page 173](#)
- [About the Programmable Interface Infrastructure, on page 173](#)

## About Model-Driven Programmability

The model-driven programmability of the NX-OS device allows you to automate the configuration and control of the device.

### Data Modeling

Data modeling provides a programmatic and standards-based method of writing configurations to the network device, replacing the process of manual configuration. Data models are written in a standard, industry-defined language. Although configuration using a CLI may be more human-friendly, automating the configuration using data models results in better scalability.


The Cisco NX-OS device supports the YANG data modeling language. YANG is a data modeling language used to describe configuration and operational data, remote procedure calls, and notifications for network devices.

### Programmable Interfaces

Three standards-based programmable interfaces are supported by NX-OS for operations on the data model: NETCONF, RESTConf, and gRPC.

## About the Programmable Interface Infrastructure

This section provides a brief overview of the NX-OS Programmable Interface infrastructure.

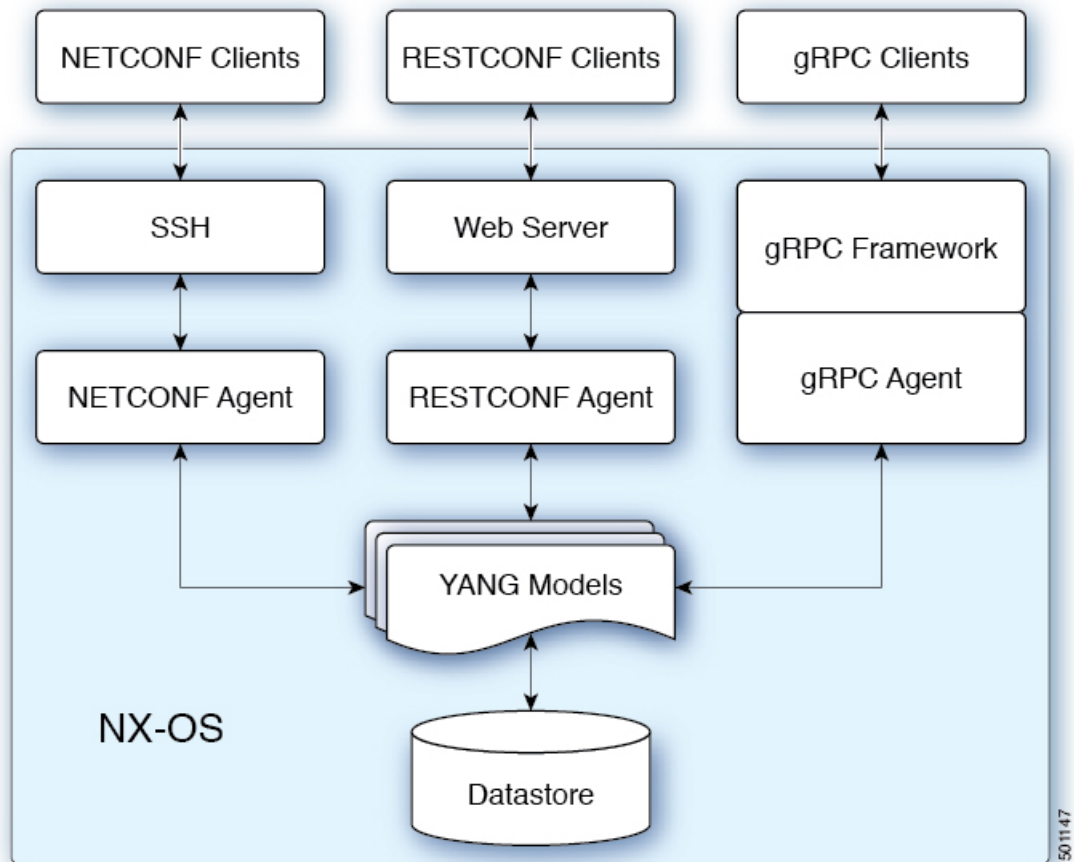

When a request is received whether via NETCONF, RESTCONF, or gRPC, the request is converted into an abstract message object. That message object is distributed to the underlying model infrastructure based on the namespace in the request. Using the namespace, the appropriate model is selected and the request is passed to it for processing. The model infrastructure executes the request (read or write) on the device datastore. The results are returned to the agent of origin for response transmission back to the requesting client.

### NX-OS Programmable Interface Agents

Agents provide an interface between the Device and clients. They specify the transport, the protocol, and the encoding of the communications with the Device. NX-OS Programmable Interfaces support three agents: NETCONF, RESTCONF, and gRPC, each providing different interfaces for configuration management of the Device via YANG models.



**Note** Supported YANG models for each Cisco NX-OS release are provided at <https://devhub.cisco.com/artifactory/open-nxos-agents>.



Table 12: NX-OS Programmable Interface Agents

Agent	Transport	Protocol	Encoding
NETCONF	SSH		XML
RESTConf	HTTP	draft-ietf-netconf-restconf-10 <sup>[1]</sup>	XML or JSON
gRPC	HTTP	gRPC Protocol Spec <sup>[2]</sup>	Google Protobuf

The protocol specifications are described in the following documents:

- [1] RESTCONF Protocol draft-ietf-netconf-restconf-10 <https://tools.ietf.org/html/draft-ietf-netconf-restconf-10>
- [2] Cisco NX-OS gRPC Protocol Specification

### Model Infrastructure

The Model Infrastructure takes requests that are received from the Agent, determines the namespace that is associated with the YANG model in the request, and selects the model component matching the namespace to process the request. When the selected model component completes request processing, the processing results are sent to the requesting Agent for transmission back to the client. The Model Infrastructure is also responsible for handling protocol initiation requests involving authentication, handshaking, and so on, as specified by the Agent protocol.

### Device YANG Model

The Device Configuration is described in a YANG model that is called a Device Model. The Device Model is manifested in the Model Infrastructure as another model component with the Device namespace.

### Common YANG Models

A Common Model is another kind of model component that contains within its elements, YANG Paths to the equivalent Device Model elements. These equivalent Device Model elements are used to read and write Device Model data in the Device YANG context.

### Additional YANG References

Additional information about YANG can be found at the *YANG Central Wiki* <https://handwiki.org/wiki/YANG> (M. Bjorklund, Ed.)





## CHAPTER 21

# Managing Components

---

- [About the Component RPM Packages, on page 177](#)
- [Preparing For Installation, on page 178](#)
- [Downloading Components from the Cisco Artifactory, on page 179](#)
- [Installing RPM Packages, on page 180](#)

## About the Component RPM Packages



**Note** Beginning with Cisco Nexus NX-OS 7.0(3)I7(1), the NX-OS Programmable Interface Base Component RPM packages (agents, the Cisco native model, the majority of other required models, and infrastructure) are included in the NX-OS image. As a result, nearly all the required software is installed automatically when the image is loaded. This means that there is no need to download and install the bulk of the software from the Cisco Artifactory. The exception is the OpenConfig model, which is required. You must explicitly download the OpenConfig models from the Cisco Artifactory.

However, for Cisco Nexus NX-OS 7.0(3)I6(1) and earlier releases, or for the purpose of upgrading, the following sections describing downloading and installing the packages are required.

---

NX-OS Programmable Interface Component RPM packages may be downloaded from the Cisco Artifactory. Three types of component RPM packages are needed:

- NX-OS Programmable Interface Infrastructure Components
- Common Model Components
- Agent Components

### **NX-OS Programmable Interface Infrastructure Components**

The NX-OS Programmable Interface Infrastructure comprises two RPM packages:

- **mtx-infra** — This RPM is platform-independent.
- **mtx-device-model** — This RPM is *platform-dependent* and must be selected to match the installed NX-OS image at the time of Cisco Artifactory download.

## Common Model Components

Common Model component RPMs provides support for Openconfig and IETF defined models. In order to enable support for one or more desired Common Models, the associated Common Model component RPMs must be downloaded and installed. As with the `mtx-device-model` RPM, Common Model components are also *platform-dependent* and must be selected to match the installed NX-OS image at the time of Cisco Artifactory download.

Following is the list of supported RPMs:

- `mtx-openconfig-bgp`
- `mtx-openconfig-bgp-multiprotocol`
- `mtx-openconfig-if-ip`
- `mtx-openconfig-interfaces`
- `mtx-openconfig-local-routing`
- `mtx-openconfig-routing-policy`
- `mtx-openconfig-vlan`

## Agent Components

Three agent packages are available: NETCONF, RESTConf and gRPC. At least one agent must be installed in order to have access to the modeled NX-OS interface.



---

**Note** Beginning with Cisco Nexus NX-OS 7.0(3)I7(3), you can enable the agents using the **feature netconf** and **feature restconf** commands. However, these commands are not included in prior releases, so for releases Cisco Nexus NX-OS 7.0(3)I7(1) to 7.0(3)I7(3), you must enter the bash shell using the instructions in the "Opening the Bash Shell on the Device" section in [Preparing For Installation, on page 178](#), then run the **netconfctl start** and **restconfctl start** commands.

---

# Preparing For Installation

This section contains installation preparation and other useful information for managing NX-OS Programmable Interface components.

## Opening the Bash Shell on the Device

RPM installation on the switch is performed in the bash shell. Make sure **feature bash** is configured on the device.

```
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# feature bash-shell
Switch(config)# end
Switch# run bash sudo su
bash-4.2#
```

To return to the device CLI prompt from bash, type **exit** or **Ctrl-D**.

### Verify Device Readiness

You can use the following CLI **show** commands to confirm the readiness of the device before installation of an RPM.

- `show module` — Indicates whether all modules are up.

```
Switch# show module
```

- `show system redundancy status` — Indicates whether the standby device is up and running and in HA mode. If a standby sync in progress, the RPM installation may fail.

```
Switch# show system redundancy status
```

If the line cards have failed to come up, enter the `createrepo /rpms` command in the bash shell.

```
bash-4.2# createrepo /rpms
```

### Copying Files to the Device

You can use SCP to copy files to the device, using a command in this form.

**copy scp://username@source\_ip/path\_to\_agent\_rpm bootflash: vrf management**

Example:

```
Switch# copy scp://jdoe@192.0.20.123//myrpms/mtx-infra.1.0.0.r082616.x86_64.rpm bootflash:  
vrf management
```

### Displaying Installed NX-OS Programmable Interface RPMs

To show all installed NXOS Programmable Interface RPMs, issue the following command on the device:

```
bash-4.2# yum list installed | grep mtx
```

## Downloading Components from the Cisco Artifactory

The NX-OS Programmable Interface Component RPMs can be downloaded from the Cisco Artifactory at the following URL:

<https://devhub.cisco.com/artifactory/open-nxos-agents>

The NX-OS Programmable Interface Component RPMs adhere to the following naming convention:

**mtx-name.ma.mi.ma.rYYYYYY.x86\_64.rpm**

or

**mtx-name-XXXX.ma.mi.ma.rYYYYYY.x86\_64.rpm**

where

- *name* — MTX component name (such as `infra`, `device-model`, `openconfig-interface`, `netconf`, etc)
- *ma.mi.ma* — RPM Version Number (major.minor.maintenance)

- XXXX — NX-OS Image ID
- rYYYYYY — RPM build ID

Select and download the desired NX-OS Programmable Interface Component RPM packages to a local server for installation on the device as described in the following sections.

## Installing RPM Packages

### Installing the Programmable Interface Infrastructure RPM Packages

#### Before you begin

- From the Cisco Artifactory, download the following packages:
  - mtx-infra.ma.mi.ma.rYYYYYYY.x86\_64.rpm (Infrastructure)
  - mtx-device-XXXX.ma.mi.ma.rYYYYYYY.x86\_64.rpm RPM (Device Model)
- Using the CLI commands in [Verify Device Readiness, on page 179](#), confirm that all line cards in the active and standby devices are up and ready.

#### Procedure

**Step 1** Copy the downloaded RPMs to the device.

##### Example:

```
Switch# copy scp://jdoe@192.0.20.123//myrpms/mtx-infra.1.0.0.r082616.x86_64.rpm bootflash:
vrf management
Switch# copy scp://jdoe@192.0.20.123//myrpms/mtx-device.1.0.0.r082616.x86_64.rpm bootflash:
vrf management
```

**Step 2** From the bash shell, install the MTX Infra RPM.

##### Example:

```
bash-4.2# cd /bootflash
bash-4.2# yum install mtx-infra.1.0.0.r082616.x86_64.rpm
```

**Step 3** From the bash shell, install the MTX Device Model RPM.

##### Example:

```
bash-4.2# cd /bootflash
bash-4.2# yum install mtx-device.1.0.0.r082616.x86_64.rpm
```

**Step 4** From the bash shell, verify the installation.

**Example:**

```
bash-4.2# yum list installed | grep mtx
```

---

**What to do next**

Install one or more Common Model RPM Packages.

## Installing Common Model RPM Packages

**Before you begin**

- Install the Programmable Interface Infrastructure RPM packages.
- Download the Common Model RPM packages from the Cisco Artifactory.

**Procedure**

---

**Step 1** Copy the downloaded Common Model RPMs to the device.

**Example:**

```
bash-4.2# copy
scp://jdoe@192.0.20.123//myrpms/mtx-openconfig_interfaces.1.0.0.r082616.x86_64.rpm bootflash:
vrf management
```

**Step 2** From the bash shell, install each Common Model RPM.

**Example:**

```
bash-4.2# cd /bootflash
bash-4.2# yum install mtx-openconfig_interfaces.1.0.0.r082616.x86_64.rpm
```

**Step 3** From the bash shell, verify the installation.

**Example:**

```
bash-4.2# yum list installed | grep mtx
```

---

**What to do next**

Install one or more NX-OS Programmable Interface Agent RPM Packages.

# Installing Agent RPM Packages

## Before you begin

- Install the Programmable Interface Infrastructure RPM packages.
- Install one or more Common Model RPM packages.
- Download the Agent RPM packages from the Cisco Artifactory.

## Procedure

---

**Step 1** Copy the downloaded Agent RPMs to the device.

### Example:

```
bash-4.2# copy scp://jdoe@192.0.20.123//myrpms/myrpms/mtx-netconf.1.0.0.r082616.x86_64.rpm
bootflash: vrf management
```

**Step 2** From the bash shell, install the Agent RPM.

### Example:

```
bash-4.2# cd /bootflash
bash-4.2# yum install mtx-netconf.1.0.0.r082616.x86_64.rpm
```

**Step 3** From the bash shell, verify the installation.

### Example:

```
bash-4.2# yum list installed | grep mtx
```

---

## What to do next

Configure the Agent.





## CHAPTER 22

# NETCONF Agent

- [About the NETCONF Agent, on page 183](#)
- [Guidelines and Limitations, on page 185](#)
- [Configuring the NETCONF Agent, on page 185](#)
- [Using the NETCONF Agent, on page 186](#)
- [Troubleshooting the NETCONF Agent, on page 190](#)

## About the NETCONF Agent

The Cisco NX-OS NETCONF Agent is a client-facing interface that provides secure transport for the client requests and server responses in the form of a YANG model, encoded in XML.

The NETCONF Agent supports a candidate configuration feature. The Candidate configuration datastore temporarily holds candidate configuration and any changes you make without changing the running configuration. You can then choose when to update the configuration of the device with the candidate configuration when you commit and confirm the candidate configuration.

If you do not confirm the changes, exit from a nonpersistent NETCONF client session, or choose to cancel the commit after you commit the change, a system timer then times out and rolls back the changes if you do not confirm the changes.

If you initiate a confirmed-commit operation with a persistent token, the NETCONF client session becomes a persistent process. In a persistent process, exiting the NETCONF client session will not call an automatic roll-back and the changes cannot be rolled back without the matching persistent token.

Cisco NX-OS NETCONF supports the following configuration capabilities:

- Writable-Running Capability  
`urn:ietf:params:netconf:capability:writable-running:1.0`
- Rollback-on-error Capability  
`urn:ietf:params:netconf:capability:rollback-on-error:1.0`
- Candidate Configuration Capability  
`urn:ietf:params:netconf:capability:candidate:1.0`
- Validation Capability  
`urn:ietf:params:netconf:capability:validate:1.1`
- Confirmed Commit Capability

```
urn:ietf:params:netconf:capability:confirmed-commit:1.1
```

When a new session starts, the NETCONF Agent sends out a <hello> message advertising its capabilities. The following example shows a NETCONF agent sending a <hello> message to the client:

```
<?xml version="1.0" encoding="UTF-8"?>
<hello>

  <capabilities>

    <capability>urn:ietf:params:netconf:base:1.0</capability>
    <capability>urn:ietf:params:netconf:base:1.1</capability>
    <capability>urn:ietf:params:netconf:capability:writable-running:1.0</capability>
    <capability>urn:ietf:params:netconf:capability:rollback-on-error:1.0</capability>
    <capability>urn:ietf:params:netconf:capability:candidate:1.0</capability>
    <capability>urn:ietf:params:netconf:capability:validate:1.1</capability>
    <capability>urn:ietf:params:netconf:capability:confirmed-commit:1.1</capability>

    <capability>http://cisco.com/ns/yang/cisco-nx-os-device?revision=2017-04-06&module=cisco-nx-os-device&capabilities=cisco-nx-os-device-deviations</capability>

  </capabilities>

  <session-id>1438752697</session-id>
</hello>
```

The Cisco NX-OS NETCONF Agent supports the following NETCONF Protocol operations:

- get
- get-config
- edit-config
- close-session
- kill-session

Candidate configuration supports the following NETCONF Protocol operations.

- Operations for the candidate configuration as <source> or <target>.
  - get-config
  - edit-config
  - copy-config
  - lock
  - unlock
  - validate
- Operations for the candidate configuration that do not require explicitly specifying the candidate configuration as <source> or <target>.
  - commit
  - cancel-commit
  - discard-changes




---

**Note** The delete-config operation is not allowed.

---

## Guidelines and Limitations

The NETCONF Agent has the following guideline and limitation:

- NETCONF does not support enhanced Role-Based Access Control (RBAC) as specified in RFC 6536. Only users with a "network-admin" role are granted access to the NETCONF agent.
- NETCONF requires RPM to be installed on port 830.

## Configuring the NETCONF Agent

The NETCONF Agent supports the following optional configuration parameters under the [netconf] section in the configuration file (/etc/mtx.conf).

Parameter	Description
<b>idle_timeout</b>	(Optional) Specifies the timeout in minutes after which idle client sessions are disconnected.  The default value is 5 minutes.  A value of 0 disables timeout.
<b>limit</b>	(Optional) Specifies the number of maximum simultaneous client sessions.  The default value is 5 sessions.  The range is 1 to 10.

The following is an example of the [netconf] section in the configuration file:

```
[netconf]
mtxadapter=/opt/mtx/lib/libmtxadapternetconf.1.0.1.so
idle_timeout=10
limit=1
```

For the modified configuration file to take effect, you must restart the NETCONF Agent using the CLI command **[no] feature netconf** to disable and re-enable.

# Using the NETCONF Agent

## General Commands

The NETCONF Agent is enabled or disabled by the command `[no] feature netconf`.

## Initializing the Candidate Configuration Datastore

The candidate configuration can only be initialized with the contents of the running configuration. To initialize the candidate configuration datastore, send a Copy-Config request using SSH, with candidate as the target and running as the source.

## Performing Read and Write on the Candidate Configuration

To read from the candidate configuration, send a Get-Config request with SSH, using candidate as the source.

To write to the contents of the candidate configuration, send an Edit-Config request with SSH, using candidate as the target.

## NETCONF Candidate Configuration Workflow

The candidate configuration workflow is as follows:

- Edit the candidate configuration file.
- Validate the candidate configuration.
- Commit the changes to the running configuration.

## Example: An SSH Session

This example shows initiating a session using the SSH client and sending an Edit-Config and Get request using the SSH Client.

```
client-host % ssh -s admin@172.19.193.152 -p 830 netconf
client-host % ssh -s admin@172.19.193.152 -p 830 netconf
User Access Verification
Password:
<?xml version="1.0" encoding="UTF-8"?>
<hello>
  <capabilities>
    <capability>urn:ietf:params:netconf:base:1.0</capability>
    <capability>urn:ietf:params:netconf:base:1.1</capability>
    <capability>urn:ietf:params:netconf:capability:writable-running:1.0</capability>
    <capability>urn:ietf:params:netconf:capability:rollback-on-error:1.0</capability>
    <capability>urn:ietf:params:netconf:capability:candidate:1.0</capability>
    <capability>urn:ietf:params:netconf:capability:validate:1.1</capability>
    <capability>urn:ietf:params:netconf:capability:confirmed-commit:1.1</capability>
  </capabilities>
  <session-id>1912037714</session-id>
</hello>
]]]]><hello xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
  <capabilities>
```

```

        <capability>urn:ietf:params:netconf:base:1.1</capability>
    </capabilities>
</hello>
]]>]]>
#794
<rpc message-id="101"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0">
    <edit-config>
        <target>
            <running/>
        </target>
        <config>
            <System xmlns="http://cisco.com/ns/yang/cisco-nx-os-device">
                <bgp-items>
                    <inst-items>
                        <dom-items>
                            <Dom-list>
                                <name>default</name>
                                <rtrId>2.2.2.2</rtrId>
                            </Dom-list>
                        </dom-items>
                    </inst-items>
                </bgp-items>
            </System>
        </config>
    </edit-config>
</rpc>
##

#190
<?xml version="1.0" encoding="UTF-8"?>
<rpc-reply message-id="101"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0">
    <ok/>
</rpc-reply>
##

#511
<rpc message-id="109"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<get-config>
    <source>
        <running/>
    </source>
    <filter type="subtree">
        <System xmlns="http://cisco.com/ns/yang/cisco-nx-os-device">
            <bgp-items>
                <inst-items>
                    <dom-items>
                        <Dom-list/>
                    </dom-items>
                </inst-items>
            </bgp-items>
        </System>
    </filter>
</get-config>
</rpc>
##

#996
<?xml version="1.0" encoding="UTF-8"?>

```

```

<rpc-reply message-id="109"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
  <data>
    <System>
      <bgp-items>
        <inst-items>
          <dom-items>
            <Dom-list>
              <name>default</name>
              <always>disabled</always>
              <bestPathIntvl>300</bestPathIntvl>
              <holdIntvl>180</holdIntvl>
              <kaIntvl>60</kaIntvl>
              <maxAsLimit>0</maxAsLimit>
              <pfxPeerTimeout>30</pfxPeerTimeout>
              <pfxPeerWaitTime>90</pfxPeerWaitTime>
              <reConnIntvl>60</reConnIntvl>
              <rtrId>2.2.2.2</rtrId>
            </Dom-list>
          </dom-items>
        </inst-items>
      </bgp-items>
    </System>
  </data>
</rpc-reply>

##

```

Note that the operation attribute in `edit-config` identifies the point in configuration where the specified operation will be performed. If the operation attribute is not specified, the configuration is merged into the existing configuration data store. Operation attribute can have the following values:

- create
- merge
- delete

The following example shows how to delete the configuration of interface Ethernet 0/0 from the running configuration.

```

xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
  <edit-config>
    <target>
      <running/>
    </target>
    <default-operation>none</default-operation>
    <config xmlns:xc="urn:ietf:params:xml:ns:netconf:base:1.0">
      <top xmlns="http://example.com/schema/1.2/config">
        <interface xc:operation="delete">
          <name>Ethernet0/0</name>
        </interface>
      </top>
    </config>
  </edit-config>
</rpc>]]]]>

```

## Error Messages

If a request results in an error, the response payload includes the error.

### Errors Defined by Cisco

The following are the errors defined by Cisco.

Error defined by Cisco	Description
unknown-error-cond	Unknown error encountered.
n-y-i	The requested operation is not supported. (not-yet-implemented).
namespace-not-found	Error in request payload.
namespace-already-exists	Error in request payload.
object-not-found	Error in request payload.
object-not-container	Error in request payload.
object-not-property	Error in request payload.
no-property-in-object	Error in request payload.
invalid-dn	Internal error.
invalid-arg	Internal error.
already-exists	Error in request payload.
container-not-found	Error in request payload
container-already-exists	Error in request payload.
property-not-found	Error in request payload.
property-already-exists	Error in request payload.
malformed	Error in request payload.
alloc-failed	Internal error.
sigint	Internal error.
not-initialized	Internal error.
inappropriate	Internal error.

The following is an example of a NETCONF error response payload that reports an invalid IP address value:

```
<?xml version="1.0" encoding="UTF-8"?>
<rpc-reply message-id="320" xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
  <rpc-error>
    <error-type>Protocol</error-type>
    <error-tag>operation-failed</error-tag>
    <error-severity>Error</error-severity>
    <error-message xml:lang="en">Property Merge (set property) Failed: operation-failed
value=500.500.500.500</error-message>
    <error-path>/config/System/bgp-items/inst-items/dom-items/Dom-list/rtrId</error-path>
  </rpc-error>
</rpc-reply>
```

# Troubleshooting the NETCONF Agent

## Troubleshooting Connectivity

- From a client system, ping the management port of the switch to verify that the switch is reachable.
- In the bash shell of the switch, execute the **service netconf status** command to check the agent status.
- There is the XML Management Interface (also known as xmlagent), which is quite different from and often confused as the NETCONF Agent. Please ensure that you connect to the correct port 830 and receive a correct <hello> message (similar to what is shown in the Establishing a NETCONF Session section) from the server if the server does not respond with the correct NETCONF messages.
- You can view NETCONF agent debugs from the Bash shell by viewing the contents of the `/volatile/netconf-internal-log` file. You can enable the Bash shell by using the **feature bash** command. After enabling the Bash shell, enter the Bash shell through the **run bash** command. For more information, see the chapter titled *Bash* in this document.

**Note:** The **debug netconf** commands cannot be used to debug NETCONF Agent operations. These debug commands will not output any NETCONF Agent-related logs.





## CHAPTER 23

# Converting CLI Commands to Network Configuration Format

- [Information About XMLIN, on page 191](#)
- [Licensing Requirements for XMLIN, on page 191](#)
- [Installing and Using the XMLIN Tool, on page 192](#)
- [Converting Show Command Output to XML, on page 192](#)
- [Configuration Examples for XMLIN, on page 193](#)

## Information About XMLIN

The XMLIN tool converts CLI commands to the Network Configuration (NETCONF) protocol format. NETCONF is a network management protocol that provides mechanisms to install, manipulate, and delete the configuration of network devices. It uses XML-based encoding for configuration data and protocol messages. The NX-OS implementation of the NETCONF protocol supports the following protocol operations: `<get>`, `<edit-config>`, `<close-session>`, `<kill-session>`, and `<exec-command>`.

The XMLIN tool converts show, EXEC, and configuration commands to corresponding NETCONF `<get>`, `<exec-command>`, and `<edit-config>` requests. You can enter multiple configuration commands into a single NETCONF `<edit-config>` instance.

The XMLIN tool also converts the output of show commands to XML format.

## Licensing Requirements for XMLIN

*Table 13: XMLIN Licensing Requirements*

Product	License Requirement
Cisco NX-OS	XMLIN requires no license. Any feature not included in a license package is bundled with the Cisco NX-OS system images and is provided at no extra charge to you. For a complete explanation of the Cisco NX-OS licensing scheme, see the <i>Cisco NX-OS Licensing Guide</i> .

# Installing and Using the XMLIN Tool

You can install the XMLIN tool and then use it to convert configuration commands to NETCONF format.

## Before you begin

The XMLIN tool can generate NETCONF instances of commands even if the corresponding feature sets or required hardware capabilities are not available on the device. But, you might still need to install some feature sets before entering the **xmlin** command.

## Procedure

	Command or Action	Purpose
<b>Step 1</b>	switch# <b>xmlin</b>	
<b>Step 2</b>	switch(xmlin)# <b>configure terminal</b>	Enters global configuration mode.
<b>Step 3</b>	Configuration commands	Converts configuration commands to NETCONF format.
<b>Step 4</b>	(Optional) switch(config)(xmlin)# <b>end</b>	Generates the corresponding <edit-config> request.  <b>Note</b> Enter the <b>end</b> command to finish the current XML configuration before you generate an XML instance for a <b>show</b> command.
<b>Step 5</b>	(Optional) switch(config-if-verify)(xmlin)# <b>show commands</b>	Converts <b>show</b> commands to NETCONF format.
<b>Step 6</b>	(Optional) switch(config-if-verify)(xmlin)# <b>exit</b>	Returns to EXEC mode.

# Converting Show Command Output to XML

You can convert the output of show commands to XML.

## Before you begin

Make sure that all features for the commands you want to convert are installed and enabled on the device. Otherwise, the commands fail.

You can use the **terminal verify-only** command to verify that a feature is enabled without entering it on the device.

Make sure that all required hardware for the commands you want to convert are present on the device. Otherwise, the commands fail.

Make sure that the XMLIN tool is installed.

**Procedure**

	Command or Action	Purpose
<b>Step 1</b>	switch# <i>show-command</i>   <b>xmlin</b>	Enters global configuration mode.  <b>Note</b> You cannot use this command with configuration commands.

## Configuration Examples for XMLIN

The following example shows how the XMLIN tool is installed on the device and used to convert a set of configuration commands to an <edit-config> instance.

```

switch# xmlin
*****
Loading the xmlin tool. Please be patient.
*****
Cisco Nexus Operating System (NX-OS) Software
TAC support: http://www.cisco.com/tac
Copyright ©) 2002-2013, Cisco Systems, Inc. All rights reserved.
The copyrights to certain works contained in this software are
owned by other third parties and used and distributed under
license. Certain components of this software are licensed under
the GNU General Public License (GPL) version 2.0 or the GNU
Lesser General Public License (LGPL) Version 2.1. A copy of each
such license is available at
http://www.opensource.org/licenses/gpl-2.0.php and
http://www.opensource.org/licenses/lgpl-2.1.php

switch(xmlin)# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
switch(config)(xmlin)# interface ethernet 2/1
% Success
switch(config-if-verify)(xmlin)# cdp enable
% Success
switch(config-if-verify)(xmlin)# end
<?xml version="1.0"?>
<nf:rpc xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns="http://www.cisco.com/nxos:6.2.2.:configure_"
xmlns:m="http://www.cisco.com/nxos:6.2.2.:_exec"
xmlns:ml="http://www.cisco.com/nxos:6.2.2.:configure__if-eth-base" message-id="1">
  <nf:edit-config>
    <nf:target>
      <nf:running/>
    </nf:target>
    <nf:config>
      <m:configure>
        <m:terminal>
          <interface>
            <__XML_PARAM_interface>
              <__XML_value>Ethernet2/1</__XML_value>
              <ml:cdp>
                <ml:enable/>
              </ml:cdp>
            </__XML_PARAM_interface>
          </interface>
        </m:terminal>
      </m:configure>
    
```

```

    </nf:config>
  </nf:edit-config>
</nf:rpc>
]]>]]>

```

The following example shows how to enter the **end** command to finish the current XML configuration before you generate an XML instance for a **show** command.

```

switch(xmlin)# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
switch(config)(xmlin)# interface ethernet 2/1
switch(config-if-verify)(xmlin)# show interface ethernet 2/1
*****
Please type "end" to finish and output the current XML document before building a new one.
*****
% Command not successful

switch(config-if-verify)(xmlin)# end
<?xml version="1.0"?>
<nf:rpc xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns="http://www.cisco.com/nxos:6.2.2.:configure_"
xmlns:m="http://www.cisco.com/nxos:6.2.2.:_exec" message-id="1">
  <nf:edit-config>
    <nf:target>
      <nf:running/>
    </nf:target>
    <nf:config>
      <m:configure>
        <m:terminal>
          <interface>
            <__XML_PARAM__interface>
              <__XML_value>Ethernet2/1</__XML_value>
            </__XML_PARAM__interface>
          </interface>
        </m:terminal>
      </m:configure>
    </nf:config>
  </nf:edit-config>
</nf:rpc>
]]>]]>

switch(xmlin)# show interface ethernet 2/1
<?xml version="1.0"?>
<nf:rpc xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns="http://www.cisco.com/nxos:6.2.2.:if_manager" message-id="1">
  <nf:get>
    <nf:filter type="subtree">
      <show>
        <interface>
          <__XML_PARAM__ifeth>
            <__XML_value>Ethernet2/1</__XML_value>
          </__XML_PARAM__ifeth>
        </interface>
      </show>
    </nf:filter>
  </nf:get>
</nf:rpc>
]]>]]>
switch(xmlin)# exit
switch#

```

The following example shows how you can convert the output of the **show interface brief** command to XML.

```
switch# show interface brief | xmlin
<?xml version="1.0"?>
<nf:rpc xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns="http://www.cisco.com/nxos:6.2.2.:if_manager"

message-id="1">
  <nf:get>
    <nf:filter type="subtree">
      <show>
        <interface>
          <brief/>
        </interface>
      </show>
    </nf:filter>
  </nf:get>
</nf:rpc>
]]>]]>
```





# CHAPTER 24

## RESTCONF Agent

- [About the RESTCONF Agent, on page 197](#)
- [Guidelines and Limitations, on page 198](#)
- [Using the RESTCONF Agent, on page 198](#)
- [Troubleshooting the RESTCONF Agent, on page 199](#)

### About the RESTCONF Agent

Cisco NX-OS RESTCONF is an HTTP -based protocol for configuring data that are defined in YANG version 1, using datastores defined in NETCONF.

NETCONF defines configuration datastores and a set of Create, Retrieve, Update, and Delete (CRUD) operations that can be used to access these datastores. The YANG language defines the syntax and semantics of datastore content, operational data, protocol operations, and event notifications.

Cisco NX-OS RESTCONF uses HTTP operations to provide CRUD operations on a conceptual datastore containing YANG-defined data. This data is compatible with a server which implements NETCONF datastores.

The RESTCONF protocol supports both XML and JSON payload encodings. User authentication is done through the HTTP Basic Authentication.

The following table shows the Protocol operations that the Cisco NX-OS RESTCONF Agent supports:

RESTCONF	NETCONF Equivalent
OPTIONS	NETCONF: none
HEAD	NETCONF: none
GET	NETCONF: <get-config>, <get>
POST	NETCONF: <edit-config> (operation="create")
PUT	NETCONF: <edit-config> (operation="create/replace")
PATCH	NETCONF: <edit-config> (operation="merge")
DELETE	NETCONF: <edit-config> (operation="delete")

# Guidelines and Limitations

The RESTCONF Agent has the following guideline and limitation:

- Cisco NX-OS RESTCONF is based on an RFC draft entitled RESTCONF Protocol draft-ietf-netconf-restconf-10 (<https://tools.ietf.org/html/draft-ietf-netconf-restconf-10>).
- RESTCONF does not support enhanced Role-Based Access Control (RBAC) as specified in RFC 6536. Only users with a "network-admin" role are granted access to the RESTCONF agent.

## Using the RESTCONF Agent

### General Commands

- Configure the following commands to enable HTTP or HTTPS access:
  - **feature nxapi**
  - **nxapi http port 80**
  - **nxapi https port 443**

### General Control Commands

You can enable or disable the RESTCONF Agent [**no**] **feature restconf** command.

### Viewing the Agent Status

To view the status of the RESTCONF agent, use the **show feature** command and include the expression **restconf**.

```
switch-1# show feature | grep restconf
restconf          1          enabled
switch-1#
```

### Sending a POST Request to the Server Using Curl

```
client-host % curl -X POST -H "Authorization: Basic YWRtaW46Y2lzY28=" -H "Content-Type: application/yang.data+xml" -d '<always>enabled</always><rtrId>2.2.2.</rtrId>' "http://192.0.20.123/restconf/data/Cisco-NX-OS-device:System/bgp-items/inst-items/dom-items/Dom-list=default" -i
```

```
HTTP/1.1 201 Created
Server: nginx/1.7.10
Date: Tue, 27 Sep 2016 20:25:31 GMT
Transfer-Encoding: chunked
Connection: keep-alive
Set-Cookie: nxapi_auth=admin:147500853169574134
Status: 201 Created
Location: /System/bgp-items/inst-items/dom-items/Dom-list=default/always/rtrId/
```



## Sending a GET Request to the Server Using Curl

```
client-host % curl -X GET -H "Authorization: Basic YWRtaW46Y2lzY28=" -H "Accept:
application/yang.data+xml"
"http://192.0.20.123/restconf/data/Cisco-NX-OS-device:System/bgp-items/inst-items/dam-items/Dam-list?content=config"
-i

HTTP/1.1 200 OK
Server: nginx/1.7.10
Date: Tue, 27 Sep 2016 20:26:03 GMT
Content-Type: application/yang.data+xml
Content-Length: 395
Connection: keep-alive
Set-Cookie: nxapi_auth=admin:147500856185650327
Status: 200 OK

    <Dom-list>
      <name>default</name>
      <always>enabled</always>
      <bestPathIntvl>300</bestPathIntvl>
      <holdIntvl>180</holdIntvl>
      <kaIntvl>60</kaIntvl>
      <maxAsLimit>0</maxAsLimit>
      <pfxPeerTimeout>30</pfxPeerTimeout>
      <pfxPeerWaitTime>90</pfxPeerWaitTime>
      <reConnIntvl>60</reConnIntvl>
      <rtrId>2.2.2.2</rtrId>
    </Dom-list>
client-host %
```

# Troubleshooting the RESTCONF Agent

## Troubleshooting Connectivity

- Enable the web server by issuing the **feature nxapi** command.
- Ensure that the **nxapi http port 80** command is configured to open up the port for HTTP
- Ensure that the **nxapi https port 443** command is configured to open up the port for HTTPS.
- Ping the management port of the switch to verify that the switch is reachable.





## CHAPTER 25

# gRPC Agent

---

- [About the gRPC Agent, on page 201](#)
- [Guidelines and Limitations, on page 202](#)
- [Configuring the gRPC Agent for Cisco NX-OS Release 9.3\(2\) and Earlier, on page 203](#)
- [Using the gRPC Agent, on page 203](#)
- [Troubleshooting the gRPC Agent, on page 205](#)
- [gRPC Protobuf File, on page 205](#)

## About the gRPC Agent

The Cisco NX-OS gRPC protocol defines a mechanism through which a network device can be managed and its configuration data can be retrieved and installed. The protocol exposes a complete and formal Application Programming Interface (API) that clients can use to manage device configurations.

The Cisco NX-OS gRPC protocol uses a remote procedure call (RPC) paradigm where an external client manipulates device configurations utilizing Google Protocol Buffer (GPB)-defined API calls along with their service-specific arguments. These GPB-defined APIs transparently cause an RPC call to the device that return replies in the same GPB-defined API context.

The gRPC Agent provides a secure transport through TLS and user authentication and authorization through AAA.

The functional objective of the Cisco NX-OS gRPC protocol is to mirror that provided by NETCONF, particularly in terms of both stateless and stateful configuration manipulation for maximum operational flexibility.

The Cisco NX-OS gRPC Agent supports the following protocol operations:

- Get
- GetConfig
- GetOper
- EditConfig
- StartSession
- CloseSession
- KillSession

The gRPC Agent supports two types of operations:

- **Stateless operations** are performed entirely within a single message without creating a session.
- **Stateful operations** are performed using multiple messages. The following is the sequence of operations that are performed:
  1. Start the session. This action acquires a unique session ID.
  2. Perform session tasks using the session ID.
  3. Close the session. This action invalidates the session ID.

The following are the supported operations. See the Appendix for their RPC definitions in the **.proto** file that is exported by the gRPC Agent.

Operation	Description
StartSession	Starts a new session between the client and server and acquires a unique session ID.
EditConfig	Writes the specified YANG data subset to the target datastore.
GetConfig	Retrieves the specified YANG configuration data subset from the source datastore.
GetOper	Retrieves the specified YANG operational data from the source datastore.
Get	Retrieves the specified YANG configuration and operational data from the source datastore.
KillSession	Forces the termination of a session.
CloseSession	Requests graceful termination of a session.

GetConfig, GetOper, and Get are stateless operations so don't require a session ID.

EditConfig can be either stateless or stateful. For a stateless operation, specify the SessionID as 0. For a stateful operation, a valid (nonzero) SessionID is required.

The gRPC Agent supports timeout for the sessions. The idle timeout for sessions can be configured on the device, after which idle sessions are closed and deleted.

## Guidelines and Limitations

The gRPC Agent has the following guideline and limitation:

- gRPC does not support enhanced Role-Based Access Control (RBAC) as specified in RFC 6536. Only users with a "network-admin" role are granted access to the gRPC agent.

# Configuring the gRPC Agent for Cisco NX-OS Release 9.3(2) and Earlier

The gRPC Agent supports the following configuration parameters under the **[grpc]** section in the configuration file (**/etc/mtx.conf**).

Parameter	Description
<b>idle_timeout</b>	(Optional) Specifies the timeout in minutes after which idle client sessions are disconnected.  The default timeout is 5 minutes.  A value of 0 disables timeout.
<b>limit</b>	(Optional) Specifies the number of maximum simultaneous client sessions.  The default limit is 5 sessions.  The range is from 1 through 50.
<b>lport</b>	(Optional) Specifies the port number on which the gRPC Agent listens.  The default port is 50051.
<b>key</b>	Specifies the key file location for TLS authentication.  The default location is <b>/opt/mtx/etc/grpc.key</b> .
<b>cert</b>	Specifies the certificate file location for TLS authentication.  The default location is <b>/opt/mtx/etc/grpc.pem</b> .
<b>security</b>	Specifies the type of secure connection.  Valid choices are: <ul style="list-style-type: none"> <li>• <b>TLS</b> for TLS</li> <li>• <b>NONE</b> for an insecure connection</li> </ul>

## Using the gRPC Agent

### General Commands

You can enable or disable the gRPC Agent by issuing the **[no] feature grpc** command.

### Example: A Basic Yang Path in JSON Format

```
client-host % cat payload.json
{
  "namespace": "http://cisco.com/ns/yang/cisco-nx-os-device",
  "System": {
    "bgp-items": {
      "inst-items": {
        "dom-items": {
          "Dom-list": {
            "name": "default",
            "rtrId": "7.7.7.7",
            "holdIntvl": "100"
          }
        }
      }
    }
  }
}
```




---

**Note** The JSON structure has been pretty-formatted here for readability.

---

### Sending an EditConfig Request to the Server

```
client-host % ./grpc_client -username=admin -password=cisco -operation=EditConfig
-e_oper=Merge -def_op=Merge -err_op=stop-on-error -infile=payload.json -reqid=1
-source=running -tls=true -serverAdd=192.0.20.123 -lport=50051
```

```
#####
Starting the client service
#####
TLS set true for client requestslems.cisco.com
TLS FLAG:1
192.0.20.123:50051
All the client connections are secured
Sending EditConfig request to the server
sessionid is
0
reqid:1
{"rpc-reply":{"ok":""}}
```

### Sending a GetConfig Request to the Server

```
client-host % ./grpc_client -username=admin -password=cisco -operation=GetConfig
-infile=payload.json -reqid=1 -source=running -tls=true -serverAdd=192.0.20.123 -lport=50051
```

```
#####
Starting the client service
#####
TLS set true for client requestslems.cisco.com
TLS FLAG:1
192.0.20.123:50051
All the client connections are secured
Sending GetConfig request to the server
in get config
```

```

Got the response from the server
#####
Yang Json is:
#####
{"rpc-reply":{"data":{"system":{"log-items":{"inst-items":{"don-items":{"don-list":{"name":"default","rtzid":"7.7.7","holdIntvl":"100"}}}}}}}}
#####
client-host %

```

## Troubleshooting the gRPC Agent

### Troubleshooting Connectivity

- From a client system, verify that the agent is listening on the port. For example:

```

client-host % nc -z 192.0.20.222 50051
Connection to 192.0.20.222 50051 port [tcp/*] succeeded!
client-host % echo $?
0
client-host %

```

- In the NX-OS, check the gRPC agent status by issuing **show feature | grep grpc**.

## gRPC Protobuf File

The gRPC Agent exports the supported operations and data structures in the proto definition file at `/opt/mtx/etc/nxos_grpc.proto`. The file is included in the gRPC Agent RPM. The following shows the definitions:

```

// Copyright 2016, Cisco Systems Inc.
// All rights reserved.

syntax = "proto3";

package NXOSExtensibleManagabilityService;

// Service provided by Cisco NX-OS gRPC Agent
service gRPCConfigOper {

    // Retrieves the specified YANG configuration data subset from the
    // source datastore
    rpc GetConfig(GetConfigArgs) returns(stream GetConfigReply) {};

    // Retrieves the specified YANG operational data from the source datastore
    rpc GetOper(GetOperArgs) returns(stream GetOperReply) {};

    // Retrieves the specified YANG configuration and operational data
    // subset from the source datastore
    rpc Get(GetArgs) returns(stream GetReply) {};

    // Writes the specified YANG data subset to the target datastore
    rpc EditConfig(EditConfigArgs) returns(EditConfigReply) {};

    // Starts a new session between the client and server and acquires a

```

```
// unique session ID
rpc StartSession(SessionArgs) returns(SessionReply) {};

// Requests graceful termination of a session
rpc CloseSession(CloseSessionArgs) returns (CloseSessionReply) {};

// Forces the termination of a session
rpc KillSession(KillArgs) returns(KillReply) {};

// Unsupported; reserved for future
rpc DeleteConfig(DeleteConfigArgs) returns(DeleteConfigReply) {};

// Unsupported; reserved for future
rpc CopyConfig(CopyConfigArgs) returns(CopyConfigReply) {};

// Unsupported; reserved for future
rpc Lock(LockArgs) returns(LockReply) {};

// Unsupported; reserved for future
rpc UnLock(UnLockArgs) returns(UnLockReply) {};

// Unsupported; reserved for future
rpc Commit(CommitArgs) returns(CommitReply) {};

// Unsupported; reserved for future
rpc Validate(ValidateArgs) returns(ValidateReply) {};

// Unsupported; reserved for future
rpc Abort(AbortArgs) returns(AbortReply) {};

}

message GetConfigArgs
{
    // JSON-encoded YANG data to be retrieved
    string YangPath = 1;

    // (Optional) Specifies the request ID. Default value is 0.
    int64 ReqID = 2;

    // (Optional) Specifies the source datastore; only "running" is supported.
    // Default is "running".
    string Source = 3;
}

message GetConfigReply
{
    // The request ID specified in the request.
    int64 ReqID = 1;

    // JSON-encoded YANG data that was retrieved
    string YangData = 2;

    // JSON-encoded error information when request fails
    string Errors = 3;
}

message GetOperArgs
{
    // JSON-encoded YANG data to be retrieved
    string YangPath = 1;

    // (Optional) Specifies the request ID. Default value is 0.
    int64 ReqID = 2;
}
```



```
}

message GetOperReply
{
    // The request ID specified in the request.
    int64 ReqID = 1;

    // JSON-encoded YANG data that was retrieved
    string YangData = 2;

    // JSON-encoded error information when request fails
    string Errors = 3;
}

message GetArgs
{
    // JSON-encoded YANG data to be retrieved
    string YangPath=1;

    // (Optional) Specifies the request ID. Default value is 0.
    int64 ReqID = 2;
}

message GetReply
{
    // The request ID specified in the request.
    int64 ReqID = 1;

    // JSON-encoded YANG data that was retrieved
    string YangData = 2;

    // JSON-encoded error information when request fails
    string Errors = 3;
}

message EditConfigArgs
{
    // JSON-encoded YANG data to be edited
    string YangPath = 1;

    // Specifies the operation to perform on teh configuration datastore with
    // the YangPath data. Possible values are:
    // create
    // merge
    // replace
    // delete
    // remove
    // If not specified, default value is "merge".
    string Operation = 2;

    // A unique session ID acquired from a call to StartSession().
    // For stateless operation, this value should be set to 0.
    int64 SessionID = 3;

    // (Optional) Specifies the request ID. Default value is 0.
    int64 ReqID = 4;

    // (Optional) Specifies the target datastore; only "running" is supported.
    // Default is "running".
    string Target = 5;

    // Specifies the default operation on the given object while traversing
    // the configuration tree.
    // The following operations are possible:
```

```
// merge: merges the configuration data with the target datastore;
//         this is the default.
// replace: replaces the configuration data with the target datastore.
// none: target datastore is unaffected during the traversal until
//        the specified object is reached.
string DefOp = 6;

// Specifies the action to be performed in the event of an error during
// configuration. Possible values are:
// stop
// roll-back
// continue
// Default is "roll-back".
string ErrorOp = 7;
}

message EditConfigReply
{
    // The request ID specified in the request.
    int64 ReqID = 1;

    // If EditConfig is successful, YangData contains a JSON-encoded "ok" response.
    string YangData = 2;

    // JSON-encoded error information when request fails
    string Errors = 3;
}

message DeleteConfigArgs
{
    // A unique session ID acquired from a call to StartSession().
    // For stateless operation, this value should be set to 0.
    int64 SessionID = 1;

    // (Optional) Specifies the request ID. Default value is 0.
    int64 ReqID = 2;

    // (Optional) Specifies the target datastore; only "running" is supported.
    // Default is "running".
    string Target = 3;
}

message DeleteConfigReply
{
    // The request ID specified in the request.
    int64 ReqID = 1;

    // If DeleteConfig is successful, YangData contains a JSON-encoded "ok" response.
    string YangData = 2;

    // JSON-encoded error information when request fails
    string Errors = 3;
}

message CopyConfigArgs
{
    // A unique session ID acquired from a call to StartSession().
    // For stateless operation, this value should be set to 0.
    int64 SessionID = 1;

    // (Optional) Specifies the request ID. Default value is 0.
    int64 ReqID = 2;

    // (Optional) Specifies the source datastore; only "running" is supported.
```

```
// Default is "running".
string Source = 3;

// (Optional) Specifies the target datastore; only "running" is supported.
// Default is "running".
string Target = 4;
}

message CopyConfigReply
{
    // The request ID specified in the request.
    int64 ReqID = 1;

    // If CopyConfig is successful, YangData contains a JSON-encoded "ok" response.
    string YangData = 2;

    // JSON-encoded error information when request fails
    string Errors = 3;
}

message LockArgs
{
    // A unique session ID acquired from a call to StartSession().
    int64 SessionID = 1;

    // (Optional) Specifies the request ID. Default value is 0.
    int64 ReqID=2;

    // (Optional) Specifies the target datastore; only "running" is supported.
    // Default is "running".
    string Target = 3;
}

message LockReply
{
    // The request ID specified in the request.
    int64 ReqID = 1;

    // If Lock is successful, YangData contains a JSON-encoded "ok" response.
    string YangData = 2;

    // JSON-encoded error information when request fails
    string Errors = 3;
}

message UnLockArgs
{
    // A unique session ID acquired from a call to StartSession().
    int64 SessionID = 1;

    // (Optional) Specifies the request ID. Default value is 0.
    int64 ReqID = 2;

    // (Optional) Specifies the target datastore; only "running" is supported.
    // Default is "running".
    string Target = 3;
}

message UnLockReply
{
    // The request ID specified in the request.
    int64 ReqID = 1;

    // If UnLock is successful, YangData contains a JSON-encoded "ok" response.
```

```
    string YangData = 2;

    // JSON-encoded error information when request fails
    string Errors = 3;
}

message SessionArgs
{
    // (Optional) Specifies the request ID. Default value is 0.
    int64 ReqID = 1;
}

message SessionReply
{
    // The request ID specified in the request.
    int64 ReqID = 1;
    int64 SessionID = 2;

    // JSON-encoded error information when request fails
    string Errors = 3;
}

message CloseSessionArgs
{
    // (Optional) Specifies the request ID. Default value is 0.
    int64 ReqID = 1;

    // A unique session ID acquired from a call to StartSession().
    int64 SessionID = 2;
}

message CloseSessionReply
{
    // The request ID specified in the request.
    int64 ReqID = 1;

    // If CloseSession is successful, YangData contains a JSON-encoded "ok" response.
    string YangData = 2;

    // JSON-encoded error information when request fails
    string Errors = 3;
}

message KillArgs
{
    // A unique session ID acquired from a call to StartSession().
    int64 SessionID = 1;

    int64 SessionIDToKill = 2;

    // (Optional) Specifies the request ID. Default value is 0.
    int64 ReqID = 3;
}

message KillReply
{
    // The request ID specified in the request.
    int64 ReqID = 1;

    // If Kill is successful, YangData contains a JSON-encoded "ok" response.
    string YangData = 2;

    // JSON-encoded error information when request fails
    string Errors = 3;
}
```

```
}

message ValidateArgs
{
    // A unique session ID acquired from a call to StartSession().
    int64 SessionID = 1;

    // (Optional) Specifies the request ID. Default value is 0.
    int64 ReqID = 2;
}

message ValidateReply
{
    // The request ID specified in the request.
    int64 ReqID = 1;

    // If Validate is successful, YangData contains a JSON-encoded "ok" response.
    string YangData = 2;

    // JSON-encoded error information when request fails
    string Errors = 3;
}

message CommitArgs
{
    // A unique session ID acquired from a call to StartSession().
    int64 SessionID = 1;

    // (Optional) Specifies the request ID. Default value is 0.
    int64 ReqID = 2;
}

message CommitReply
{
    // (Optional) Specifies the request ID. Default value is 0.
    int64 ReqID = 1;

    // If Commit is successful, YangData contains a JSON-encoded "ok" response.
    string YangData = 2;

    // JSON-encoded error information when request fails
    string Errors = 3;
}

message AbortArgs
{
    // A unique session ID acquired from a call to StartSession().
    int64 SessionID = 1;

    // (Optional) Specifies the request ID. Default value is 0.
    int64 ReqID = 2;
}

message AbortReply
{
    // (Optional) Specifies the request ID. Default value is 0.
    int64 ReqID = 1;

    // If Abort is successful, YangData contains a JSON-encoded "ok" response.
    string YangData = 2;

    // JSON-encoded error information when request fails
    string Errors = 3;
}
```

```
}
```



# CHAPTER 26

## Dynamic Logger

- [Prerequisites, on page 213](#)
- [Reference, on page 213](#)

### Prerequisites

Before using dynamic logging, confirm that the following are on your switch:

- The `libmtxlogmgr*.so` library is installed `/opt/mtx/lib/`. The `libmtxlogmgr*.so` library is part of the `mtx_infra` RPM.
- The `mtx.conf` file that is located in `/etc/` contains:

```
[mtxlogger]
config=/opt/mtx/conf/mtxlogger.cfg
```
- The `mtxlogger.cfg` file is in `/opt/mtx/conf/`.

### Reference

The configuration file has the following structure:

```
<config name="nxos-device-mgmt">
  <container name="mgmtConf">
    <container name="logging">
      <leaf name="enabled" type="boolean" default="false"></leaf>
      <leaf name="allActive" type="boolean" default="false"></leaf>
      <container name="format">
        <leaf name="content" type="string" default="$DATETIME$ $COMPONENTID$ $TYPE$:
$MSG$"></leaf>
        <container name="componentID">
          <leaf name="enabled" type="boolean" default="true"></leaf>
        </container>
        <container name="dateTime">
          <leaf name="enabled" type="boolean" default="true"></leaf>
          <leaf name="format" type="string" default="%y%m%d.%H%M%S"></leaf>
        </container>
        <container name="fcn">
          <leaf name="enabled" type="boolean" default="true"></leaf>
          <leaf name="format" type="string"
default="$CLASS$::$FCNNAME$ ($ARGS$) @$LINE$"></leaf>
        </container>
      </container>
    </container>
  </container>
</config>
```

```

</container>
<container name="dest">
  <container name="console">
    <leaf name="enabled" type="boolean" default="false"></leaf>
  </container>
  <container name="file">
    <leaf name="enabled" type="boolean" default="false"></leaf>
    <leaf name="name" type="string" default="mtx-internal.log"></leaf>
    <leaf name="location" type="string" default="./mtxlogs"></leaf>
  </container>
<leaf name="mbytes-rollover" type="uint32" default="10"></leaf>
<leaf name="hours-rollover" type="uint32" default="24"></leaf>
<leaf name="startup-rollover" type="boolean" default="false"></leaf>
  <leaf name="max-rollover-files" type="uint32" default="10"></leaf>
</container>
</container>
<list name="logitems" key="id">
  <listitem>
    <leaf name="id" type="string"></leaf>
  </listitem>
<leaf name="active" type="boolean" default="true"></leaf>
</list>
</container>
</container>
</config>

```

The `<list>` tag defines the log filters by `<componentID>`.

The following table describes some of the containers and their leaves.

**Table 14: Container and Leaf Descriptions**

Container	Container Description	Contained Containers	Contained Leaf and Description
logging	Contains all logging data types	format dest file <b>Note</b> Also contains list tag "logitems"	enabled: Boolean that determines whether logging is on or off. Default off. allActive: Boolean that activates all defined logging items for logging. Default off



Container	Container Description	Contained Containers	Contained Leaf and Description
format	Contains the log message format information	componentID dateTime type fcn	content: String listing data types included in log messages. Includes: <ul style="list-style-type: none"> <li>• \$DATETIMES\$: Include date or time in log message</li> <li>• \$COMPONENTID\$: Include component name in log message.</li> <li>• \$TYPES\$: Includes message type ("", INFO, WARNING, ERROR)</li> <li>• \$SRCFILES\$: Includes name of source file.</li> <li>• \$SRCLINES\$: Include line number of source file</li> <li>• \$FCNINFOS\$: Include class::function name from the source file.</li> <li>• \$MSG\$: Include actual log message text.</li> </ul>
componentID	Name of logged component.	NA	enabled: Boolean that determines if the log message includes the component ID. Default to "true." Value of "false" returns a "" string in log message.
dateTime	Date or time of log message	NA	enabled: Boolean whether to include date or time information in log message. Default is enabled.  format: String of values to include in log message. Format of %y%m%d.%H%M%S.

Container	Container Description	Contained Containers	Contained Leaf and Description
dest	Holds destination logger's configuration settings.	console: Destination console. Only one allowed. file: destination file. Multiple allowed.	NA
console	Destination console	NA	enabled: Boolean that determines whether the console is enabled for logging. Default of "false."

Container	Container Description	Contained Containers	Contained Leaf and Description
file	Determines the settings of the destination file.	NA	<p>enabled: Boolean that determines whether the destination is enabled. Default is "false."</p> <p>name: String of the destination log file. Default of "mtx-internal.log"</p> <p>location: String of destination file path. Default at "./mtxlogs."</p> <p>mbytes-rollover: uint32 that determines the length of the log file before the system overwrites the oldest data. Default is 10 Mbytes.</p> <p>hours-rollover: uint32 that determines the length of the log file in terms of hours. Default is 24 hours.</p> <p>startup-rollover: Boolean that determines if the log file is rolled over upon agent start or restart. Default value of "false."</p> <p>max-rollover-files: uint32 that determines the maximum number of rollover files; deletes the oldest file when the max-rollover-files value exceeded. Default value of 10.</p>

### Example

The following is the configuration file with the default installed configuration.

```
<config name="nxos-device-mgmt">
  <container name="mgmtConf">
    <container name="logging">
      <leaf name="enabled" type="boolean" default="false">>true</leaf>
      <leaf name="allActive" type="boolean" default="false">>false</leaf>
    <container name="format">
      <leaf name="content" type="string" default="$DATETIME$ $COMPONENTID$ $TYPE$:
$MSG$">$DATETIME$ $COMPONENTID$ $TYPE$ $SRCFILE$ @ $SRCLINE$ $FCNINFO$: $MSG$</leaf>
```

```

<container name="componentID">
  <leaf name="enabled" type="boolean" default="true"></leaf>
</container>
<container name="dateTime">
  <leaf name="enabled" type="boolean" default="true"></leaf>
  <leaf name="format" type="string" default="%Y%m%d.%H%M%S"></leaf>
</container>
<container name="fcn">
  <leaf name="enabled" type="boolean" default="true"></leaf>
  <leaf name="format" type="string"
default="$CLASS::$FCNNAME$($ARGSS)@$LINE$"></leaf>
</container>
</container>
<container name="dest">
  <container name="console">
    <leaf name="enabled" type="boolean" default="false">true</leaf>
  </container>
  <container name="file">
    <leaf name="enabled" type="boolean" default="false">true</leaf>
    <leaf name="name" type="string" default="mtx-internal.log"></leaf>
    <leaf name="location" type="string" default="./mtxlogs">/volatile</leaf>
  </container>
  <leaf name="mbytes-rollover" type="uint32" default="10">50</leaf>
  <leaf name="hours-rollover" type="uint32" default="24">24</leaf>
  <leaf name="startup-rollover" type="boolean" default="false">true</leaf>
  <leaf name="max-rollover-files" type="uint32" default="10">10</leaf>
</container>
</container>
<list name="logitems" key="id">
  <listitem>
    <leaf name="id" type="string">*</leaf>
  </listitem>
  <leaf name="active" type="boolean" default="false">false</leaf>
  </listitem>
  <listitem>
    <leaf name="id" type="string">SYSTEM</leaf>
  </listitem>
  <leaf name="active" type="boolean" default="true">true</leaf>
  </listitem>
  <listitem>
    <leaf name="id" type="string">LIBUTILS</leaf>
  </listitem>
  <leaf name="active" type="boolean" default="true">true</leaf>
  </listitem>
  <listitem>
    <leaf name="id" type="string">MTX-API</leaf>
  </listitem>
  <leaf name="active" type="boolean" default="true">true</leaf>
  </listitem>
  <listitem>
    <leaf name="id" type="string">Model-*</leaf>
  </listitem>
  <leaf name="active" type="boolean" default="true">true</leaf>
  </listitem>
  <listitem>
    <leaf name="id" type="string">Model-Cisco-NX-OS-device</leaf>
  </listitem>
  <leaf name="active" type="boolean" default="true">false</leaf>
  </listitem>
  <listitem>
    <leaf name="id" type="string">Model-openconfig-bgp</leaf>
  </listitem>
  <leaf name="active" type="boolean" default="true">false</leaf>
  </listitem>
  <listitem>
    <leaf name="id" type="string">INST-MTX-API</leaf>
  </listitem>
  <leaf name="active" type="boolean" default="true">false</leaf>
  </listitem>
  <listitem>
    <leaf name="id" type="string">INST-ADAPTER-NC</leaf>
  </listitem>
  <leaf name="active" type="boolean" default="true">false</leaf>
  </listitem>
</list>

```

```
    <listitem>
      <leaf name="id" type="string">INST-ADAPTER-RC</leaf>
    <leaf name="active" type="boolean" default="true">>false</leaf>
    </listitem>
    <listitem>
      <leaf name="id" type="string">INST-ADAPTER-GRPC</leaf>
    <leaf name="active" type="boolean" default="true">>false</leaf>
    </listitem>
  </list>
</container>
</container>
</config>
```





## CHAPTER 27

# Model-Driven Telemetry

- [About Telemetry, on page 221](#)
- [Licensing Requirements for Telemetry, on page 223](#)
- [Guidelines and Restrictions for Telemetry, on page 223](#)
- [Configuring Telemetry Using the CLI, on page 227](#)
- [Configuring Telemetry Using the NX-API, on page 245](#)
- [Additional References, on page 258](#)

## About Telemetry

Collecting data for analyzing and troubleshooting has always been an important aspect in monitoring the health of a network.

Cisco NX-OS provides several mechanisms such as SNMP, CLI, and Syslog to collect data from a network. These mechanisms have limitations that restrict automation and scale. One limitation is the use of the pull model, where the initial request for data from network elements originates from the client. The pull model does not scale when there is more than one network management station (NMS) in the network. With this model, the server sends data only when clients request it. To initiate such requests, continual manual intervention is required. This continual manual intervention makes the pull model inefficient.

A push model continuously streams data out of the network and notifies the client. Telemetry enables the push model, which provides near-real-time access to monitoring data.

## Telemetry Components and Process

Telemetry consists of four key elements:

- **Data Collection** — Telemetry data is collected from the Data Management Engine (DME) database in branches of the object model specified using distinguished name (DN) paths. The data can be retrieved periodically (frequency-based) or only when a change occurs in any object on a specified path (event-based). You can use the NX-API to collect frequency-based data.
- **Data Encoding** — The telemetry encoder encapsulates the collected data into the desired format for transporting.

NX-OS encodes telemetry data in the Google Protocol Buffers (GPB) and JSON format.

- **Data Transport** — NX-OS transports telemetry data using HTTP for JSON encoding and the Google remote procedure call (gRPC) protocol for GPB encoding. The gRPC receiver supports message sizes greater than 4 MB. (Telemetry data using HTTPS is also supported if a certificate is configured.)

Starting with Cisco NX-OS Release 7.0(3)I7(1), UDP and secure UDP (DTLS) are supported as telemetry transport protocols. You can add destinations that receive UDP. The encoding for UDP and secure UDP can be GPB or JSON.

Use the following command to configure the UDP transport to stream data using a datagram socket either in JSON or GPB:

```
destination-group num
  ip address xxx.xxx.xxx.xxx port xxxx protocol UDP encoding {JSON | GPB }
```

Example for an IPv4 destination:

```
destination-group 100
  ip address 171.70.55.69 port 50001 protocol UDP encoding GPB
```

The UDP telemetry is with the following header:

```
typedef enum tm_encode_ {
    TM_ENCODE_DUMMY,
    TM_ENCODE_GPB,
    TM_ENCODE_JSON,
    TM_ENCODE_XML,
    TM_ENCODE_MAX,
} tm_encode_type_t;

typedef struct tm_pak_hdr_ {
    uint8_t version; /* 1 */
    uint8_t encoding;
    uint16_t msg_size;
    uint8_t secure;
    uint8_t padding;
} __attribute__((packed, aligned(1))) tm_pak_hdr_t;
```

Use the first 6 bytes in the payload to process telemetry data using UDP, using one of the following methods:

- Read the information in the header to determine which decoder to use to decode the data, JSON or GPB, if the receiver is meant to receive different types of data from multiple endpoints.
- Remove the header if you are expecting one decoder (JSON or GPB) but not the other.




---

**Note** Depending on the receiving operation system and the network load, using the UDP protocol may result in packet drops.

---

- **Telemetry Receiver** — A telemetry receiver is a remote management system or application that stores the telemetry data.

The GPB encoder stores data in a generic key-value format. The encoder requires metadata in the form of a compiled `.proto` file to translate the data into GPB format.



In order to receive and decode the data stream correctly, the receiver requires the `.proto` file that describes the encoding and the transport services. The encoding decodes the binary stream into a key value string pair.

A telemetry `.proto` file that describes the GPB encoding and gRPC transport is available on Cisco's GitLab: <https://github.com/CiscoDevNet/nx-telemetry-proto>

## High Availability of the Telemetry Process

High availability of the telemetry process is supported with the following behaviors:

- **System Reload** — During a system reload, any telemetry configuration and streaming services are restored.
- **Supervisor Failover** — Although telemetry is not on hot standby, telemetry configuration and streaming services are restored when the new active supervisor is running.
- **Process Restart** — If the telemetry process freezes or restarts for any reason, configuration and streaming services are restored when telemetry is restarted.

## Licensing Requirements for Telemetry

Product	License Requirement
Cisco NX-OS	Telemetry requires no license. Any feature not included in a license package is bundled with the Cisco NX-OS image and is provided at no extra charge to you. For a complete explanation of the Cisco NX-OS licensing scheme, see the <i>Cisco NX-OS Licensing Guide</i> .

## Guidelines and Restrictions for Telemetry

Telemetry has the following configuration guidelines and limitations:

- Telemetry is supported in Cisco NX-OS releases starting from 7.0(3)I5(1) for releases that support the data management engine (DME) Native Model.
- Release 7.0(3)I6(1) supports DME data collection, NX-API data sources, Google protocol buffer (GPB) encoding over Google Remote Procedure Call (gRPC) transport, and JSON encoding over HTTP.
- The smallest sending interval (cadence) supported is five seconds for a depth of 0. The minimum cadence values for depth values greater than 0 depends on the size of the data being streamed out. Configuring cadences below the minimum value may result in undesirable system behavior.
- Up to five remote management receivers (destinations) are supported. Configuring more than five remote receivers may result in undesirable system behavior.
- In the event that a telemetry receiver goes down, other receivers will see data flow interrupted. The failed receiver must be restarted. Then start a new connection with the switch by unconfiguring then reconfiguring the failed receiver's IP address under the destination group.
- Telemetry can consume up to 20% of the CPU resource.

- To configure SSL certificate based authentication and the encryption of streamed data, you can provide a self signed SSL certificate with `certificate ssl cert path hostname "CN"` command. (NX-OS 7.0(3)I7(1) and later).
- QoS Explicit Congestion Notification (ECN) statistics are supported only on Cisco Nexus 9364C, 9336C-FX, and 93240YC-FX switches.

### Configuration Commands After Downgrading to an Older Release

After a downgrade to an older release, some configuration commands or command options might fail because the older release may not support them. As a best practice when downgrading to an older release, unconfigure and reconfigure the telemetry feature after the new image comes up to avoid the failure of unsupported commands or command options.

The following example shows this procedure:

- Copy the telemetry configuration to a file:

```
switch# show running-config | section telemetry
feature telemetry
telemetry
  destination-group 100
    ip address 1.2.3.4 port 50004 protocol gRPC encoding GPB
  sensor-group 100
    path sys/bgp/inst/dom-default depth 0
  subscription 600
    dst-grp 100
    snsr-grp 100 sample-interval 7000
switch# show running-config | section telemetry > telemetry_running_config
switch# show file bootflash:telemetry_running_config
feature telemetry
telemetry
  destination-group 100
    ip address 1.2.3.4 port 50004 protocol gRPC encoding GPB
  sensor-group 100
    path sys/bgp/inst/dom-default depth 0
  subscription 600
    dst-grp 100
    snsr-grp 100 sample-interval 7000
switch#
```

- Execute the downgrade operation. When the image comes up and the switch is ready, copy the telemetry configurations back to the switch:

```
switch# copy telemetry_running_config running-config echo-commands
switch# config terminal
switch(config)# feature telemetry
switch(config)# telemetry
switch(config-telemetry)# destination-group 100
switch(conf-tm-dest)# ip address 1.2.3.4 port 50004 protocol gRPC encoding GPB
switch(conf-tm-dest)# sensor-group 100
switch(conf-tm-sensor)# path sys/bgp/inst/dom-default depth 0
switch(conf-tm-sensor)# subscription 600
switch(conf-tm-sub)# dst-grp 100
switch(conf-tm-sub)# snsr-grp 100 sample-interval 7000
switch(conf-tm-sub)# end
Copy complete, now saving to disk (please wait)...
Copy complete.
switch#
```

### gRPC Error Behavior

The switch client will disable the connection to the gRPC receiver if the gRPC receiver sends 20 errors. You will then need to unconfigure then reconfigure the receiver's IP address under the destination group to enable the gRPC receiver. Errors include:

- The gRPC client sends the wrong certificate for secure connections,
- The gRPC receiver takes too long to handle client messages and incurs a timeout. Avoid timeouts by processing messages using a separate message processing thread.

### Telemetry Compression for gRPC Transport

Starting with Cisco NX-OS 7.0(3)I7(1), telemetry compression support is available for gRPC transport. You can use the **use-compression gzip** command to enable compression. (Disable compression with the **no use-compression gzip** command.)

The following example enables compression:

```
switch(config)# telemetry
switch(config-telemetry)# destination-profile
switch(config-tm-dest-profile)# use-compression gzip
```

The following example shows compression is enabled:

```
switch(conf-tm-dest)# show telemetry transport 0 stats

Session Id:                0
Connection Stats
  Connection Count         0
  Last Connected:         Never
  Disconnect Count        0
  Last Disconnected:     Never
Transmission Stats
  Compression:            gzip

  Transmit Count:        0
  Last TX time:         None
  Min Tx Time:          0          ms
  Max Tx Time:          0          ms
  Avg Tx Time:          0          ms
  Cur Tx Time:          0          ms
```

```
switch2(config-if)# show telemetry transport 0 stats

Session Id: 0
Connection Stats
Connection Count 0
Last Connected: Never
Disconnect Count 0
Last Disconnected: Never
Transmission Stats
Compression: disabled
Source Interface: loopback1(1.1.3.4)
Transmit Count: 0
Last TX time: None
Min Tx Time: 0 ms
Max Tx Time: 0 ms
Avg Tx Time: 0 ms
```

```
Cur Tx Time: 0 ms
switch2(config-if)#
```

The following is an example of use-compression as a POST payload:

```
{
  "telemetryDestProfile": {
    "attributes": {
      "adminSt": "enabled"
    },
    "children": [
      {
        "telemetryDestOptCompression": {
          "attributes": {
            "name": "gzip"
          }
        }
      }
    ]
  }
}
```

### NX-API Sensor Path Limitations

NX-API can collect and stream switch information not yet in the DME using **show** commands. However, using the NX-API instead of streaming data from the DME has inherent scale limitations as outlined:

- The switch backend dynamically processes NX-API calls such as **show** commands,
- NX-API spawns several processes that can consume up to a maximum of 20% of the CPU.
- NX-API data translates from the CLI to XML to JSON.

The following is a suggested user flow to help limit excessive NX-API sensor path bandwidth consumption:

1. Check whether the **show** command has NX-API support. You can confirm whether NX-API supports the command from the VSH with the pipe option: `show <command> | json` OR `show <command> | json pretty`.




---

**Note** Avoid commands that take the switch more than 30 seconds to return JSON output.

---

2. Refine the **show** command to include any filters or options.
  - Avoid enumerating the same command for individual outputs; i.e., `show vlan id 100`, `show vlan id 101`, etc.. Instead, use the CLI range options; i.e., `show vlan id 100-110,204`, whenever possible to improve performance.

If only the summary/counter is needed, then avoid dumping a whole show command output to limit the bandwidth and data storage required for data collection.
3. Configure telemetry with sensor groups that use NX-API as their data sources. Add the **show** commands as sensor paths
4. Configure telemetry with a cadence of 5 times the processing time of the respective **show** command to limit CPI usage.
5. Receive and process the streamed NX-API output as part of the existing DME collection.

### Telemetry VRF Support

Starting with Cisco NX-OS 7.0(3)I7(1), telemetry VRF support allows you to specify a transport VRF. This means that the telemetry data stream can egress via front-panel ports and avoid possible competition between SSH/NGINX control sessions.

You can use the **use-vrf** *vrf-name* command to specify the transport VRF.

The following example specifies the transport VRF:

```
switch(config)# telemetry
switch(config-telemetry)# destination-profile
switch(config-tm-dest-profile)# use-vrf test_vrf
```

The following is an example of use-vrf as a POST payload:

```
{
  "telemetryDestProfile": {
    "attributes": {
      "adminSt": "enabled"
    },
    "children": [
      {
        "telemetryDestOptVrf": {
          "attributes": {
            "name": "default"
          }
        }
      }
    ]
  }
}
```

## Configuring Telemetry Using the CLI

### Configuring Telemetry Using the NX-OS CLI

The following steps enable streaming telemetry and configuring the source and destination of the data stream. These steps also include optional steps to enable and configure SSL/TLS certificates and GPB encoding.

#### Before you begin

Your switch must be running Cisco NX-OS Release 7.3(0)I5(1) or a later release.

#### Procedure

	Command or Action	Purpose
<b>Step 1</b>	(Optional) <b>opnssl</b> <i>argument</i>  <b>Example:</b> Generate an SSL/TLS certificate using a specific argument, such as the following:	Create an SSL or TLS certificate on the server that receives the data, where the <i>private.key</i> file is the private key and the <i>public.crt</i> is the public key.

	Command or Action	Purpose
	<ul style="list-style-type: none"> <li>To generate a private RSA key: <b>openssl genrsa -cipher -out filename.key cipher-bit-length</b></li> </ul> <p>For example:</p> <pre>switch# openssl genrsa -des3 -out server.key 2048</pre> <ul style="list-style-type: none"> <li>To write the RSA key: <b>openssl rsa -in filename.key -out filename.key</b></li> </ul> <p>For example:</p> <pre>switch# openssl rsa -in server.key -out server.key</pre> <ul style="list-style-type: none"> <li>To create a certificate that contains the public or private key: <b>openssl req -encoding-standard -new -new filename.key -out filename.csr -subj '/CN=localhost'</b></li> </ul> <p>For example:</p> <pre>switch# openssl req -sha256 -new -key server.key -out server.csr -subj '/CN=localhost'</pre> <ul style="list-style-type: none"> <li>To create a public key: <b>openssl x509 -req -encoding-standard -days timeframe -in filename.csr -signkey filename.key -out filename.csr</b></li> </ul> <p>For example:</p> <pre>switch# openssl x509 -req -sha256 -days 365 -in server.csr -signkey server.key -out server.crt</pre>	
<b>Step 2</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enter the global configuration mode.
<b>Step 3</b>	<b>feature telemetry</b>	Enable the streaming telemetry feature.
<b>Step 4</b>	<b>feature nxapi</b>	Enable NX-API.
<b>Step 5</b>	<b>nxapi use-vrf management</b> <b>Example:</b>	Enable the VRF management to be used for NX-API communication.

	Command or Action	Purpose
	<pre>switch(config)# switch(config)# nxapi use-vrf management switch(config)#</pre>	<p><b>Note</b> The following warnings are seen previous to 10.2(3)F release as ACLs are able to filter only netstack packets:</p> <p>"Warning: Management ACLs configured will not be effective for HTTP services. Please use iptables to restrict access."</p> <p><b>Note</b> Beginning with 10.2(3)F, ACLs are able to filter both netstack and kstack packets which are coming to the management vrf. The following warnings are displayed:</p> <p>"Warning: ACLs configured on non-management VRF will not be effective for HTTP services on that VRF."</p>
<b>Step 6</b>	<p><b>telemetry</b></p> <p><b>Example:</b></p> <pre>switch(config)# telemetry switch(config-telemetry)#</pre>	Enter configuration mode for streaming telemetry.
<b>Step 7</b>	<p>(Optional) <b>certificate</b> <i>certificate_path</i> <i>host_URL</i></p> <p><b>Example:</b></p> <pre>switch(config-telemetry)# certificate /bootflash/server.key localhost</pre>	<p>Use an existing SSL/TLS certificate.</p> <p>For EOR devices, the certificate also has to be copied to the standby SUP.</p>
<b>Step 8</b>	<p>(Optional) Specify a transport VRF or enable telemetry compression for gRPC transport.</p> <p><b>Example:</b></p> <pre>switch(config-telemetry)# destination-profile switch(conf-tm-dest-profile)# use-vrf default switch(conf-tm-dest-profile)# use-compression gzip</pre>	<ul style="list-style-type: none"> <li>• Enter the <b>destination-profile</b> command to specify the default destination profile.</li> <li>• Enter any of the following commands: <ul style="list-style-type: none"> <li>• <b>use-vrf</b> <i>vrf</i> to specify the destination VRF.</li> <li>• <b>use-compression gzip</b> to specify the destination compression method.</li> </ul> </li> </ul>

	Command or Action	Purpose
		<p><b>Note</b> After configuring the <b>use-vrf</b> command, you must configure a new destination IP address within the new VRF. However, you may re-use the same destination IP address by unconfiguring and reconfiguring the destination. This action ensures that the telemetry data streams to the same destination IP address in the new VRF.</p>
<b>Step 9</b>	<p><b>sensor-group</b> <i>sgrp_id</i></p> <p><b>Example:</b></p> <pre>switch(config-telemetry)# sensor-group 100 switch(conf-tm-sensor)#</pre>	<p>Create a sensor group with ID <i>sgrp_id</i> and enter sensor group configuration mode.</p> <p>Currently only numeric ID values are supported. The sensor group defines nodes that will be monitored for telemetry reporting.</p>
<b>Step 10</b>	<p>(Optional) <b>data-source</b> <i>data-source-type</i></p> <p><b>Example:</b></p> <pre>switch(config-telemetry)# data-source NX-API</pre>	<p>Select a data source. Select from either DME or NX-API as the data source.</p> <p><b>Note</b> DME is the default data source.</p>
<b>Step 11</b>	<p><b>path</b> <i>sensor_path</i> <b>depth</b> <b>unbounded</b> [<b>filter-condition</b> <i>filter</i>] [<b>alias</b> <i>path_alias</i>]</p> <p><b>Example:</b></p> <ul style="list-style-type: none"> <li>The following command is applicable for DME, not for NX-API:</li> </ul> <pre>switch(conf-tm-sensor)# path sys/bd/bd-[vlan-100] depth 0 filter-condition eq(12BD.operSt, "down")</pre> <p>Use the following syntax for state-based filtering to trigger only when <b>operSt</b> changes from <b>up</b> to <b>down</b>, with no notifications of when the MO changes.</p> <pre>switch(conf-tm-sensor)# path sys/bd/bd-[vlan-100] depth 0 filter-condition and(updated(12BD.operSt),eq(12BD.operSt,"down"))</pre> <ul style="list-style-type: none"> <li>The following command is applicable for NX-API, not for DME:</li> </ul> <pre>switch(conf-tm-sensor)# path "show interface" depth 0</pre>	<p>Here unbounded means include child Managed Objects (MO) in the output. So, for POLL telemetry streams, all child MO for that path and EVENT retrieves the changes made in child MO.</p> <p><b>Note</b> This is applicable for data source DME paths only.</p> <p>Add a sensor path to the sensor group.</p> <ul style="list-style-type: none"> <li>The <b>depth</b> setting specifies the retrieval level for the sensor path. Depth settings of <b>0 - 32, unbounded</b> are supported.</li> </ul> <p><b>Note</b> <b>depth 0</b> is the default depth. NX-API-based sensor paths can only use <b>depth 0</b>.</p> <p>If a path is subscribed for the event collection, the depth only supports 0 and unbounded. Other values would be treated as 0.</p>



	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>The optional <b>filter-condition</b> parameter can be specified to create a specific filter for event-based subscriptions.</li> </ul> <p>For state-based filtering, the filter returns both when a state has changed and when an event has occurred during the specified state. That is, a filter condition for the DN <b>sys/bd/bd-[vlan]</b> of <b>eq(12Bd.operSt, "down")</b> triggers when the operSt changes, and when the DN's property changes while the operSt remains <b>down</b>, such as a <b>no shutdown</b> command is issued while the VLAN is operationally <b>down</b>.</p> <p><b>Note</b> query-condition parameter — For DME, based on the DN, the query-condition parameter can be specified to fetch MOTL and ephemeral data with the following syntax: query-condition "rsp-foreign-subtree=applied-config"; query-condition "rsp-foreign-subtree=ephemeral".</p>
<b>Step 12</b>	<b>destination-group</b> <i>dgrp_id</i> <b>Example:</b> <pre>switch(conf-tm-sensor) # destination-group 100 switch(conf-tm-dest) #</pre>	<p>Create a destination group and enter destination group configuration mode.</p> <p>Currently <i>dgrp_id</i> only supports numeric ID values.</p>
<b>Step 13</b>	(Optional) <b>ip address</b> <i>ip_address</i> <b>port</b> <i>port</i> <b>protocol</b> <i>procedural-protocol</i> <b>encoding</b> <i>encoding-protocol</i> <b>Example:</b> <pre>switch(conf-tm-sensor) # ip address 171.70.55.69 port 50001 protocol gRPC encoding GPB switch(conf-tm-sensor) # ip address 171.70.55.69 port 50007 protocol HTTP encoding JSON  switch(conf-tm-sensor) # ip address 171.70.55.69 port 50009 protocol UDP encoding JSON</pre>	<p>Specify an IPv4 IP address and port to receive encoded telemetry data.</p> <p><b>Note</b> gRPC is the default transport protocol. GPB is the default encoding.</p>
<b>Step 14</b>	<i>ip_version</i> <b>address</b> <i>ip_address</i> <b>port</b> <i>portnum</i> <b>Example:</b>	<p>Create a destination profile for the outgoing data.</p> <p>When the destination group is linked to a subscription, telemetry data is sent to the IP</p>

	Command or Action	Purpose
	<ul style="list-style-type: none"> <li>For IPv4:  <pre>switch(conf-tm-dest)# ip address 1.2.3.4 port 50003</pre> </li> </ul>	address and port that is specified by this profile.
<b>Step 15</b>	<b>subscription</b> <i>sub_id</i>  <b>Example:</b> <pre>switch(conf-tm-dest)# subscription 100 switch(conf-tm-sub)#</pre>	<p>Create a subscription node with ID and enter the subscription configuration mode.</p> <p>Currently <i>sub_id</i> only supports numeric ID values.</p> <p><b>Note</b> When subscribing to a DN, check whether the DN is supported by DME using REST to ensure that events will stream.</p>
<b>Step 16</b>	<b>snsr-grp</b> <i>sgrp_id</i> <b>sample-interval</b> <i>interval</i>  <b>Example:</b> <pre>switch(conf-tm-sub)# snsr-grp 100 sample-interval 15000</pre>	<p>Link the sensor group with ID <i>sgrp_id</i> to this subscription and set the data sampling interval in milliseconds.</p> <p>An interval value of 0 creates an event-based subscription, in which telemetry data is sent only upon changes under the specified MO. An interval value greater than 0 creates a frequency-based subscription, in which telemetry data is sent periodically at the specified interval. For example, an interval value of 15000 results in the sending of telemetry data every 15 seconds.</p>
<b>Step 17</b>	<b>dst-grp</b> <i>dgrp_id</i>  <b>Example:</b> <pre>switch(conf-tm-sub)# dst-grp 100</pre>	Link the destination group with ID <i>dgrp_id</i> to this subscription.

## Configuration Examples for Telemetry Using the CLI

The following steps describe how to configure a single telemetry DME stream with a ten second cadence with GPB encoding.

```
switch# configure terminal
switch(config)# feature telemetry
switch(config)# telemetry
switch(config-telemetry)# destination-group 1
switch(config-tm-dest)# ip address 171.70.59.62 port 50051 protocol gRPC encoding GPB
switch(config-tm-dest)# exit
switch(config-telemetry)# sensor group sgl
switch(config-tm-sensor)# data-source DME
switch(config-tm-dest)# path interface depth unbounded query-condition keep-data-type
switch(config-tm-dest)# subscription 1
switch(config-tm-dest)# dst-grp 1
switch(config-tm-dest)# snsr grp 1 sample interval 10000
```

This example creates a subscription that streams data for the `sys/bgp` root MO every 5 seconds to the destination IP 1.2.3.4 port 50003.

```
switch(config)# telemetry
switch(config-telemetry)# sensor-group 100
switch(conf-tm-sensor)# path sys/bgp depth 0
switch(conf-tm-sensor)# destination-group 100
switch(conf-tm-dest)# ip address 1.2.3.4 port 50003
switch(conf-tm-dest)# subscription 100
switch(conf-tm-sub)# snsr-grp 100 sample-interval 5000
switch(conf-tm-sub)# dst-grp 100
```

This example creates a subscription that streams data for `sys/intf` every 5 seconds to destination IP 1.2.3.4 port 50003, and encrypts the stream using GPB encoding verified using the `test.pem`.

```
switch(config)# telemetry
switch(config-telemetry)# certificate /bootflash/test.pem foo.test.google.fr
switch(conf-tm-telemetry)# destination-group 100
switch(conf-tm-dest)# ip address 1.2.3.4 port 50003 protocol gRPC encoding GPB
switch(config-dest)# sensor-group 100
switch(conf-tm-sensor)# path sys/bgp depth 0
switch(conf-tm-sensor)# subscription 100
switch(conf-tm-sub)# snsr-grp 100 sample-interval 5000
switch(conf-tm-sub)# dst-grp 100
```

This example creates a subscription that streams data for `sys/cdp` every 15 seconds to destination IP 1.2.3.4 port 50004.

```
switch(config)# telemetry
switch(config-telemetry)# sensor-group 100
switch(conf-tm-sensor)# path sys/cdp depth 0
switch(conf-tm-sensor)# destination-group 100
switch(conf-tm-dest)# ip address 1.2.3.4 port 50004
switch(conf-tm-dest)# subscription 100
switch(conf-tm-sub)# snsr-grp 100 sample-interval 15000
switch(conf-tm-sub)# dst-grp 100
```

This example creates a cadence-based collection of `show` command data every 750 seconds.

```
switch(config)# telemetry
switch(config-telemetry)# destination-group 1
switch(conf-tm-dest)# ip address 172.27.247.72 port 60001 protocol gRPC encoding GPB
switch(conf-tm-dest)# sensor-group 1
switch(conf-tm-sensor)# data-source NX-API
switch(conf-tm-sensor)# path "show system resources" depth 0
switch(conf-tm-sensor)# path "show version" depth 0
switch(conf-tm-sensor)# path "show environment power" depth 0
switch(conf-tm-sensor)# path "show environment fan" depth 0
switch(conf-tm-sensor)# path "show environment temperature" depth 0
switch(conf-tm-sensor)# path "show process cpu" depth 0
switch(conf-tm-sensor)# path "show nve peers" depth 0
switch(conf-tm-sensor)# path "show nve vni" depth 0
switch(conf-tm-sensor)# path "show nve vni 4002 counters" depth 0
switch(conf-tm-sensor)# path "show int nve 1 counters" depth 0
switch(conf-tm-sensor)# path "show policy-map vlan" depth 0
switch(conf-tm-sensor)# path "show ip access-list test" depth 0
switch(conf-tm-sensor)# path "show system internal access-list resource utilization" depth
0
switch(conf-tm-sensor)# subscription 1
```

```
switch(conf-tm-sub)# dst-grp 1
switch(conf-tm-dest)# snsr-grp 1 sample-interval 750000
```

This example creates an event-based subscription for `sys/fm`. Data is streamed to the destination only if there is a change under the `sys/fm` MO.

```
switch(config)# telemetry
switch(config-telemetry)# sensor-group 100
switch(conf-tm-sensor)# path sys/fm depth 0
switch(conf-tm-sensor)# destination-group 100
switch(conf-tm-dest)# ip address 1.2.3.4 port 50005
switch(conf-tm-dest)# subscription 100
switch(conf-tm-sub)# snsr-grp 100 sample-interval 0
switch(conf-tm-sub)# dst-grp 100
```

During operation, you can change a sensor group from frequency-based to event-based, and change event-based to frequency-based by changing the `sample-interval`. This example changes the sensor-group from the previous example to frequency-based. After the following commands, the telemetry application will begin streaming the `sys/fm` data to the destination every 7 seconds.

```
switch(config)# telemetry
switch(config-telemetry)# subscription 100
switch(conf-tm-sub)# snsr-grp 100 sample-interval 7000
```

Multiple sensor groups and destinations can be linked to a single subscription. The subscription in this example streams the data for Ethernet port 1/1 to four different destinations every 10 seconds.

```
switch(config)# telemetry
switch(config-telemetry)# sensor-group 100
switch(conf-tm-sensor)# path sys/intf/phys-[eth1/1] depth 0
switch(conf-tm-sensor)# destination-group 100
switch(conf-tm-dest)# ip address 1.2.3.4 port 50004
switch(conf-tm-dest)# ip address 1.2.3.4 port 50005
switch(conf-tm-sensor)# destination-group 200
switch(conf-tm-dest)# ip address 5.6.7.8 port 50001 protocol HTTP encoding JSON
switch(conf-tm-dest)# ip address 1.4.8.2 port 60003
switch(conf-tm-dest)# subscription 100
switch(conf-tm-sub)# snsr-grp 100 sample-interval 10000
switch(conf-tm-sub)# dst-grp 100
switch(conf-tm-sub)# dst-grp 200
```

A sensor group can contain multiple paths, a destination group can contain multiple destination profiles, and a subscription can be linked to multiple sensor groups and destination groups, as shown in this example.

```
switch(config)# telemetry
switch(config-telemetry)# sensor-group 100
switch(conf-tm-sensor)# path sys/intf/phys-[eth1/1] depth 0
switch(conf-tm-sensor)# path sys/epId-1 depth 0
switch(conf-tm-sensor)# path sys/bgp/inst/dom-default depth 0

switch(config-telemetry)# sensor-group 200
switch(conf-tm-sensor)# path sys/cdp depth 0
switch(conf-tm-sensor)# path sys/ipv4 depth 0

switch(config-telemetry)# sensor-group 300
switch(conf-tm-sensor)# path sys/fm depth 0
```

```

switch(conf-tm-sensor)# path sys/bgp depth 0

switch(conf-tm-sensor)# destination-group 100
switch(conf-tm-dest)# ip address 1.2.3.4 port 50004
switch(conf-tm-dest)# ip address 4.3.2.5 port 50005

switch(conf-tm-dest)# destination-group 200
switch(conf-tm-dest)# ip address 5.6.7.8 port 50001

switch(conf-tm-dest)# destination-group 300
switch(conf-tm-dest)# ip address 1.2.3.4 port 60003

switch(conf-tm-dest)# subscription 600
switch(conf-tm-sub)# snsr-grp 100 sample-interval 7000
switch(conf-tm-sub)# snsr-grp 200 sample-interval 20000
switch(conf-tm-sub)# dst-grp 100
switch(conf-tm-sub)# dst-grp 200

switch(conf-tm-dest)# subscription 900
switch(conf-tm-sub)# snsr-grp 200 sample-interval 7000
switch(conf-tm-sub)# snsr-grp 300 sample-interval 0
switch(conf-tm-sub)# dst-grp 100
switch(conf-tm-sub)# dst-grp 300

```

You can verify the telemetry configuration using the **show running-config telemetry** command, as shown in this example.

```

switch(config)# telemetry
switch(config-telemetry)# destination-group 100
switch(conf-tm-dest)# ip address 1.2.3.4 port 50003
switch(conf-tm-dest)# ip address 1.2.3.4 port 50004
switch(conf-tm-dest)# end
switch# show run telemetry

!Command: show running-config telemetry
!Time: Thu Oct 13 21:10:12 2016

version 7.0(3)I5(1)
feature telemetry

telemetry
destination-group 100
ip address 1.2.3.4 port 50003 protocol gRPC encoding GPB
ip address 1.2.3.4 port 50004 protocol gRPC encoding GPB

```

You can specify transport VRF and telemetry data compression for gRPC using the **use-vrf** and **use-compression gzip** commands, as shown in this example.

```

switch(config)# telemetry
switch(config-telemetry)# destination-profile
switch(conf-tm-dest-profile)# use-vrf default
switch(conf-tm-dest-profile)# use-compression gzip
switch(conf-tm-dest-profile)# sensor-group 1
switch(conf-tm-sensor)# path sys/bgp depth unbounded
switch(conf-tm-sensor)# destination-group 1
switch(conf-tm-dest)# ip address 1.2.3.4 port 50004
switch(conf-tm-dest)# subscription 1
switch(conf-tm-sub)# dst-grp 1
switch(conf-tm-sub)# snsr-grp 1 sample-interval 10000

```

## Displaying Telemetry Configuration and Statistics

Use the following NX-OS CLI **show** commands to display telemetry configuration, statistics, errors, and session information.

### show telemetry control database

This command displays the internal databases that reflect the configuration of telemetry.

```
switch# show telemetry control database ?
<CR>
>                                Redirect it to a file
>>                               Redirect it to a file in append mode
destination-groups              Show destination-groups
destinations                    Show destinations
sensor-groups                   Show sensor-groups
sensor-paths                    Show sensor-paths
subscriptions                   Show subscriptions
|                               Pipe command output to filter
```

```
switch# show telemetry control database

Subscription Database size = 1

-----
Subscription ID      Data Collector Type
-----
100                  DME NX-API

Sensor Group Database size = 1

-----
Sensor Group ID  Sensor Group type  Sampling interval(ms)  Linked subscriptions
-----
100              Timer              10000 (Running)        1

Sensor Path Database size = 1

-----
Subscribed Query Filter  Linked Groups  Sec Groups  Retrieve level  Sensor Path
-----
No                       1              0           Full            sys/fm

Destination group Database size = 2

-----
Destination Group ID  Refcount
-----
100                   1

Destination Database size = 2

-----
Dst IP Addr      Dst Port  Encoding  Transport  Count
-----
192.168.20.111  12345    JSON     HTTP      1
192.168.20.123 50001    GPB      gRPC      1
```

**show telemetry control stats**

This command displays the statistics about the internal databases about configuration of telemetry.

```
switch# show telemetry control stats
show telemetry control stats entered
```

```
-----
Error Description                                     Error Count
-----
Chunk allocation failures                             0
Sensor path Database chunk creation failures         0
Sensor Group Database chunk creation failures        0
Destination Database chunk creation failures         0
Destination Group Database chunk creation failures   0
Subscription Database chunk creation failures        0
Sensor path Database creation failures               0
Sensor Group Database creation failures              0
Destination Database creation failures               0
Destination Group Database creation failures         0
Subscription Database creation failures              0
Sensor path Database insert failures                 0
Sensor Group Database insert failures                0
Destination Database insert failures                 0
Destination Group Database insert failures           0
Subscription insert to Subscription Database failures 0
Sensor path Database delete failures                 0
Sensor Group Database delete failures                0
Destination Database delete failures                 0
Destination Group Database delete failures           0
Delete Subscription from Subscription Database failures 0
Sensor path delete in use                           0
Sensor Group delete in use                           0
Destination delete in use                            0
Destination Group delete in use                      0
Delete destination(in use) failure count              0
Failed to get encode callback                         0
Sensor path Sensor Group list creation failures      0
Sensor path prop list creation failures              0
Sensor path sec Sensor path list creation failures   0
Sensor Group Sensor path list creation failures      0
Sensor Group Sensor subs list creation failures      0
Destination Group subs list creation failures        0
Destination Group Destinations list creation failures 0
Subscription Sensor Group list creation failures     0
Subscription Destination Groups list creation failures 0
Sensor Group Sensor path list delete failures        0
Sensor Group Subscriptions list delete failures      0
Destination Group Subscriptions list delete failures 0
Destination Group Destinations list delete failures  0
Subscription Sensor Groups list delete failures     0
Subscription Destination Groups list delete failures 0
Destination Destination Groups list delete failures  0
Failed to delete Destination from Destination Group  0
Failed to delete Destination Group from Subscription 0
Failed to delete Sensor Group from Subscription      0
Failed to delete Sensor path from Sensor Group       0
Failed to get encode callback                         0
Failed to get transport callback                     0
switch# Destination Database size = 1
-----
```

```

Dst IP Addr      Dst Port  Encoding  Transport  Count
-----
192.168.20.123 50001    GPB      gRPC       1

```

### show telemetry data collector brief

This command displays the brief statistics about the data collection.

```
switch# show telemetry data collector brief
```

```

-----
Collector Type      Successful Collections  Failed Collections
-----
DME                  143                     0

```

### show telemetry data collector details

This command displays detailed statistics about the data collection which includes breakdown of all sensor paths.

```
switch# show telemetry data collector details
```

```

-----
Succ Collections    Failed Collections    Sensor Path
-----
150                 0                     sys/fm

```

### show telemetry event collector errors

This command displays the errors statistic about the event collection.

```
switch# show telemetry event collector errors
```

```

-----
Error Description                                     Error Count
-----
APIC-Cookie Generation Failures                      - 0
Authentication Failures                              - 0
Authentication Refresh Failures                      - 0
Authentication Refresh Timer Start Failures          - 0
Connection Timer Start Failures                      - 0
Connection Attempts                                  - 3
Dme Event Subscription Init Failures                 - 0
Event Data Enqueue Failures                          - 0
Event Subscription Failures                          - 0
Event Subscription Refresh Failures                  - 0
Pending Subscription List Create Failures             - 0
Subscription Hash Table Create Failures              - 0
Subscription Hash Table Destroy Failures             - 0
Subscription Hash Table Insert Failures              - 0
Subscription Hash Table Remove Failures              - 0
Subscription Refresh Timer Start Failures            - 0
Websocket Connect Failures                           - 0

```



**show telemetry event collector stats**

This command displays the statistics about the event collection which includes breakdown of all sensor paths.

```
switch# show telemetry event collector stats
```

```
-----
Collection Count  Latest Collection Time  Sensor Path
-----
```

**show telemetry control pipeline stats**

This command displays the statistics for the telemetry pipeline.

```
switch# show telemetry pipeline stats
```

```
Main Statistics:
```

```
  Timers:
```

```
    Errors:
```

```
      Start Fail      =      0
```

```
  Data Collector:
```

```
    Errors:
```

```
      Node Create Fail =      0
```

```
  Event Collector:
```

```
    Errors:
```

```
      Node Create Fail =      0  Node Add Fail      =      0
```

```
      Invalid Data    =      0
```

```
  Memory:
```

```
    Allowed Memory Limit = 1181116006 bytes
```

```
    Occupied Memory      = 93265920 bytes
```

```
Queue Statistics:
```

```
  Request Queue:
```

```
    High Priority Queue:
```

```
      Info:
```

```
        Actual Size    =    50  Current Size    =    0
```

```
        Max Size      =    0  Full Count     =    0
```

```
      Errors:
```

```
        Enqueue Error  =    0  Dequeue Error  =    0
```

```
    Low Priority Queue:
```

```
      Info:
```

```
        Actual Size    =    50  Current Size    =    0
```

```
        Max Size      =    0  Full Count     =    0
```

```
      Errors:
```

```
        Enqueue Error  =    0  Dequeue Error  =    0
```

```
  Data Queue:
```

```
    High Priority Queue:
```

```
      Info:
```

```
        Actual Size    =    50  Current Size    =    0
```

```
        Max Size      =    0  Full Count     =    0
```

```
      Errors:
```

```
        Enqueue Error  =    0  Dequeue Error  =    0
```

```
    Low Priority Queue:
```

```

Info:
  Actual Size      = 50   Current Size      = 0
  Max Size        = 0    Full Count       = 0

Errors:
  Enqueue Error   = 0    Dequeue Error    = 0

```

### show telemetry transport

This command displays all configured transport sessions.

```

switch# show telemetry transport

Session Id      IP Address      Port      Encoding  Transport  Status
-----
0               192.168.20.123 50001     GPB       gRPC       Connected

```

**Table 15: Syntax Description for show telemetry transport**

Syntax	Description
show	Shows running system information
telemetry	Shows telemetry information
transport	Shows telemetry transport information
<i>session_id</i>	(Optional) Session id
stats	(Optional) Shows all telemetry statistics information
errors	(Optional) Show all telemetry error information
readonly	(Optional)
TABLE_transport_info	(Optional) Transport information
<i>session_idx</i>	(Optional) Session Id
<i>ip_address</i>	(Optional) Transport IP address
<i>port</i>	(Optional) Transport port
<i>dest_info</i>	(Optional) Destination information
<i>encoding_type</i>	(Optional) Encoding type
<i>transport_type</i>	(Optional) Transport type
<i>transport_status</i>	(Optional) Transport status
<i>transport_security_cert_fname</i>	(Optional) Transport security file name
<i>transport_last_connected</i>	(Optional) Transport last connected

Syntax	Description
<i>transport_last_disconnected</i>	(Optional) Last time this destination configuration was removed
<i>transport_errors_count</i>	(Optional) Transport errors count
<i>transport_last_tx_error</i>	(Optional) Transport last tx error
<i>transport_statistics</i>	(Optional) Transport statistics
<i>t_session_id</i>	(Optional) Transport Session id
<i>connect_statistics</i>	(Optional) Connection statistics
<i>connect_count</i>	(Optional) Connection count
<i>last_connected</i>	(Optional) Last connected timestamp
<i>disconnect_count</i>	(Optional) Disconnect count
<i>last_disconnected</i>	(Optional) Last time this destination configuration was removed
<i>trans_statistics</i>	(Optional) Transport statistics
<i>compression</i>	(Optional) Compression status
<i>source_interface_name</i>	(Optional) Source interface name
<i>source_interface_ip</i>	(Optional) Source interface IP
<i>transmit_count</i>	(Optional) Transmission count
<i>last_tx_time</i>	(Optional) Last Transmission time
<i>min_tx_time</i>	(Optional) Minimum transmission time
<i>max_tx_time</i>	(Optional) Maximum transmission time
<i>avg_tx_time</i>	(Optional) Average transmission time
<i>cur_tx_time</i>	(Optional) Current transmission time
<i>transport_errors</i>	(Optional) Transport errors
<i>connect_errors</i>	(Optional) Connection errors
<i>connect_errors_count</i>	(Optional) Connection error count
<i>trans_errors</i>	(Optional) Transport errors
<i>trans_errors_count</i>	(Optional) Transport error count
<i>last_tx_error</i>	(Optional) Last transport error
<i>last_tx_return_code</i>	(Optional) Last transport return code

Syntax	Description
<code>transport_retry_stats</code>	(Optional) Retry Statistics
<code>ts_event_retry_bytes</code>	(Optional) Event Retry buffer size
<code>ts_timer_retry_bytes</code>	(Optional) Timer Retry buffer size
<code>ts_event_retry_size</code>	(Optional) Event Retry number of messages
<code>ts_timer_retry_size</code>	(Optional) Timer Retry number of messages
<code>ts_retries_sent</code>	(Optional) Number of retries sent
<code>ts_retries_dropped</code>	(Optional) Number of retries dropped
<code>event_retry_bytes</code>	(Optional) Event Retry buffer size
<code>timer_retry_bytes</code>	(Optional) Timer Retry buffer size
<code>retries_sent</code>	(Optional) Number of retries sent
<code>retries_dropped</code>	(Optional) Number of retries dropped
<code>retry_buffer_size</code>	(Optional) Retry buffer size

### show telemetry transport <session-id>

This command displays detailed session information for a specific transport session.

```
switch# show telemetry transport 0

Session Id:          0
IP Address:Port      192.168.20.123:50001
Transport:           gRPC
Status:              Disconnected
Last Connected:     Fri Sep 02 11:45:57.505 UTC
Last Disconnected:  Never
Tx Error Count:     224
Last Tx Error:      Fri Sep 02 12:23:49.555 UTC
```

```
switch# show telemetry transport 1

Session Id:          1
IP Address:Port      10.30.218.56:51235
Transport:           HTTP
Status:              Disconnected
Last Connected:     Never
Last Disconnected:  Never
Tx Error Count:     3
Last Tx Error:      Wed Apr 19 15:56:51.617 PDT
```

### show telemetry transport <session-id> stats

This command displays details of a specific transport session.

```
Session Id:          0
Transmission Stats
```

```

Compression:           disabled
Source Interface:      not set()
Transmit Count:        319297
Last TX time:          Fri Aug 02 03:51:15.287 UTC
Min Tx Time:           1 ms
Max Tx Time:           3117 ms
Avg Tx Time:           3 ms
Cur Tx Time:          1 ms

```

### show telemetry transport <session-id> errors

This command displays detailed error statistics for a specific transport session.

```

switch# show telemetry transport 0 errors
Session Id:           0
Connection Errors
Connection Error Count: 0
Transmission Errors
Tx Error Count:       30
Last Tx Error:        Thu Aug 01 04:39:47.083 UTC
Last Tx Return Code:  No error

```

## Displaying Telemetry Log and Trace Information

Use the following NX-OS CLI commands to display the log and trace information.

### show tech-support telemetry

This NX-OS CLI command collects the telemetry log contents from the tech-support log. In this example, the command output is redirected into a file in bootflash.

```
switch# show tech-support telemetry > bootflash:tmst.log
```

### tmtrace.bin

This BASH shell command collects telemetry traces and prints them out.

```

switch# configure terminal
switch(config)# feature bash
switch(config)# run bash
bash-4.2$ tmtrace.bin -d tm-errors
bash-4.2$ tmtrace.bin -d tm-logs
bash-4.2$ tmtrace.bin -d tm-events

```

For example:

```

bash-4.2$ tmtrace.bin -d tm-logs
[01/25/17 22:52:24.563 UTC 1 29130] [3944724224][tm_ec_dme_auth.c:59] TM_EC: Authentication
refresh url http://127.0.0.1/api/aaaRefresh.json
[01/25/17 22:52:24.565 UTC 2 29130] [3944724224][tm_ec_dme_rest_util.c:382] TM_EC: Performed
POST request on http://127.0.0.1/api/aaaRefresh.json
[01/25/17 22:52:24.566 UTC 3 29130] [3944724224][tm_mgd_timers.c:114] TM_MGD_TIMER: Starting
leaf timer for leaf:0x11e17ea4 time_in_ms:540000
[01/25/17 22:52:45.317 UTC 4 29130] [3944724224][tm_ec_dme_event_subsc.c:790] TM_EC: Event
subscription database size 0
[01/25/17 22:52:45.317 UTC 5 29130] [3944724224][tm_mgd_timers.c:114] TM_MGD_TIMER: Starting
leaf timer for leaf:0x11e17e3c time_in_ms:50000
bash-4.2#

```



**Note** The **tm-logs** option is not enabled by default because it is verbose.

Enable **tm-logs** with the `tmtrace.bin -L D tm-logs` command.

Disable **tm-logs** with the `tmtrace.bin -L W tm-logs` command.

### show system internal telemetry trace

The **show system internal telemetry trace** [**tm-events** | **tm-errors** | **tm-logs** | **all**] command displays system internal telemetry trace information.

```
switch# show system internal telemetry trace all
Telemetry All Traces:
Telemetry Error Traces:
[07/26/17 15:22:29.156 UTC 1 28577] [3960399872][tm_cfg_api.c:367] Not able to destroy dest
  profile list for config node rc:-1610612714 reason:Invalid argument
[07/26/17 15:22:44.972 UTC 2 28577] [3960399872][tm_stream.c:248] No subscriptions for
  destination group 1
[07/26/17 15:22:49.463 UTC 3 28577] [3960399872][tm_stream.c:576] TM_STREAM: Subscriptoin
  1 does not have any sensor groups

3 entries printed
Telemetry Event Traces:
[07/26/17 15:19:40.610 UTC 1 28577] [3960399872][tm_debug.c:41] Telemetry xostrace buffers
  initialized successfully!
[07/26/17 15:19:40.610 UTC 2 28577] [3960399872][tm.c:744] Telemetry statistics created
  successfully!
[07/26/17 15:19:40.610 UTC 3 28577] [3960399872][tm_init_n9k.c:97] Platform intf:
  grpc_traces:compression,channel
switch#

switch# show system internal telemetry trace tm-logs
Telemetry Log Traces:
0 entries printed
switch#

switch# show system internal telemetry trace tm-events
Telemetry Event Traces:
[07/26/17 15:19:40.610 UTC 1 28577] [3960399872][tm_debug.c:41] Telemetry xostrace buffers
  initialized successfully!
[07/26/17 15:19:40.610 UTC 2 28577] [3960399872][tm.c:744] Telemetry statistics created
  successfully!
[07/26/17 15:19:40.610 UTC 3 28577] [3960399872][tm_init_n9k.c:97] Platform intf:
  grpc_traces:compression,channel
[07/26/17 15:19:40.610 UTC 4 28577] [3960399872][tm_init_n9k.c:207] Adding telemetry to
  cgroup
[07/26/17 15:19:40.670 UTC 5 28577] [3960399872][tm_init_n9k.c:215] Added telemetry to
  cgroup successfully!

switch# show system internal telemetry trace tm-errors
Telemetry Error Traces:
0 entries printed
switch#
```

# Configuring Telemetry Using the NX-API

## Configuring Telemetry Using the NX-API

In the object model of the switch DME, the configuration of the telemetry feature is defined in a hierarchical structure of objects as shown in the section "Telemetry Model in the DME." Following are the main objects to be configured:

- **fmEntity** — Contains the NX-API and Telemetry feature states.
  - **fmNxapi** — Contains the NX-API state.
  - **fmTelemetry** — Contains the Telemetry feature state.
- **telemetryEntity** — Contains the telemetry feature configuration.
  - **telemetrySensorGroup** — Contains the definitions of one or more sensor paths or nodes to be monitored for telemetry. The telemetry entity can contain one or more sensor groups.
    - **telemetryRtSensorGroupRel** — Associates the sensor group with a telemetry subscription.
    - **telemetrySensorPath** — A path to be monitored. The sensor group can contain multiple objects of this type.
  - **telemetryDestGroup** — Contains the definitions of one or more destinations to receive telemetry data. The telemetry entity can contain one or more destination groups.
    - **telemetryRtDestGroupRel** — Associates the destination group with a telemetry subscription.
    - **telemetryDest** — A destination address. The destination group can contain multiple objects of this type.
  - **telemetrySubscription** — Specifies how and when the telemetry data from one or more sensor groups is sent to one or more destination groups.
    - **telemetryRsDestGroupRel** — Associates the telemetry subscription with a destination group.
    - **telemetryRsSensorGroupRel** — Associates the telemetry subscription with a sensor group.
  - **telemetryCertificate** — Associates the telemetry subscription with a certificate and hostname.

To configure the telemetry feature using the NX-API, you must construct a JSON representation of the telemetry object structure and push it to the DME with an HTTP or HTTPS POST operation.



---

**Note** For detailed instructions on using the NX-API, see the *Cisco Nexus 3000 and 9000 Series NX-API REST SDK User Guide and API Reference*.

---

### Before you begin

Your switch must be running Cisco NX-OS Release 7.3(0)I5(1) or a later release.

Your switch must be configured to run the NX-API from the CLI:

```
switch(config)# feature nxapi
```

NX-API sends telemetry data over management VRF:

```
switch(config)# nxapi use-vrf management
```

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<p>Enable the telemetry feature.</p> <p><b>Example:</b></p> <pre>{   "fmEntity" : {     "children" : [{       "fmTelemetry" : {         "attributes" : {           "adminSt" : "enabled"         }       }     ]   } }</pre>	<p>The root element is <b>fmTelemetry</b> and the base path for this element is <code>sys/fm</code>. Configure the <b>adminSt</b> attribute as <code>enabled</code>.</p>
<b>Step 2</b>	<p>Create the root level of the JSON payload to describe the telemetry configuration.</p> <p><b>Example:</b></p> <pre>{   "telemetryEntity": {     "attributes": {       "dn": "sys/tm"     },   } }</pre>	<p>The root element is <b>telemetryEntity</b> and the base path for this element is <code>sys/tm</code>. Configure the <b>dn</b> attribute as <code>sys/tm</code>.</p>
<b>Step 3</b>	<p>Create a sensor group to contain the defined sensor paths.</p> <p><b>Example:</b></p> <pre>"telemetrySensorGroup": {   "attributes": {     "id": "10",     "rn": "sensor-10"   },   "dataSrc": "NX-API" }, "children": [{ }] }</pre>	<p>A telemetry sensor group is defined in an object of class <b>telemetrySensorGroup</b>. Configure the following attributes of the object:</p> <ul style="list-style-type: none"> <li>• <b>id</b> — An identifier for the sensor group. Currently only numeric ID values are supported.</li> <li>• <b>rn</b> — The relative name of the sensor group object in the format: <b>sensor-id</b>.</li> <li>• <b>dataSrc</b> — Selects the data source from <b>DEFAULT</b>, <b>DME</b>, or <b>NX-API</b>.</li> </ul>



	Command or Action	Purpose
		Children of the sensor group object will include sensor paths and one or more relation objects ( <b>telemetryRtSensorGroupRel</b> ) to associate the sensor group with a telemetry subscription.
<b>Step 4</b>	(Optional) Add an SSL/TLS certificate and a host. <b>Example:</b> <pre> {   "telemetryCertificate": {     "attributes": {       "filename": "root.pem"       "hostname": "c.com"     }   } } </pre>	The <b>telemetryCertificate</b> defines the location of the SSL/TLS certificate with the telemetry subscription/destination.
<b>Step 5</b>	Define a telemetry destination group. <b>Example:</b> <pre> {   "telemetryDestGroup": {     "attributes": {       "id": "20"     }   } } </pre>	A telemetry destination group is defined in <b>telemetryEntity</b> . Configure the id attribute.
<b>Step 6</b>	Define a telemetry destination profile. <b>Example:</b> <pre> {   "telemetryDestProfile": {     "attributes": {       "adminSt": "enabled"     },     "children": [       {         "telemetryDestOptSourceInterface": {           "attributes": {             "name": "lo0"           }         }       }     ]   } } </pre>	A telemetry destination profile is defined in <b>telemetryDestProfile</b> . <ul style="list-style-type: none"> <li>• Configure the <b>adminSt</b> attribute as enabled.</li> <li>• Under <b>telemetryDestOptSourceInterface</b>, configure the <b>name</b> attribute with an interface name to stream data from the configured interface to a destination with the source IP address.</li> </ul>
<b>Step 7</b>	Define one or more telemetry destinations, consisting of an IP address and port number to which telemetry data will be sent. <b>Example:</b>	A telemetry destination is defined in an object of class <b>telemetryDest</b> . Configure the following attributes of the object: <ul style="list-style-type: none"> <li>• <b>addr</b> — The IP address of the destination.</li> </ul>

	Command or Action	Purpose
	<pre>{   "telemetryDest": {     "attributes": {       "addr": "1.2.3.4",       "enc": "GPB",       "port": "50001",       "proto": "gRPC",       "rn": "addr-[1.2.3.4]-port-50001"     }   } }</pre>	<ul style="list-style-type: none"> <li>• <b>port</b> — The port number of the destination.</li> <li>• <b>rn</b> — The relative name of the destination object in the format: <b>path-[path]</b>.</li> <li>• <b>enc</b> — The encoding type of the telemetry data to be sent. NX-OS supports: <ul style="list-style-type: none"> <li>• Google protocol buffers (GPB) for gRPC.</li> <li>• JSON for C.</li> <li>• GPB or JSON for UDP and secure UDP (DTLS).</li> </ul> </li> <li>• <b>proto</b> — The transport protocol type of the telemetry data to be sent. NX-OS supports: <ul style="list-style-type: none"> <li>• gRPC</li> <li>• HTTP</li> <li>• VUDP and secure UDP (DTLS)</li> </ul> </li> </ul>
<b>Step 8</b>	<p>Create a telemetry subscription to configure the telemetry behavior.</p> <p><b>Example:</b></p> <pre>"telemetrySubscription": {   "attributes": {     "id": "30",     "rn": "subs-30"   },   "children": [{   }] }</pre>	<p>A telemetry subscription is defined in an object of class <b>telemetrySubscription</b>. Configure the following attributes of the object:</p> <ul style="list-style-type: none"> <li>• <b>id</b> — An identifier for the subscription. Currently only numeric ID values are supported.</li> <li>• <b>rn</b> — The relative name of the subscription object in the format: <b>subs-id</b>.</li> </ul> <p>Children of the subscription object will include relation objects for sensor groups (<b>telemetryRsSensorGroupRel</b>) and destination groups (<b>telemetryRsDestGroupRel</b>).</p>
<b>Step 9</b>	<p>Add the sensor group object as a child object to the <b>telemetrySubscription</b> element under the root element (<b>telemetryEntity</b>).</p> <p><b>Example:</b></p> <pre>{   "telemetrySubscription": {     "attributes": {       "id": "30"     }   } }</pre>	

	Command or Action	Purpose
	<pre> "children": [{   "telemetryRsSensorGroupRel": {   "attributes": {     "sampleIntvl": "5000",     "tDn": "sys/tm/sensor-10"   } } } ] } </pre>	
<p><b>Step 10</b></p>	<p>Create a relation object as a child object of the subscription to associate the subscription to the telemetry sensor group and to specify the data sampling behavior.</p> <p><b>Example:</b></p> <pre> "telemetryRsSensorGroupRel": {   "attributes": {     "rType": "mo",     "rn": "rssensorGroupRel-[sys/tm/sensor-10]",     "sampleIntvl": "5000",     "tCl": "telemetrySensorGroup",     "tDn": "sys/tm/sensor-10",     "tType": "mo"   } } </pre>	<p>The relation object is of class <b>telemetryRsSensorGroupRel</b> and is a child object of <b>telemetrySubscription</b>. Configure the following attributes of the relation object:</p> <ul style="list-style-type: none"> <li>• <b>rn</b> — The relative name of the relation object in the format: <b>rssensorGroupRel-[sys/tm/sensor-group-id]</b>.</li> <li>• <b>sampleIntvl</b> — The data sampling period in milliseconds. An interval value of 0 creates an event-based subscription, in which telemetry data is sent only upon changes under the specified MO. An interval value greater than 0 creates a frequency-based subscription, in which telemetry data is sent periodically at the specified interval. For example, an interval value of 15000 results in the sending of telemetry data every 15 seconds.</li> <li>• <b>tCl</b> — The class of the target (sensor group) object, which is <b>telemetrySensorGroup</b>.</li> <li>• <b>tDn</b> — The distinguished name of the target (sensor group) object, which is <b>sys/tm/sensor-group-id</b>.</li> <li>• <b>rType</b> — The relation type, which is <b>mo</b> for managed object.</li> <li>• <b>tType</b> — The target type, which is <b>mo</b> for managed object.</li> </ul>
<p><b>Step 11</b></p>	<p>Define one or more sensor paths or nodes to be monitored for telemetry.</p> <p><b>Example:</b></p> <p>Single sensor path</p>	<p>A sensor path is defined in an object of class <b>telemetrySensorPath</b>. Configure the following attributes of the object:</p> <ul style="list-style-type: none"> <li>• <b>path</b> — The path to be monitored.</li> </ul>

Command or Action	Purpose
<pre> {   "telemetrySensorPath": {     "attributes": {       "path": "sys/cdp",       "rn": "path-[sys/cdp]",       "excludeFilter": "",       "filterCondition": "",       "path": "sys/fm/bgp",       "secondaryGroup": "0",       "secondaryPath": "",       "depth": "0"     }   } } </pre> <p><b>Example:</b> Single sensor path for NX-API</p> <pre> {   "telemetrySensorPath": {     "attributes": {       "path": "show interface",       "path": "show bgp",       "rn": "path-[sys/cdp]",       "excludeFilter": "",       "filterCondition": "",       "path": "sys/fm/bgp",       "secondaryGroup": "0",       "secondaryPath": "",       "depth": "0"     }   } } </pre> <p><b>Example:</b> Multiple sensor paths</p> <pre> {   "telemetrySensorPath": {     "attributes": {       "path": "sys/cdp",       "rn": "path-[sys/cdp]",       "excludeFilter": "",       "filterCondition": "",       "path": "sys/fm/bgp",       "secondaryGroup": "0",       "secondaryPath": "",       "depth": "0"     }   } }, {   "telemetrySensorPath": {     "attributes": {       "excludeFilter": "",       "filterCondition": "",       "path": "sys/fm/dhcp", </pre>	<ul style="list-style-type: none"> <li>• <b>rn</b> — The relative name of the path object in the format: <b>path-[path]</b></li> <li>• <b>depth</b> — The retrieval level for the sensor path. A depth setting of <b>0</b> retrieves only the root MO properties.</li> <li>• <b>filterCondition</b> — (Optional) Creates a specific filter for event-based subscriptions. The DME provides the filter expressions. For more information regarding filtering, see the Cisco APIC REST API Usage Guidelines on composing queries: <a href="https://www.cisco.com/c/en/us/td/docs/switches/datacenter/aci/apic/sw/2-x/rest_cfg/2_1_x/b_Cisco_APIC_REST_API_Configuration_Guide/b_Cisco_APIC_REST_API_Configuration_Guide_chapter_01.html#d25e1534a1635">https://www.cisco.com/c/en/us/td/docs/switches/datacenter/aci/apic/sw/2-x/rest_cfg/2_1_x/b_Cisco_APIC_REST_API_Configuration_Guide/b_Cisco_APIC_REST_API_Configuration_Guide_chapter_01.html#d25e1534a1635</a></li> </ul>

	Command or Action	Purpose
	<pre>                 "secondaryGroup": "0",                 "secondaryPath": "",                 "depth": "0"             }         }     } </pre> <p><b>Example:</b> Single sensor path filtering for BGP disable events:</p> <pre> {     "telemetrySensorPath": {         "attributes": {             "path": "sys/cdp",             "rn": "path-[sys/cdp]",             "excludeFilter": "",             "filterCondition": "eq(fmBgp.operSt.\"disabled\")",             "path": "sys/fm/bgp",             "secondaryGroup": "0",             "secondaryPath": "",             "depth": "0"         }     } } </pre>	
<b>Step 12</b>	Add sensor paths as child objects to the sensor group object ( <b>telemetrySensorGroup</b> ).	
<b>Step 13</b>	Add destinations as child objects to the destination group object ( <b>telemetryDestGroup</b> ).	
<b>Step 14</b>	Add the destination group object as a child object to the root element ( <b>telemetryEntity</b> ).	
<b>Step 15</b>	<p>Create a relation object as a child object of the telemetry sensor group to associate the sensor group to the subscription.</p> <p><b>Example:</b></p> <pre> "telemetryRtSensorGroupRel": {     "attributes": {         "rn": "rtsensorGroupRel-[sys/tm/subs-30]",         "tCl": "telemetrySubscription",         "tDn": "sys/tm/subs-30"     } } </pre>	<p>The relation object is of class <b>telemetryRtSensorGroupRel</b> and is a child object of <b>telemetrySensorGroup</b>. Configure the following attributes of the relation object:</p> <ul style="list-style-type: none"> <li>• <b>rn</b> — The relative name of the relation object in the format: <b>rtsensorGroupRel-[sys/tm/subscription-id]</b>.</li> <li>• <b>tCl</b> — The target class of the subscription object, which is <b>telemetrySubscription</b>.</li> <li>• <b>tDn</b> — The target distinguished name of the subscription object, which is <b>sys/tm/subscription-id</b>.</li> </ul>

	Command or Action	Purpose
<b>Step 16</b>	<p>Create a relation object as a child object of the telemetry destination group to associate the destination group to the subscription.</p> <p><b>Example:</b></p> <pre>"telemetryRtDestGroupRel": {   "attributes": {     "rn": "rtdestGroupRel-[sys/tm/subs-30]",     "tCl": "telemetrySubscription",      "tDn": "sys/tm/subs-30"   } }</pre>	<p>The relation object is of class <b>telemetryRtDestGroupRel</b> and is a child object of <b>telemetryDestGroup</b>. Configure the following attributes of the relation object:</p> <ul style="list-style-type: none"> <li>• <b>rn</b> — The relative name of the relation object in the format: <b>rtdestGroupRel-[sys/tm/subscription-id]</b>.</li> <li>• <b>tCl</b> — The target class of the subscription object, which is <b>telemetrySubscription</b>.</li> <li>• <b>tDn</b> — The target distinguished name of the subscription object, which is <b>sys/tm/subscription-id</b>.</li> </ul>
<b>Step 17</b>	<p>Create a relation object as a child object of the subscription to associate the subscription to the telemetry destination group.</p> <p><b>Example:</b></p> <pre>"telemetryRsDestGroupRel": {   "attributes": {     "rType": "mo",     "rn": "rsdestGroupRel-[sys/tm/dest-20]",     "tCl": "telemetryDestGroup",     "tDn": "sys/tm/dest-20",     "tType": "mo"   } }</pre>	<p>The relation object is of class <b>telemetryRsDestGroupRel</b> and is a child object of <b>telemetrySubscription</b>. Configure the following attributes of the relation object:</p> <ul style="list-style-type: none"> <li>• <b>rn</b> — The relative name of the relation object in the format: <b>rsdestGroupRel-[sys/tm/destination-group-id]</b>.</li> <li>• <b>tCl</b> — The class of the target (destination group) object, which is <b>telemetryDestGroup</b>.</li> <li>• <b>tDn</b> — The distinguished name of the target (destination group) object, which is <b>sys/tm/destination-group-id</b>.</li> <li>• <b>rType</b> — The relation type, which is <b>mo</b> for managed object.</li> <li>• <b>tType</b> — The target type, which is <b>mo</b> for managed object.</li> </ul>
<b>Step 18</b>	<p>Send the resulting JSON structure as an HTTP/HTTPS POST payload to the NX-API endpoint for telemetry configuration.</p>	<p>The base path for the telemetry entity is <code>sys/tm</code> and the NX-API endpoint is:</p> <pre>{{URL}}/api/node/mo/sys/tm.json</pre>

### Example

The following is an example of all the previous steps collected into one POST payload (note that some attributes may not match):

```
{
  "telemetryEntity": {
    "children": [{
      "telemetrySensorGroup": {
```

```

    "attributes": {
      "id": "10"
    }
    "children": [{
      "telemetrySensorPath": {
        "attributes": {
          "excludeFilter": "",
          "filterCondition": "",
          "path": "sys/fm/bgp",
          "secondaryGroup": "0",
          "secondaryPath": "",
          "depth": "0"
        }
      }
    ]
  },
  {
    "telemetryDestGroup": {
      "attributes": {
        "id": "20"
      }
      "children": [{
        "telemetryDest": {
          "attributes": {
            "addr": "10.30.217.80",
            "port": "50051",
            "enc": "GPB",
            "proto": "gRPC"
          }
        }
      ]
    }
  },
  {
    "telemetrySubscription": {
      "attributes": {
        "id": "30"
      }
      "children": [{
        "telemetryRsSensorGroupRel": {
          "attributes": {
            "sampleIntvl": "5000",
            "tDn": "sys/tm/sensor-10"
          }
        }
      },
      {
        "telemetryRsDestGroupRel": {
          "attributes": {
            "tDn": "sys/tm/dest-20"
          }
        }
      }
    ]
  }
]
}

```

## Configuration Example for Telemetry Using the NX-API

### Streaming Paths to a Destination

This example creates a subscription that streams paths `sys/cdp` and `sys/ipv4` to a destination `1.2.3.4 port 50001` every five seconds.

POST `https://192.168.20.123/api/node/mo/sys/tm.json`

Payload:

```
{
  "telemetryEntity": {
    "attributes": {
      "dn": "sys/tm"
    },
    "children": [{
      "telemetrySensorGroup": {
        "attributes": {
          "id": "10",
          "rn": "sensor-10"
        },
        "children": [{
          "telemetryRtSensorGroupRel": {
            "attributes": {
              "rn": "rtsensorGroupRel-[sys/tm/subs-30]",
              "tCl": "telemetrySubscription",
              "tDn": "sys/tm/subs-30"
            }
          }
        ]
      }, {
        "telemetrySensorPath": {
          "attributes": {
            "path": "sys/cdp",
            "rn": "path-[sys/cdp]",
            "excludeFilter": "",
            "filterCondition": "",
            "secondaryGroup": "0",
            "secondaryPath": "",
            "depth": "0"
          }
        }
      }
    ], {
      "telemetrySensorPath": {
        "attributes": {
          "path": "sys/ipv4",
          "rn": "path-[sys/ipv4]",
          "excludeFilter": "",
          "filterCondition": "",
          "secondaryGroup": "0",
          "secondaryPath": "",
          "depth": "0"
        }
      }
    ]
  }
}, {
  "telemetryDestGroup": {
    "attributes": {
      "id": "20",
      "rn": "dest-20"
    },
    "children": [{
      "telemetryRtDestGroupRel": {
```





```

"children": [{
  "telemetrySensorGroup": {
    "attributes": {
      "id": "10"
    }
  }
  "children": [{
    "telemetrySensorPath": {
      "attributes": {
        "excludeFilter": "",
        "filterCondition": "eq(fmBgp.operSt,\"disabled\")",
        "path": "sys/fm/bgp",
        "secondaryGroup": "0",
        "secondaryPath": "",
        "depth": "0"
      }
    }
  ]
}
],
{
  "telemetryDestGroup": {
    "attributes": {
      "id": "20"
    }
  }
  "children": [{
    "telemetryDest": {
      "attributes": {
        "addr": "10.30.217.80",
        "port": "50055",
        "enc": "GPB",
        "proto": "gRPC"
      }
    }
  ]
}
],
{
  "telemetrySubscription": {
    "attributes": {
      "id": "30"
    }
  }
  "children": [{
    "telemetryRsSensorGroupRel": {
      "attributes": {
        "sampleIntvl": "0",
        "tDn": "sys/tm/sensor-10"
      }
    }
  },
  {
    "telemetryRsDestGroupRel": {
      "attributes": {
        "tDn": "sys/tm/dest-20"
      }
    }
  }
]
}
]
}
}

```

## Using Postman Collection for Telemetry Configuration

An [example Postman collection](#) is an easy way to start configuring the telemetry feature, and can run all telemetry CLI equivalents in a single payload. Modify the file in the preceding link using your preferred text editor to update the payload to your needs, then open the collection in Postman and run the collection.

## Telemetry Model in the DME

The telemetry application is modeled in the DME with the following structure:

```

model
|----package [name:telemetry]
|   @name:telemetry
|   |----objects
|       |----mo [name:Entity]
|           |   @name:Entity
|           |   @label:Telemetry System
|           |--property
|               @name:adminSt
|               @type:AdminState
|           |
|           |----mo [name:SensorGroup]
|               |   @name:SensorGroup
|               |   @label:Sensor Group
|               |--property
|                   @name:id [key]
|                   @type:string:Basic
|                   @name:dataSrc
|                   @type:DataSource
|               |
|               |----mo [name:SensorPath]
|                   |   @name:SensorPath
|                   |   @label:Sensor Path
|                   |--property
|                       @name:path [key]
|                       @type:string:Basic
|                       @name:filterCondition
|                       @type:string:Basic
|                       @name:excludeFilter
|                       @type:string:Basic
|                       @name:depth
|                       @type:RetrieveDepth
|                   |
|                   |----mo [name:DestGroup]
|                       |   @name:DestGroup
|                       |   @label:Destination Group
|                       |--property
|                           @name:id
|                           @type:string:Basic
|                       |
|                       |----mo [name:Dest]
|                           |   @name:Dest
|                           |   @label:Destination
|                           |--property
|                               @name:addr [key]
|                               @type:address:Ip
|                               @name:port [key]
|                               @type:scalar:Uint16
|                               @name:proto
|                               @type:Protocol
|                               @name:enc

```

```

|           |           @type:Encoding
|
|-----mo [name:Subscription]
|           |           @name:Subscription
|           |           @label:Subscription
|--property
|           |           @name:id
|           |           @type:scalar:Uint64
|-----reldf
|           |           @name:SensorGroupRel
|           |           @to:SensorGroup
|           |           @cardinality:ntom
|           |           @label:Link to sensorGroup entry
|           |--property
|           |           @name:sampleIntvl
|           |           @type:scalar:Uint64
|
|-----reldf
|           |           @name:DestGroupRel
|           |           @to:DestGroup
|           |           @cardinality:ntom
|           |           @label:Link to destGroup entry

```

### DNs Available to Telemetry

For a list of DNs available to the telemetry feature, see [Model-Driven Telemetry, on page 221](#).

## Additional References

### Related Documents

Related Topic	Document Title
Example configurations of telemetry deployment for VXLAN EVPN.	<a href="#">Telemetry Deployment for VXLAN EVPN Solution</a>



## PART **V**

# XML Management Interface

- [XML Management Interface](#), on page 261





# CHAPTER 28

## XML Management Interface

This section contains the following topics:

- [About the XML Management Interface, on page 261](#)
- [Licensing Requirements for the XML Management Interface, on page 262](#)
- [Prerequisites to Using the XML Management Interface, on page 263](#)
- [Using the XML Management Interface, on page 263](#)
- [Information About Example XML Instances, on page 276](#)
- [Additional References, on page 283](#)

## About the XML Management Interface

### Information About the XML Management Interface

You can use the XML management interface to configure a device. The interface uses the XML-based Network Configuration Protocol (NETCONF), which allows you to manage devices and communicate over the interface with an XML management tool or program. The Cisco NX-OS implementation of NETCONF requires you to use a Secure Shell (SSH) session for communication with a device.

NETCONF is implemented with an XML Schema (XSD) that allows you to enclose device configuration elements within a remote procedure call (RPC) message. From within an RPC message, select one of the NETCONF operations that matches the type of command that you want the device to execute. You can configure the entire set of CLI commands on the device with NETCONF. For information about using NETCONF, see the [Creating NETCONF XML Instances, on page 266](#) and [RFC 4741](#).

For more information about using NETCONF over SSH, see [RFC 4742](#).

This section includes the following topics:

### NETCONF Layers

The following table lists the NETCONF layers:

*Table 16: NETCONF Layers*

Layer	Example
Transport protocol	SSHv2

Layer	Example
RPC	RPC, RPC-reply
Operations	get-config, edit-config
Content	<b>show</b> or <b>configuration</b> command

The following is a description of the four NETCONF layers:

- SSH transport protocol—Provides an encrypted connection between a client and the server.
- RPC tag—Introduces a configuration command from the requestor and the corresponding reply from the XML server.
- NETCONF operation tag—Indicates the type of configuration command.
- Content—Indicates the XML representation of the feature that you want to configure.

## SSH xmlagent

The device software provides an SSH service that is called xmlagent that supports NETCONF over SSH Version 2.




---

**Note** The xmlagent service is referred to as the XML server in Cisco NX-OS software.

---

NETCONF over SSH starts with the exchange of a Hello message between the client and the XML server. After the initial exchange, the client sends XML requests, which the server responds to with XML responses. The client and server terminate requests and responses with the character sequence >. Because this character sequence is not valid in XML, the client and the server can interpret when messages end, which keeps communication in sync.

The XML schemas that define the XML configuration instances that you can use are described in [Creating NETCONF XML Instances, on page 266](#).

## Licensing Requirements for the XML Management Interface

Product	License Requirement
Cisco NX-OS	The XML management interface requires no license. Any feature that is not included in a license package is bundled with the Cisco NX-OS image and is provided at no extra charge to you. For a complete explanation of the Cisco NX-OS licensing scheme, see the <i>Cisco NX-OS Licensing Guide</i> .



# Prerequisites to Using the XML Management Interface

Using the XML management interface has the following prerequisites:

- You must install SSHv2 on the client PC.
- You must install an XML management tool that supports NETCONF over SSH on the client PC.
- You must set the appropriate options for the XML server on the device.

## Using the XML Management Interface

This section describes how to manually configure and use the XML management interface.



---

**Note** Use the XML management interface with the default settings on the device.

---

## Configuring the SSH and the XML Server Options Through the CLI

By default, the SSH server is enabled on your device. If you disable SSH, you must enable it before you start an SSH session on the client PC.

You can configure the XML server options to control the number of concurrent sessions and the timeout for active sessions. You can also enable XML document validation and terminate XML sessions.



---

**Note** The XML server timeout applies only to active sessions.

---

For more information about configuring SSH, see the Cisco NX-OS security configuration guide for your platform.

For more information about the XML commands, see the Cisco NX-OS system management configuration guide for your platform.

### Procedure

---

- Step 1** Enter global configuration mode.
- configure terminal**
- Step 2** (Optional) Display information about XML server settings and active XML server sessions. You can find session numbers in the command output.
- show xml server status**
- Step 3** Validate XML documents for the specified server session.
- xml server validate all**

- Step 4** Terminate the specified XML server session.  
**xml server terminate** *session*
- Step 5** (Optional) Disable the SSH server so that you can generate keys.  
**no feature ssh**
- Step 6** Enable the SSH server. (The default is enabled.)  
**feature ssh**
- Step 7** (Optional) Display the status of the SSH server.  
**show ssh server**
- Step 8** Set the number of XML server sessions allowed.  
**xml server max-session** *sessions*  
The range is from 1 to 8. The default is 8.
- Step 9** Set the number of seconds after which an XML server session is terminated.  
**xml server timeout** *seconds*  
The range is from 1 to 1200. The default is 1200 seconds.
- Step 10** (Optional) Display information about the XML server settings and active XML server sessions.  
**show xml server status**
- Step 11** (Optional) Saves the running configuration to the startup configuration.  
**copy running-config startup-config**
- 

### Example

The following example shows how to configure SSH and XML server options through the CLI:

```
switch# configure terminal
switch(config)# xml server validate all
switch(config)# xml server terminate 8665
switch(config)# no feature ssh
switch(config)# feature ssh server
switch(config)# xml server max-session 6
switch(config)# xml server timeout 1200
switch(config)# copy running-config startup-config
```

## Starting an SSHv2 Session

You can start an SSHv2 session on a client PC with the **ssh2** command that is similar to the following:

```
ssh2 username@ip-address -s xmlagent
```

Enter the login username, the IP address of the device, and the service to connect to. The `xmlagent` service is referred to as the XML server in the device software.




---

**Note** The SSH command syntax can differ based on the SSH software on the client PC.

---

If you do not receive a Hello message from the XML server, verify the following conditions:

- The SSH server is enabled on the device.
- The *max-sessions* option of the XML server is adequate to support the number of SSH connections to the device.
- The active XML server sessions on the device are not all in use.

## Sending a Hello Message

You must advertise your capabilities to the server with a Hello message before the server processes any other requests. When you start an SSH session to the XML server, the server responds immediately with a Hello message. This message informs the client of the capabilities of the server. The XML server supports only base capabilities and, in turn, expects that the client supports only these base capabilities.

The following are sample Hello messages from the server and the client:




---

**Note** You must end all XML documents with `]]>]]>` to support synchronization in NETCONF over SSH.

---

### Hello Message from a Server

```
<?xml version="1.0"?>
<hello xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
  <capabilities>
    <capability>urn:ietf:params:xml:ns:netconf:base:1.0</capability>
  </capabilities>
  <session-id>25241</session-id>
</hello>]]>]]>
```

### Hello Message from a Client

```
<?xml version="1.0"?>
<nc:hello xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0">
  <nc:capabilities>
    <nc:capability>urn:ietf:params:xml:ns:netconf:base:1.0</nc:capability>
  </nc:capabilities>
</nc:hello>]]>]]>
```

## Obtaining XML Schema Definition (XSD) Files

### Sending an XML Document to the XML Server

To send an XML document to the XML server through an SSH session that you opened in a command shell, copy the XML text from an editor and paste it into the SSH session. Although typically you use an automated method to send XML documents to the XML server, you can verify the SSH connection to the XML server through this copy-paste method.

The following are the guidelines to follow when sending an XML document to the XML server:

- Verify that the XML server has sent the Hello message immediately after you started the SSH session, by looking for the Hello message text in the command shell output.
- Send the client Hello message before you send XML requests. Note that the XML server sends the Hello response immediately, and no additional response is sent after you send the client Hello message.
- Always terminate the XML document with the character sequence `]]>]]>`.

### Creating NETCONF XML Instances

You can create NETCONF XML instances by enclosing the XML device elements within an RPC tag and NETCONF operation tags. The XML device elements are defined in feature-based XML schema definition (XSD) files, which enclose available CLI commands in an XML format.

The following are the tags that are used in the NETCONF XML request in a framework context. Tag lines are marked with the following letter codes:

- X—XML declaration
- R—RPC request tag
- N—NETCONF operation tags
- D—Device tags

#### NETCONF XML Framework Context

```
X <?xml version="1.0"?>
R <nc:rpc message-id="1" xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0"
R xmlns="http://www.cisco.com/nxos:1.0:nfcli">
N <nc:get>
N <nc:filter type="subtree">
D <show>
D <xml>
D <server>
D <status/>
D </server>
D </xml>
D </show>
N </nc:filter>
N </nc:get>
R </nc:rpc>]]>]]>
```



**Note** You must use your own XML editor or XML management interface tool to create XML instances.

## RPC Request Tag

All NETCONF XML instances must begin with the RPC request tag `<rpc>`. The `<rpc>` element has a message ID (message-id) attribute. This message-id attribute is replicated in the `<rpc-reply>` and can be used to correlate requests and replies. The `<rpc>` node also contains the following XML namespace declarations:

- NETCONF namespace declaration—The `<rpc>` and NETCONF tags that are defined in the `urn:ietf:params:xml:ns:netconf:base:1.0` namespace, are present in the `netconf.xsd` schema file.
- Device namespace declaration—Device tags encapsulated by the `<rpc>` and NETCONF tags are defined in other namespaces. Device namespaces are feature-oriented. Cisco NX-OS feature tags are defined in different namespaces. RPC Request Tag `<rpc>` is an example that uses the NFCLI feature. It declares that the device namespace is `xmlns=http://www.cisco.com/nxos:1.0:nfcli`. `nfcli.xsd` contains this namespace definition. For more information, see [Obtaining XML Schema Definition \(XSD\) Files](#), on page 266.

### Examples

#### RPC Request Tag `<rpc>`

```
<nc:rpc message-id="315" xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns=http://www.cisco.com/nxos:1.0:nfcli">
...
</nc:rpc>]]>]]>
```

#### Configuration Request

```
<?xml version="1.0"?>
<nc:rpc message-id="16" xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns="http://www.cisco.com/nxos:1.0:if_manager">
  <nc:edit-config>
    <nc:target>
      <nc:running/>
    </nc:target>
    <nc:config>
      <configure>
        <__XML_MODE__exec_configure>
          <interface>
            <ethernet>
              <interface>2/30</interface>
              <__XML_MODE__if-ethernet>
                <__XML_MODE__if-eth-base>
                  <description>
                    <desc_line>Marketing Network</desc_line>
                  </description>
                </__XML_MODE__if-eth-base>
              </__XML_MODE__if-ethernet>
            </ethernet>
          </interface>
        </__XML_MODE__exec_configure>
```

```

    </configure>
  </nc:config>
</nc:edit-config>
</nc:rpc>]]>]]>

```



**Note** `__XML__MODE` tags are used internally by the NETCONF agent. Some tags are present only as children of a certain `__XML__MODE`. By examining the schema file, you can find the correct mode tag that leads to the tags representing the CLI command in XML.

## NETCONF Operations Tags

NETCONF provides the following configuration operations:

*Table 17: NETCONF Operations in Cisco NX-OS*

NETCONF Operation	Description	Example
close-session	Closes the current XML server session.	<a href="#">NETCONF Close Session Instance, on page 277</a>
commit	Sets the running configuration to the current contents of candidate configuration.	<a href="#">NETCONF Commit Instance: Candidate Configuration Capability, on page 281</a>
confirmed-commit	Provides the parameters to commit the configuration for a specified time. If a commit operation does not follow this operation within the confirm-timeout period, the configuration is reverted to the state before the confirmed-commit operation.	<a href="#">NETCONF Confirmed Commit Instance, on page 282</a>
copy-config	Copies the contents of the source configuration datastore to the target datastore.	<a href="#">NETCONF Copy Config Instance, on page 277</a>
delete-config	Operation not supported.	—
edit-config	Configures the features in the running configuration of the device. You use this operation for <b>configuration</b> commands.	<a href="#">NETCONF Edit Config Instance, on page 278</a> <a href="#">NETCONF Rollback-On-Error Instance, on page 282</a>
get	Receives configuration information from a device. You use this operation for <b>show</b> commands. The source of the data is the running configuration.	<a href="#">Creating NETCONF XML Instances, on page 266</a>

NETCONF Operation	Description	Example
get-config	Retrieves all or part of a configuration.	<a href="#">Creating NETCONF XML Instances, on page 266</a>
kill-session	Closes the specified XML server session. You cannot close your own session.	<a href="#">NETCONF Kill Session Instance, on page 277</a>
lock	Allows a client to lock the configuration system of a device.	<a href="#">NETCONF Lock Instance, on page 280</a>
unlock	Releases the configuration lock that the session issued.	<a href="#">NETCONF Unlock Instance, on page 281</a>
validate	Checks the configuration of a candidate for syntactical and semantic errors before applying the configuration to a device.	<a href="#">NETCONF Validate Capability Instance, on page 283</a>

## Device Tags

The XML device elements represent the available CLI commands in XML format. The feature-specific schema files contain the XML tags for CLI commands of that particular feature. See [Obtaining XML Schema Definition \(XSD\) Files, on page 266](#).

Using this schema, it is possible to build an XML instance. The relevant portions of the nfcli.xsd schema file that was used to build the NETCONF instances. See [\(Creating NETCONF XML Instances, on page 266\)](#).

### show xml Device Tags

```
<xs:element name="show" type="show_type_Cmd_show_xml"/>
<xs:complexType name="show_type_Cmd_show_xml">
  <xs:annotation>
    <xs:documentation>to display xml agent information</xs:documentation>
  </xs:annotation>
  <xs:sequence>
    <xs:choice maxOccurs="1">
      <xs:element name="xml" minOccurs="1" type="xml_type_Cmd_show_xml"/>
      <xs:element name="debug" minOccurs="1" type="debug_type_Cmd_show_debug"/>
    </xs:choice>
  </xs:sequence>
  <xs:attribute name="xpath-filter" type="xs:string"/>
  <xs:attribute name="uses-namespace" type="nxos:bool_true"/>
</xs:complexType>
```

### Server Status Device Tags

```
<xs:complexType name="xml_type_Cmd_show_xml">
  <xs:annotation>
    <xs:documentation>xml agent</xs:documentation>
  </xs:annotation>
  <xs:sequence>
    <xs:element name="server" minOccurs="1" type="server_type_Cmd_show_xml"/>
  </xs:sequence>
</xs:complexType>
<xs:complexType name="server_type_Cmd_show_xml">
  <xs:annotation>
```

```

<xs:documentation>xml agent server</xs:documentation>
</xs:annotation>
<xs:sequence>
<xs:choice maxOccurs="1">
<xs:element name="status" minOccurs="1" type="status_type_Cmd_show_xml"/>
<xs:element name="logging" minOccurs="1" type="logging_type_Cmd_show_logging_facility"/>
</xs:choice>
</xs:sequence>
</xs:complexType>

```

### Device Tag Response

```

<xs:complexType name="status_type_Cmd_show_xml">
<xs:annotation>
<xs:documentation>display xml agent information</xs:documentation>
</xs:annotation>
<xs:sequence>
<xs:element name="__XML__OPT_Cmd_show_xml__readonly__" minOccurs="0">
<xs:complexType>
<xs:sequence>
<xs:group ref="og_Cmd_show_xml__readonly__" minOccurs="0" maxOccurs="1"/>
</xs:sequence>
</xs:complexType>
</xs:element>
</xs:sequence>
</xs:complexType>
<xs:group name="og_Cmd_show_xml__readonly__">
<xs:sequence>
<xs:element name="__readonly__" minOccurs="1" type="__readonly__type_Cmd_show_xml"/>
</xs:sequence>
</xs:group>
<xs:complexType name="__readonly__type_Cmd_show_xml">
<xs:sequence>
<xs:group ref="bg_Cmd_show_xml_operational_status" maxOccurs="1"/>
<xs:group ref="bg_Cmd_show_xml_maximum_sessions_configured" maxOccurs="1"/>
<xs:group ref="og_Cmd_show_xml_TABLE_sessions" minOccurs="0" maxOccurs="1"/>
</xs:sequence>
</xs:complexType>

```



**Note** The `__XML__OPT_Cmd_show_xml__readonly__` tag is optional. This tag represents the response. For more information on responses, see [RPC Response Tag, on page 275](#).

You can use the | XML option to find the tags that you can use to execute a <get> operation. The following is an example of the | XML option. This example shows you that the namespace-defining tag to execute operations on this device is `http://www.cisco.com/nxos:1.0:nfcli`, and that the `nfcli.xsd` file can be used to build requests.

You can enclose the NETCONF operation tags and the device tags within the RPC tag. The </rpc> end tag is followed by the XML termination character sequence.

### XML Example

```

Switch#> show xml server status | xml
<?xml version="1.0" encoding="ISO-8859-1"?>
<nf:rpc-reply xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns="http://www.cisco.com/nxos:1.0:nfcli">
<nf:data>
<show>
<xml>

```



```

<server>
<status>
<__XML__OPT_Cmd_show_xml__readonly__>
<__readonly__>
<operational_status>
<o_status>enabled</o_status>
</operational_status>
<maximum_sessions_configured>
<max_session>8</max_session>
</maximum_sessions_configured>
</__readonly__>
</__XML__OPT_Cmd_show_xml__readonly__>
</status>
</server>
</xml>
</show>
</nf:data>
</nf:rpc-reply>
]]>]]>

```

## Extended NETCONF Operations

Cisco NX-OS supports an `<rpc>` operation named `<exec-command>`. The operation allows client applications to send CLI **configuration** and **show** commands and to receive responses to those commands as XML tags.

The following is an example of the tags that are used to configure an interface. Tag lines are marked with the following letter codes:

- X—XML declaration
- R—RPC request tag
- EO—Extended operation

The following table provides a detailed explanation of the operation tags:

**Table 18: Operation Tags**

Tag	Description
<code>&lt;exec-command&gt;</code>	Executes a CLI command.
<code>&lt;cmd&gt;</code>	Contains the CLI command. A command can be a <b>show</b> command or <b>configuration</b> command. Separate multiple configuration commands by using a semicolon (;). Although multiple <b>show</b> commands are not supported, you can send multiple configuration commands in different <code>&lt;cmd&gt;</code> tags as part of the same request. For more information, see the Example on <i>Configuration CLI Commands Sent Through <code>&lt;exec-command&gt;</code></i> .

Replies to configuration commands that are sent through the `<cmd>` tag are as follows:

- `<nf:ok>`—All **configuration** commands are executed successfully.

- `<nf:rpc-error>`—Some commands have failed. The operation stops at the first error, and the `<nf:rpc-error>` subtree provides more information about which configuration has failed. Configurations that are executed before the failed command would have been applied to the running configuration.

### Configuration CLI Commands Sent Through the `<exec-command>`

The `show` command must be sent in its own `<exec-command>` instance as shown in the following example:

```
X <?xml version="1.0"?>
R <nf:rpc xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
  xmlns:nxos="http://www.cisco.com/nxos:1.0" message-id="3">
EO <nxos:exec-command>
EO <nxos:cmd>conf t ; interface ethernet 2/1 </nxos:cmd>
EO <nxos:cmd>channel-group 2000 ; no shut; </nxos:cmd>
EO </nxos:exec-command>
R </nf:rpc>]]]]>
```

### Response to CLI Commands Sent Through the `<exec-command>`

The following is the response to a send operation:

```
<?xml version="1.0" encoding="ISO-8859-1"?>
<nf:rpc-reply xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
  xmlns:nxos="http://www.cisco.com/nxos:1.0" message-id="3">
<nf:ok/>
</nf:rpc-reply>
]]]]>
```

### Show CLI Commands Sent Through the `<exec-command>`

The following example shows how the `show` CLI commands that are sent through the `<exec-command>` can be used to retrieve data:

```
<?xml version="1.0"?>
<nf:rpc xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
  xmlns:nxos="http://www.cisco.com/nxos:1.0" message-id="110">
<nxos:exec-command>
<nxos:cmd>show interface brief</nxos:cmd>
</nxos:exec-command>
</nf:rpc>]]]]>
```

### Response to the show CLI Commands Sent Through the `<exec-command>`

```
<?xml version="1.0" encoding="ISO-8859-1"?>
<nf:rpc-reply xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
  xmlns:nxos="http://www.cisco.com/nxos:1.0"
  xmlns:mod="http://www.cisco.com/nxos:1.0:if_manager" message-id="110">
<nf:data>
<mod:show>
<mod:interface>
<mod:__XML__OPT_Cmd_show_interface_brief__readonly__>
```

```

<mod:__readonly__>
<mod:TABLE_interface>
<mod:ROW_interface>
<mod:interface>mgmt0</mod:interface>
<mod:state>up</mod:state>
<mod:ip_addr>192.0.2.20</mod:ip_addr>
<mod:speed>1000</mod:speed>
<mod:mtu>1500</mod:mtu>
</mod:ROW_interface>
<mod:ROW_interface>
<mod:interface>Ethernet2/1</mod:interface>
<mod:vlan>--</mod:vlan>
<mod:type>eth</mod:type>
<mod:portmode>routed</mod:portmode>
<mod:state>down</mod:state>
<mod:state_rsn_desc>Administratively down</mod:state_rsn_desc>
<mod:speed>auto</mod:speed>
<mod:ratemode>D</mod:ratemode>
</mod:ROW_interface>
</mod:TABLE_interface>
</mod:__readonly__>
</mod:__XML_OPT_Cmd_show_interface_brief__readonly__>
</mod:interface>
</mod:show>
</nf:data>
</nf:rpc-reply>
]]>]]>

```

### Failed Configuration

```

<?xml version="1.0"?>
<nf:rpc xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns:nxos="http://www.cisco.com/nxos:1.0" message-id="3">
<nxos:exec-command>
<nxos:cmd>configure terminal ; interface ethernet2/1 </nxos:cmd>
<nxos:cmd>ip address 192.0.2.2/24 </nxos:cmd>
<nxos:cmd>no channel-group 2000 ; no shut; </nxos:cmd>
</nxos:exec-command>
</nf:rpc>]]>]]>
<?xml version="1.0" encoding="ISO-8859-1"?>
<nf:rpc-reply xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns:nxos="http://www.cisco.com/nxos:1.0" message-id="3">
<nf:rpc-error>
<nf:error-type>application</nf:error-type>
<nf:error-tag>invalid-value</nf:error-tag>
<nf:error-severity>error</nf:error-severity>
<nf:error-message>Ethernet2/1: not part of port-channel 2000
</nf:error-message>
<nf:error-info>
<nf:bad-element>cmd</nf:bad-element>
</nf:error-info>
</nf:rpc-error>
</nf:rpc-reply>
]]>]]>

```

After a command is executed, the interface IP address is set, but the administrative state is not modified (the **no shut** command is not executed. The administrative state is not modified because the **no port-channel 2000** command results in an error.

The <rpc-reply> is due to a **show** command that is sent through the <cmd> tag that contains the XML output of the **show** command.

You cannot combine configuration and show commands on the same `<exec-command>` instance. The following example shows **config** and **show** commands that are combined in the same instance.

### Combination of configure and show Commands

```
<?xml version="1.0"?>
<nf:rpc xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns:nxos="http://www.cisco.com/nxos:1.0" message-id="110">
<nxos:exec-command>
<nxos:cmd>conf t ; interface ethernet 2/1 ; ip address 1.1.1.4/24 ; show xml
server status </nxos:cmd>
</nxos:exec-command>
</nf:rpc>]]>]]>
<?xml version="1.0" encoding="ISO-8859-1"?>
<nf:rpc-reply xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns:nxos="http://www.cisco.com/nxos:1.0" message-id="110">
<nf:rpc-error>
<nf:error-type>application</nf:error-type>
<nf:error-tag>invalid-value</nf:error-tag>
<nf:error-severity>error</nf:error-severity>
<nf:error-message>Error: cannot mix config and show in exec-command. Config cmds
before the show were executed.
Cmd:show xml server status</nf:error-message>
<nf:error-info>
<nf:bad-element>cmd</nf:bad-element>
</nf:error-info>
</nf:rpc-error>
</nf:rpc-reply>
]]>]]>
```

### show CLI Commands Sent Through the `<exec-command>`

```
<?xml version="1.0"?>
<nf:rpc xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns:nxos="http://www.cisco.com/nxos:1.0" message-id="110">
<nxos:exec-command>
<nxos:cmd>show xml server status ; show xml server status </nxos:cmd>
</nxos:exec-command>
</nf:rpc>]]>]]>
<?xml version="1.0" encoding="ISO-8859-1"?>
<nf:rpc-reply xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns:nxos="http://www.cisco.com/nxos:1.0" message-id="110">
<nf:rpc-error>
<nf:error-type>application</nf:error-type>
<nf:error-tag>invalid-value</nf:error-tag>
<nf:error-severity>error</nf:error-severity>
<nf:error-message>Error: show cmds in exec-command shouldn't be followed by anything
</nf:error-message>
<nf:error-info>
<nf:bad-element>&lt;cmd&gt;</nf:bad-element>
</nf:error-info>
</nf:rpc-error>
</nf:rpc-reply>
]]>]]>
```

## NETCONF Replies

For every XML request sent by a client, the XML server sends an XML response that is enclosed in the RPC response tag `<rpc-reply>`.

### RPC Response Tag

The following example shows the RPC response tag `<rpc-reply>`:

#### RPC Response Tag `<rpc-reply>`

```
<nc:rpc-reply message-id="315" xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns=http://www.cisco.com/nxos:1.0:nfcli">
<ok/>
</nc:rpc-reply>]]>]]>
```

#### RPC Response Elements

The elements `<ok>`, `<data>`, and `<rpc-error>` can appear in the RPC response. The following table describes the RPC response elements that can appear in the `<rpc-reply>` tag:

**Table 19: RPC Response Elements**

Element	Description
<code>&lt;ok&gt;</code>	The RPC request completed successfully. This element is used when no data is returned in the response.
<code>&lt;data&gt;</code>	The RPC request completed successfully. The data that are associated with the RPC request is enclosed in the <code>&lt;data&gt;</code> element.
<code>&lt;rpc-error&gt;</code>	The RPC request failed. Error information is enclosed in the <code>&lt;rpc-error&gt;</code> element.

### Interpreting the Tags Encapsulated in the data Tag

The device tags encapsulated in the `<data>` tag contain the request, followed by the response. A client application can safely ignore all the tags before the `<readonly>` tag, as show in the following example:

#### RPC Reply Data

```
<?xml version="1.0" encoding="ISO-8859-1"?>
<nf:rpc-reply xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns="http://www.cisco.com/nxos:1.0:if_manager">
<nf:data>
<show>
<interface>
<_XML_OPT_Cmd_show_interface_brief__readonly__>
<_readonly__>
<TABLE_interface>
<ROW_interface>
<interface>mgmt0</interface>
```

```

<state>up</state>
<ip_addr>xx.xx.xx.xx</ip_addr>
<speed>1000</speed>
<mtu>1500</mtu>
</ROW_interface>
<ROW_interface>
<interface>Ethernet2/1</interface>
<vlan>--</vlan>
<type>eth</type>
<portmode>routed</portmode>
<state>down</state>
<state_rsn_desc>Administratively down</state_rsn_desc>
<speed>auto</speed>
<ratemode>D</ratemode>
</ROW_interface>
</TABLE_interface>
</__readonly__>
</__XML_OPT_Cmd_show_interface_brief__readonly__>
</interface>
</show>
</nf:data>
</nf:rpc-reply>
]]>]]>

```




---

**Note** <\_\_XML\_OPT.\*> and <\_\_XML\_BLK.\*> appear in responses and are sometimes used in requests. These tags are used by the NETCONF agent and are present in responses after the <\_\_readonly\_\_> tag. They are necessary in requests, and should be added according to the schema file to reach the XML tag that represents the CLI command.

---

## Information About Example XML Instances

### Example XML Instances

This section provides examples of the following XML instances:

- [NETCONF Close Session Instance, on page 277](#)
- [NETCONF Kill Session Instance, on page 277](#)
- [NETCONF Copy Config Instance, on page 277](#)
- [NETCONF Edit Config Instance, on page 278](#)
- [NETCONF Get Config Instance, on page 279](#)
- [NETCONF Lock Instance, on page 280](#)
- [NETCONF Unlock Instance, on page 281](#)
- [NETCONF Commit Instance: Candidate Configuration Capability, on page 281](#)
- [NETCONF Confirmed Commit Instance, on page 282](#)
- [NETCONF Rollback-On-Error Instance, on page 282](#)

- [NETCONF Validate Capability Instance, on page 283](#)

## NETCONF Close Session Instance

The following examples show the close-session request, followed by the close-session response:

### Close Session Request

```
<?xml version="1.0"?>
<nc:rpc message-id="101" xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns="http://www.cisco.com/nxos:1.0">
<nc:close-session/>
</nc:rpc>]]>]]>
```

### Close Session Response

```
<nc:rpc-reply xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns="http://www.cisco.com/nxos:1.0" message-id="101">
<nc:ok/>
</nc:rpc-reply>]]>]]>
```

## NETCONF Kill Session Instance

The following examples show the kill session request, followed by the kill session response:

### Kill Session Request

```
<nc:rpc message-id="101" xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns="http://www.cisco.com/nxos:1.0">
<nc:kill-session>
<nc:session-id>25241</nc:session-id>
</nc:kill-session>
</nc:rpc>]]>]]>
```

### Kill Session Response

```
<?xml version="1.0"?>
<nc:rpc-reply xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns="http://www.cisco.com/nxos:1.0" message-id="101">
<nc:ok/>
</nc:rpc-reply>]]>]]>
```

## NETCONF Copy Config Instance

The following examples show the copy config request, followed by the copy config response:

### Copy Config Request

```
<rpc message-id="101"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<copy-config>
<target>
```

```

<running/>
</target>
<source>
<url>https://user@example.com:passphrase/cfg/new.txt</url>
</source>
</copy-config>
</rpc>

```

### Copy Config Response

```

xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<ok/>
</rpc-reply>

```

## NETCONF Edit Config Instance

The following examples show the use of NETCONF edit config:

### Edit Config Request

```

<?xml version="1.0"?>
<nc:rpc message-id="16" xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns="http://www.cisco.com/nxos:1.0:if_manager">
<nc:edit-config>
<nc:target>
<nc:running/>
</nc:target>
<nc:config>
<configure>
<__XML__MODE__exec_configure>
<interface>
<ethernet>
<interface>2/30</interface>
<__XML__MODE_if-ethernet>
<__XML__MODE_if-eth-base>
<description>
<desc_line>Marketing Network</desc_line>
</description>
</__XML__MODE_if-eth-base>
</__XML__MODE_if-ethernet>
</ethernet>
</interface>
</__XML__MODE__exec_configure>
</configure>
</nc:config>
</nc:edit-config>
</nc:rpc>]]>]]>

```

### Edit Config Response

```

<?xml version="1.0"?>
<nc:rpc-reply xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns="http://www.cisco.com/nxos:1.0:if_manager" message-id="16">
<nc:ok/>
</nc:rpc-reply>]]>]]>

```



The operation attribute in edit config identifies the point in configuration where the specified operation is performed. If the operation attribute is not specified, the configuration is merged into the existing configuration data store. The operation attribute can have the following values:

- create
- merge
- delete

### Edit Config: Delete Operation Request

The following example shows how to delete the configuration of interface Ethernet 0/0 from the running configuration:

```
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<edit-config>
<target>
<running/>
</target>
<default-operation>none</default-operation>
<config xmlns:xc="urn:ietf:params:xml:ns:netconf:base:1.0">
<top xmlns="http://example.com/schema/1.2/config">
<interface xc:operation="delete">
<name>Ethernet0/0</name>
</interface>
</top>
</config>
</edit-config>
</rpc>]]>]]>
```

### Response to Edit Config: Delete Operation

The following example shows how to edit the configuration of interface Ethernet 0/0 from the running configuration:

```
<rpc-reply message-id="101"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<ok/>
</rpc-reply>]]>]]>
```

## NETCONF Get Config Instance

The following examples show the use of NETCONF get config:

### Get Config Request to Retrieve the Entire Subtree

```
<rpc message-id="101"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<get-config>
<source>
<running/>
</source>
<filter type="subtree">
<top xmlns="http://example.com/schema/1.2/config">
```

```

<users/>
</top>
</filter>
</get-config>
</rpc>]]>]]>

```

### Get Config Response with Results of a Query

```

<rpc-reply message-id="101"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<data>
<top xmlns="http://example.com/schema/1.2/config">
<users>
<user>
<name>root</name>
<type>superuser</type>
<full-name>Charlie Root</full-name>
<company-info>
<dept>1</dept>
<id>1</id>
</company-info>
</user>
<!-- additional <user> elements appear here... -->
</users>
</top>
</data>
</rpc-reply>]]>]]>

```

## NETCONF Lock Instance

The following examples show a lock request, a success response, and a response to an unsuccessful attempt:

### Lock Request

```

<rpc message-id="101"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<lock>
<target>
<running/>
</target>
</lock>
</rpc>]]>]]>

```

### Response to a Successful Acquisition of Lock

```

<rpc-reply message-id="101"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<ok/> <!-- lock succeeded -->
</rpc-reply>]]>]]>

```

### Response to an Unsuccessful Attempt to Acquire Lock

```

<rpc-reply message-id="101"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<rpc-error> <!-- lock failed -->
<error-type>protocol</error-type>

```

```
<error-tag>lock-denied</error-tag>
<error-severity>error</error-severity>
<error-message>
Lock failed, lock is already held
</error-message>
<error-info>
<session-id>454</session-id>
<!-- lock is held by NETCONF session 454 -->
</error-info>
</rpc-error>
</rpc-reply>]]>]]>
```

## NETCONF Unlock Instance

The following examples show the use of NETCONF unlock:

### Unlock Request

```
<rpc message-id="101"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<unlock>
<target>
<running/>
</target>
</unlock>
</rpc>
```

### Response to an Unlock Request

```
<rpc-reply message-id="101"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<ok/>
</rpc-reply>
```

## NETCONF Commit Instance: Candidate Configuration Capability

The following examples show a commit operation and a commit reply:

### Commit Operation

```
<rpc message-id="101"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<commit/>
</rpc>
```

### Commit Reply

```
<rpc-reply message-id="101"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<ok/>
</rpc-reply>
```

## NETCONF Confirmed Commit Instance

The following examples show a confirmed commit operation and a confirmed commit reply:

### Confirmed Commit Request

```
<rpc message-id="101"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<commit>
<confirmed/>
<confirm-timeout>120</confirm-timeout>
</commit>
</rpc>]]>]]>
```

### Confirmed Commit Response

```
<rpc-reply message-id="101"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<ok/>
</rpc-reply>]]>]]>
```

## NETCONF Rollback-On-Error Instance

The following examples show how to configure rollback on error and the response to this request:

### Rollback-On-Error Capability

```
<rpc message-id="101"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<edit-config>
<target>
<running/>
</target>
<error-option>rollback-on-error</error-option>
<config>
<top xmlns="http://example.com/schema/1.2/config">
<interface>
<name>Ethernet0/0</name>
<mtu>100000</mtu>
</interface>
</top>
</config>
</edit-config>
</rpc>]]>]]>
```

### Rollback-On-Error Response

```
<rpc-reply message-id="101"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<ok/>
</rpc-reply>]]>]]>
```

## NETCONF Validate Capability Instance

The following examples show the use of NETCONF validate capability. The string `urn:ietf:params:netconf:capability:validate:1.0` identifies the NETCONF validate capability.

### Validate Request

```
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<validate>
<source>
<candidate/>
</source>
</validate>
</rpc>]]>]]>
```

### Response to Validate Request

```
<rpc-reply message-id="101"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<ok/>
</rpc-reply>]]>]]>
```

## Additional References

This section provides additional information that is related to implementing the XML management interface.

### RFCs

RFCs	Title
<a href="#">RFC 4741</a>	NETCONF Configuration Protocol
<a href="#">RFC 4742</a>	Using the NETCONF Configuration Protocol over Secure Shell (SSH)





## APPENDIX **A**

# Streaming Telemetry Sources

---

- [About Streaming Telemetry, on page 285](#)
- [Guidelines and Limitations, on page 285](#)
- [Data Available for Telemetry, on page 285](#)

## About Streaming Telemetry

The streaming telemetry feature of Cisco Nexus switches continuously streams data out of the network and notifies the client, providing near-real-time access to monitoring data.

## Guidelines and Limitations

Following are the guideline and limitations for streaming telemetry:

- The telemetry feature is available in Cisco Nexus 3000 and 9000 switches.
- Switches with less than 8 GB of memory do not support telemetry.
- Software streaming telemetry does not support the TCP protocol. The tcp option is displayed in the Help text, but is not accepted during configuration.

## Data Available for Telemetry

For each component group, the distinguished names (DNs) in the appendix of the [NX-API DME Model Reference](#) can provide the listed properties as data for telemetry.

