

# Configure Time-Based PoE on the Cisco 220 Series Smart Plus Switches

## Objective

Power over Ethernet (PoE) allows the device to supply power to the connected devices through the same Ethernet cable that transmits data. This eliminates the need for a separate power cord to power on the devices such as the IP Phones and Access Points. The Time Range feature on the Cisco 220 Series Smart Switches allows you to specify the exact time as to when PoE will be enabled to the ports on the switch.

This article aims to show how to configure time-based PoE settings on your switch to enable PoE at a specified time and to monitor the current power usage and maximum power limit per port.

## Applicable Devices


- Sx220 Series

## Software Version

- 1.1.0.14

## Configure Time-Based PoE

Step 1. Log in to the switch web-based utility and choose **Port Management > PoE > PoE Port Settings**.

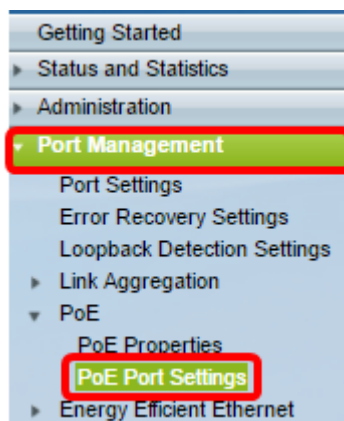

Step 2. Under the PoE Port Setting Table, click on the radio button of the port that you want to configure then click on **Edit**.

<input type="radio"/>	13	GE13	Enable	Searching	Low	N/A
<input type="radio"/>	14	GE14	Enable	Searching	Low	N/A
<input type="radio"/>	15	GE15	Enable	Searching	Low	N/A
<input type="radio"/>	16	GE16	Enable	Searching	Low	N/A
<input type="radio"/>	17	GE17	Enable	Searching	Low	N/A
<input checked="" type="radio"/>	18	GE18	Enable	Searching	Low	N/A
<input type="radio"/>	19	GE19	Enable	Searching	Low	N/A
<input type="radio"/>	20	GE20	Enable	Searching	Low	N/A
<input type="radio"/>	21	GE21	Enable	Searching	Low	N/A
<input type="radio"/>	22	GE22	Enable	Searching	Low	N/A
<input type="radio"/>	23	GE23	Enable	Searching	Low	N/A
<input type="radio"/>	24	GE24	Enable	Searching	Low	N/A

Copy Settings... Edit..

**Note:** In this example, Port GE18 is chosen.

Step 3. The Edit PoE Settings window will then appear. From the Interface drop-down list, make sure the specified port is the one you chose in Step 2. Otherwise, click the drop-down arrow and choose the right port.

Interface: Port

PoE Administrative Status:  Enable

Time Range:  Enable

Time Range Name:

Power Priority Level:  Critical  
 High  
 Low

**Note:** In this example, Port GE18 is chosen.

Step 4. Check the **Enable** check box for the PoE Administrative Status to enable PoE on the specified port. This box is checked by default.

Interface: Port

PoE Administrative Status:  Enable

Time Range:  Enable

Time Range Name:

Power Priority Level:  Critical  
 High  
 Low

Step 5. Check the **Enable** check box for the Time Range. This would allow you to configure your preferred time settings for the PoE to be enabled on the specified port.

Interface: Port

PoE Administrative Status:  Enable

Time Range:  Enable

Time Range Name:

Power Priority Level:  Critical  
 High  
 Low

Step 6. Click on the **Edit** link to go to the Time Range page and to specify the settings for the

## Time Range.

Interface: Port

PoE Administrative Status:  Enable


Time Range:  Enable

Time Range Name:

Power Priority Level:  Critical  
 High  
 Low

**Note:** If there is already a pre-defined name that you want to use, click on the drop-down arrow and choose the name then skip to [Step 16](#).


Step 7. A pop-up window will then appear to inform you that the navigation to the Time Range page will close the current window. Click **OK** to continue.

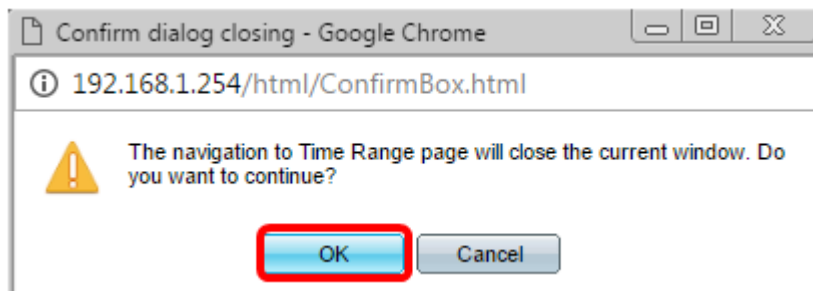

You will then be directed to the Time Range page.

## Time Range

Step 8. Under the Time Range Table, click the **Add** button.

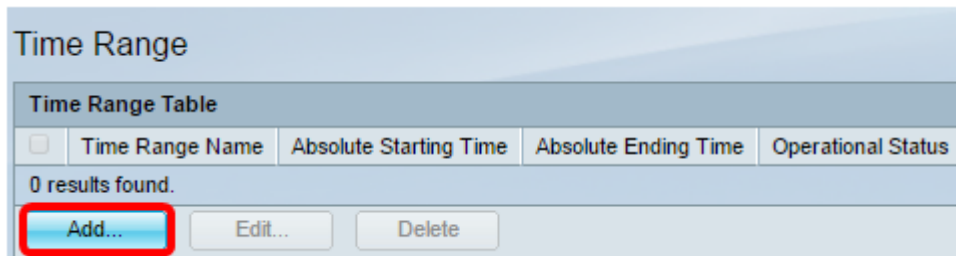

The Add Time Range window will appear.

Step 9. Enter a name in the *Time Range Name* field. This will help you easily identify the Time Range you have set.

**Note:** In this example, PortOn is used.

Step 10. Click on a radio button for the Absolute Starting Time. The options are:

- Immediate — This option will apply the time range set right away.
- Date — This option allows you to set a specific time for the time range to start by choosing the year, month, and day as well as the exact hour and minute.

Time Range Name: PortOn (6/32 Characters Used)

Absolute Starting Time:  Immediate

Date 2016 Dec 06 Time 13 30 HH:MM

Absolute Ending Time:  Infinite

Date 2000 Jan 01 Time 00 00 HH:MM

**Note:** In this example, Date is chosen and the year, month, day, and time are specified.

Step 11. Click on a radio button for the Absolute Ending Time. The options are:

- Infinite — This option will set the time range to apply at all times and to never end.
- Date — This option allows you to set a specific time for the time range to end by choosing the year, month, and day as well as the exact hour and minute.

Time Range Name: PortOn (6/32 Characters Used)

Absolute Starting Time:  Immediate

Date 2016 Dec 06 Time 13 30 HH:MM


Absolute Ending Time:  Infinite

Date 2000 Jan 01 Time 00 00 HH:MM

Apply Close

**Note:** In this example, Infinite is chosen. This is the default setting.

Step 12. Click **Apply**.

Step 13. To save the configuration permanently, go to the Copy/Save Configuration page or click the  Save icon at the upper portion of the page.

Step 14. Go back to **Port Management > PoE > PoE Port Settings**.

- Getting Started
- ▶ Status and Statistics
- ▶ Administration
- ▼ Port Management**
  - Port Settings
  - Error Recovery Settings
  - Loopback Detection Settings
  - ▶ Link Aggregation
  - ▼ PoE
    - PoE Properties
    - PoE Port Settings**
  - ▶ Energy Efficient Ethernet

Step 15. Click on the port that you have chosen previously and click the **Edit** button to return to the Edit PoE Settings window.

<input type="radio"/>	13	GE13	Enable	Searching	Low	N/A
<input type="radio"/>	14	GE14	Enable	Searching	Low	N/A
<input type="radio"/>	15	GE15	Enable	Searching	Low	N/A
<input type="radio"/>	16	GE16	Enable	Searching	Low	N/A
<input type="radio"/>	17	GE17	Enable	Searching	Low	N/A
<input checked="" type="radio"/>	18	GE18	Enable	Searching	Low	N/A
<input type="radio"/>	19	GE19	Enable	Searching	Low	N/A
<input type="radio"/>	20	GE20	Enable	Searching	Low	N/A
<input type="radio"/>	21	GE21	Enable	Searching	Low	N/A
<input type="radio"/>	22	GE22	Enable	Searching	Low	N/A
<input type="radio"/>	23	GE23	Enable	Searching	Low	N/A
<input type="radio"/>	24	GE24	Enable	Searching	Low	N/A

Copy Settings... Edit...

Step 16. Click on a radio button to choose the Power Priority Level. The options are:

- Critical — This option allows the port to receive power at all times. If there is not enough power to provide to all of the ports, the ports that are set to this priority level are prioritized.
- High — This option allows the port to receive power only if all Critical-priority ports are receiving power.
- Low — This option allows the port to receive power only if all Critical-priority and High-priority ports are receiving power. If there is not enough power for all ports, the power to ports that are set to this priority level may be cut off.

Interface: Port GE18 ▾

PoE Administrative Status:  Enable

Time Range:  Enable

Time Range Name: ▾ Edit

Power Priority Level:  High  
 Critical  
 Low

**Note:** In this example, High is chosen.

Step 17. Enter a value in the *Administrative Power Allocation* field in order to set the maximum power limit to the port.

**Note:** The Administrative Power Allocation can only be configured if the PoE Power Mode is set to Port Limit in the PoE Properties window.

Interface: Port GE18 ▾

PoE Administrative Status:  Enable

Time Range:  Enable

Time Range Name: ▾ Edit

Power Priority Level:  Critical  
 High  
 Low

Administrative Power Allocation:  (Range: 0 - 30000, Default: 30000)

**Note:** In this example, 30000 is used. This is the default value.


The following counters will be displayed:

- Max Power Allocation — Displays the maximum amount of power in milliwatts assigned to the device connected to the selected port.
- Power Consumption — Displays the amount of power in milliwatts assigned to the powered device connected to the selected port.
- Class — Displays the class information of the device connected if the power mode is Class Limit.
- Overload Counter — Displays the total number of power overload occurrences.
- Short Counter — Displays the total number of power shortage occurrences.
- Denied Counter—Displays the number of times that the powered device was denied power.
- Absent Counter—Displays the number of times that the power was stopped to the powered device because the powered device was no longer detected.
- Invalid Signature Counter—Displays the times that an invalid signature was received. Signatures are the means by which the powered device identifies itself to the Power Sourcing Equipment (PSE). Signatures are generated during powered device detection, classification, or maintenance.

Interface:	Port	GE18 ▼
PoE Administrative Status:	<input checked="" type="checkbox"/>	Enable
Time Range:	<input checked="" type="checkbox"/>	Enable
Time Range Name:	▼	Edit
Power Priority Level:	<input type="radio"/>	Critical
	<input checked="" type="radio"/>	High
	<input type="radio"/>	Low
Administrative Power Allocation:	<input type="text" value="30000"/>	(Range: 0 - 30000, Default: 30000)
Max Power Allocation:	30000 mW	
Power Consumption:	6600 mW	
Class:	4	
Overload Counter:	0	
Short Counter:	0	
Denied Counter:	0	
Absent Counter:	1	
Invalid Signature Counter:	0	

Apply Close

Step 18. Click **Apply**.

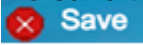Step 19. To save the configuration permanently, go to the Copy/Save Configuration page or click the  icon at the upper portion of the page.

You should now have successfully configured the Time-Based PoE on your 220 Series Smart Plus Switch.