



Cisco Nexus 3400-S Series NX-OS Software Upgrade and Downgrade Guide, Release 9.2(2)

First Published: 2019-09-27

Last Modified: 2019-11-14

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

© 2011 Cisco Systems, Inc. All rights reserved.

© 2019 Cisco Systems, Inc. All rights reserved.



CONTENTS

PREFACE

Preface	v
Audience	v
Document Conventions	v
Related Documentation for Cisco Nexus 9000 Series Switches	vi
Documentation Feedback	vi
Communications, Services, and Additional Information	vi

CHAPTER 1

New and Changed Information	1
New and Changed Information	1

CHAPTER 2

Upgrading and Downgrading the Cisco Nexus 3400-S Series NX-OS Software	3
About the Software Image	3
Prerequisites for Upgrading the Cisco NX-OS Software	3
Cisco NX-OS Software Upgrade Guidelines	4
Upgrading the Cisco NX-OS Software	5

CHAPTER 3

Optionality in Cisco NX-OS Software	9
Optionality in Cisco NX-OS Software	9
Using Modular Packages	11
Bootting the NX-OS Image in Base or Full Mode	12
Information About RPMs	12
Format of the RPM	12
Optional RPMs and Their Associated Features	13
Guidelines for NX-OS Feature RPM Installation	14
Using Install CLIs for Feature RPM Operation	15
Using Install CLIs for Digital Signature Support	17

Querying All Installed RPMs	17
Installing the RPMs Using One Step Procedure	18
Installing the RPMs Using Two Steps Procedure	19
Upgrading the RPMs Using One Step	20
Downgrading the RPMs	22
Removing the RPMs	23
Information About YUM Commands	23
Performing Package Operations Using the YUM Commands	23
Finding the Base Version RPM of the Image	24
Checking the List of the Installed RPMs	24
Getting Details of the Installed RPMs	25
Installing the RPMs	25
Upgrading the RPMs	28
Downgrading the RPMs	30
Deleting the RPMs	32
Support for YUM Groups	33
Finding Repositories	40
Finding the Installed YUM Version	40
Mapping the NX-OS CLI to the YUM Commands	41
Configuring an FTP server and Setting up a Local FTP YUM Repository	42
Creating an FTP Server on Red Hat Enterprise Linux 7 (RHEL7) Virtual Machine	42
Creating a Local FTP YUM Repository	43
Configuring a Switch to Reach an FTP Server	44
Creating User Roles for Install Operation	45



Preface

This preface includes the following sections:

- [Audience, on page v](#)
- [Document Conventions, on page v](#)
- [Related Documentation for Cisco Nexus 9000 Series Switches, on page vi](#)
- [Documentation Feedback, on page vi](#)
- [Communications, Services, and Additional Information, on page vi](#)

Audience

This publication is for network administrators who install, configure, and maintain Cisco Nexus switches.

Document Conventions

Command descriptions use the following conventions:

Convention	Description
bold	Bold text indicates the commands and keywords that you enter literally as shown.
<i>Italic</i>	Italic text indicates arguments for which you supply the values.
[x]	Square brackets enclose an optional element (keyword or argument).
[x y]	Square brackets enclosing keywords or arguments that are separated by a vertical bar indicate an optional choice.
{x y}	Braces enclosing keywords or arguments that are separated by a vertical bar indicate a required choice.
[x {y z}]	Nested set of square brackets or braces indicate optional or required choices within optional or required elements. Braces and a vertical bar within square brackets indicate a required choice within an optional element.

Convention	Description
<i>variable</i>	Indicates a variable for which you supply values, in context where italics cannot be used.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string includes the quotation marks.

Examples use the following conventions:

Convention	Description
<code>screen font</code>	Terminal sessions and information the switch displays are in screen font.
boldface screen font	Information that you must enter is in boldface screen font.
<i>italic screen font</i>	Arguments for which you supply values are in italic screen font.
<>	Nonprinting characters, such as passwords, are in angle brackets.
[]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

Related Documentation for Cisco Nexus 9000 Series Switches

The entire Cisco Nexus 9000 Series switch documentation set is available at the following URL:

http://www.cisco.com/en/US/products/ps13386/tsd_products_support_series_home.html

Documentation Feedback

To provide technical feedback on this document, or to report an error or omission, please send your comments to nexus9k-docfeedback@cisco.com. We appreciate your feedback.

Communications, Services, and Additional Information

- To receive timely, relevant information from Cisco, sign up at [Cisco Profile Manager](#).
- To get the business impact you're looking for with the technologies that matter, visit [Cisco Services](#).
- To submit a service request, visit [Cisco Support](#).
- To discover and browse secure, validated enterprise-class apps, products, solutions and services, visit [Cisco Marketplace](#).
- To obtain general networking, training, and certification titles, visit [Cisco Press](#).
- To find warranty information for a specific product or product family, access [Cisco Warranty Finder](#).

Cisco Bug Search Tool

[Cisco Bug Search Tool](#) (BST) is a web-based tool that acts as a gateway to the Cisco bug tracking system that maintains a comprehensive list of defects and vulnerabilities in Cisco products and software. BST provides you with detailed defect information about your products and software.



CHAPTER 1

New and Changed Information

This chapter provides release-specific information for each new and changed feature in the *Cisco Nexus 3400-S Series NX-OS Software Upgrade and Downgrade Guide, Release 9.2(2)*.

- [New and Changed Information, on page 1](#)

New and Changed Information

Table 1: New and Changed Features for Cisco NX-OS Release 9.2(2)

Feature	Description	Changed in Release	Where Documented
New guide	First publication of Cisco Nexus 3400-S Software Upgrade and Downgrade Guide for release 9.2(2).	9.2(2v)	



CHAPTER 2

Upgrading and Downgrading the Cisco Nexus 3400-S Series NX-OS Software

This chapter describes how to upgrade or downgrade the Cisco NX-OS software. It contains the following sections:

- [About the Software Image, on page 3](#)
- [Prerequisites for Upgrading the Cisco NX-OS Software, on page 3](#)
- [Cisco NX-OS Software Upgrade Guidelines, on page 4](#)
- [Upgrading the Cisco NX-OS Software, on page 5](#)

About the Software Image

Each device is shipped with the Cisco NX-OS software preinstalled. The Cisco NX-OS software consists of one NX-OS software image. The image filename begins with "nxos" (for example, nxos.9.2.2.bin). Only this image is required to load the Cisco NX-OS operating system.



Note Another type of binary file is the software maintenance upgrade (SMU) package file. SMUs contain fixes for specific defects. They are created to respond to immediate issues and do not include new features. SMU package files are available for download from Cisco.com and generally include the ID number of the resolved defect in the filename (for example, n3400-dk9.2.2.CSCab00001.gbin). For more information on SMUs, see the [Cisco Nexus 3400-S NX-OS System Management Configuration Guide](#).



Note Cisco also provides electronic programmable logic device (EPLD) image upgrades to enhance hardware functionality or to resolve known hardware issues. The EPLD image upgrades are independent from the Cisco NX-OS software upgrades. For more information on EPLD images and the upgrade process, see the [Cisco Nexus 3400-S Platform FPGA/EPLD Upgrade Release Notes](#).

Prerequisites for Upgrading the Cisco NX-OS Software

Upgrading the Cisco NX-OS software has the following prerequisites:

- Ensure that everyone who has access to the device or the network is not configuring the device or the network during this time. You cannot configure a device during an upgrade. Use the **show configuration session summary** command to verify that you have no active configuration sessions.
- Save, commit, or discard any active configuration sessions before upgrading or downgrading the Cisco NX-OS software image on your device. On a device with dual supervisors, the active supervisor module cannot switch over to the standby supervisor module during the Cisco NX-OS software upgrade if you have an active configuration session.
- Ensure that the device has a route to the remote server. The device and the remote server must be in the same subnetwork if you do not have a router to route traffic between subnets. To verify connectivity to the remote server, use the **ping** command.

```
switch# ping 172.18.217.1 vrf management
PING 172.18.217.1 (172.18.217.1): 56 data bytes
64 bytes from 172.18.217.1: icmp_seq=0 ttl=239 time=106.647 ms
64 bytes from 172.18.217.1: icmp_seq=1 ttl=239 time=76.807 ms
64 bytes from 172.18.217.1: icmp_seq=2 ttl=239 time=76.593 ms
64 bytes from 172.18.217.1: icmp_seq=3 ttl=239 time=81.679 ms
64 bytes from 172.18.217.1: icmp_seq=4 ttl=239 time=76.5 ms

--- 172.18.217.1 ping statistics ---
5 packets transmitted, 5 packets received, 0.00% packet loss
round-trip min/avg/max = 76.5/83.645/106.647 ms
```

For more information on configuration sessions, see the [Cisco Nexus 3400-S NX-OS System Management Configuration Guide](#).

Cisco NX-OS Software Upgrade Guidelines



Note The [Cisco Nexus 3400-S NX-OS Release Notes](#) contain specific upgrade guidelines for each release. See the Release Notes for the target upgrade release before starting the upgrade.

Before attempting to upgrade to any software image, follow these guidelines:

- Schedule the upgrade when your network is stable and steady.
- Avoid any power interruption, which could corrupt the software image, during the installation procedure.
- On devices with dual supervisor modules, both supervisor modules must have connections on the console ports to maintain connectivity when switchovers occur during a software upgrade. See the [Hardware Installation Guide](#) for your specific chassis.
- Perform the installation on the active supervisor module, not the standby supervisor module.
- The **install all** command is the recommended method for software upgrades because it performs configuration compatibility checks and BIOS upgrades automatically. In contrast, changing the boot variables and reloading the device bypasses these checks and the BIOS upgrade and therefore is not recommended.

- For secure POAP, ensure that DHCP snooping is enabled and set firewall rules to block unintended or malicious DHCP servers. For more information on POAP, see the [Cisco Nexus 3400-S NX-OS Fundamentals Configuration Guide](#).
- By default, the software upgrade process is disruptive.

Upgrading the Cisco NX-OS Software

Use this procedure to upgrade to a Cisco NX-OS 9.2(x) release.



Note If an error message appears during the upgrade, the upgrade will fail because of the reason indicated.

SUMMARY STEPS

1. **Read the release notes for the software image file for any exceptions to this upgrade procedure.** See the Cisco Nexus 3400-S NX-OS Release Notes.
2. Log in to the device on the console port connection.
3. Ensure that the required space is available for the image file to be copied.
4. If you need more space on the active supervisor module, delete unnecessary files to make space available.
5. Verify that there is space available on the standby supervisor module.
6. If you need more space on the standby supervisor module, delete any unnecessary files to make space available.
7. Log in to Cisco.com, choose the software image file for your device from the following URL, and download it to a file server: <http://software.cisco.com/download/navigator.html>.
8. Copy the software image to the active supervisor module using a transfer protocol. You can use FTP, TFTP, SCP, or SFTP.
9. Display the SHA256 checksum for the file to verify the operating system integrity and ensure that the downloaded image is safe to install and use.
10. Check the impact of upgrading the software before actually performing the upgrade.
11. Save the running configuration to the startup configuration.
12. Upgrade the Cisco NX-OS software using the **install all nxos bootflash: filename [no-reload |serial]** command.
13. (Optional) Display the entire upgrade process.
14. (Optional) Log in and verify that the device is running the required software version.
15. (Optional) If necessary, install any licenses to ensure that the required features are available on the device. See the [Cisco NX-OS Licensing Guide](#).

DETAILED STEPS

-
- Step 1** **Read the release notes for the software image file for any exceptions to this upgrade procedure.** See the Cisco Nexus 3400-S NX-OS Release Notes.
- Step 2** Log in to the device on the console port connection.
- Step 3** Ensure that the required space is available for the image file to be copied.

```
switch# dir bootflash:
49152   Dec 10 14:43:39 2015 lost+found/
80850712 Dec 10 15:57:44 2015 n3400-s-dk9.9.2.2.bin
...

Usage for bootflash://sup-local
 4825743360 bytes used
16312102912 bytes free
21137846272 bytes total
```

Note We recommend that you have the image file for at least one previous release of the Cisco NX-OS software on the device to use if the new image file does not load successfully.

Step 4 If you need more space on the active supervisor module, delete unnecessary files to make space available.

```
switch# delete bootflash:n3400-s-dk9.9.2.2.bin
```

Step 5 Verify that there is space available on the standby supervisor module.

```
switch# dir bootflash://sup-standby/
49152   Dec 10 14:43:39 2015 lost+found/
80850712 Dec 10 15:57:44 2015 n3400-s-dk9.9.2.2.bin
...

Usage for bootflash://sup-standby
 4825743360 bytes used
16312102912 bytes free
21137846272 bytes total
```

Step 6 If you need more space on the standby supervisor module, delete any unnecessary files to make space available.

```
switch# delete bootflash://sup-standby/n3400-s-dk9.9.2.2.bin
```

Step 7 Log in to Cisco.com, choose the software image file for your device from the following URL, and download it to a file server: <http://software.cisco.com/download/navigator.html>.

Step 8 Copy the software image to the active supervisor module using a transfer protocol. You can use FTP, TFTP, SCP, or SFTP.

```
switch# copy scp://user@scpserver.cisco.com//download/nxos.9.2.2.bin bootflash:nxos.9.2.2.bin
```

Step 9 Display the SHA256 checksum for the file to verify the operating system integrity and ensure that the downloaded image is safe to install and use.

```
switch# show file bootflash://sup-1/nxos.9.2.2.bin sha256sum
5214d563b7985ddad67d52658af573d6c64e5a9792b35c458f5296f954bc53be
```

Step 10 Check the impact of upgrading the software before actually performing the upgrade.

```
switch# show install all impact nxos bootflash:nxos.9.2.2.bin
```

Step 11 Save the running configuration to the startup configuration.

```
switch# copy running-config startup-config
```

Step 12 Upgrade the Cisco NX-OS software using the **install all nxos bootflash: filename [no-reload |serial]** command.

```
switch# install all nxos bootflash:nxos.9.2.2.bin
```

The following options are available:

- **no-reload**—Exits the software upgrade process before the device is reloaded.
- **serial**—Upgrades the I/O modules in Cisco Nexus 9500 Series switches one at a time. (By default, the I/O modules are upgraded in parallel, which reduces the overall upgrade time. Specifically, the I/O modules are upgraded in parallel in this order: the first half of the line cards and fabric modules, the second half of the line cards and fabric modules, the first system controller, the second system controller.)

Note If you enter the **install all** command without specifying a filename, the command performs a compatibility check, notifies you of the modules that will be upgraded, and confirms that you want to continue with the installation. If you choose to proceed, it installs the NXOS software image that is currently running on the switch and upgrades the BIOS of various modules from the running image if required.

Step 13 (Optional) Display the entire upgrade process.

```
switch# show install all status
```

Step 14 (Optional) Log in and verify that the device is running the required software version.

```
switch# show version
```

Step 15 (Optional) If necessary, install any licenses to ensure that the required features are available on the device. See the [Cisco NX-OS Licensing Guide](#).



CHAPTER 3

Optionality in Cisco NX-OS Software

This chapter describes optionality in Cisco NX-OS software.

- [Optionality in Cisco NX-OS Software, on page 9](#)
- [Using Modular Packages, on page 11](#)
- [Booting the NX-OS Image in Base or Full Mode, on page 12](#)
- [Information About RPMs, on page 12](#)
- [Information About YUM Commands, on page 23](#)
- [Configuring an FTP server and Setting up a Local FTP YUM Repository, on page 42](#)
- [Creating User Roles for Install Operation, on page 45](#)

Optionality in Cisco NX-OS Software

Beginning with Cisco NXOS Release 9.2(1), Cisco NX-OS software image supports modular package management. Cisco NX-OS software now provides flexibility to add, remove, and upgrade the features selectively without changing the base NX-OS software.


The advantages for using modular Cisco NX-OS software are:

- Lean NX-OS software
- Asynchronous delivery of the features and the fixes: Quick fixes are provided that are independent of the releases, including new features.
- Reduced footprint of binaries and libraries at run time

Cisco NX-OS software is provisioned to boot the NX-OS software in two modes as described in the following illustration:

- Base NX-OS mode
- Full NX-OS mode

Figure 1: Optionality in Cisco NX-OS Software

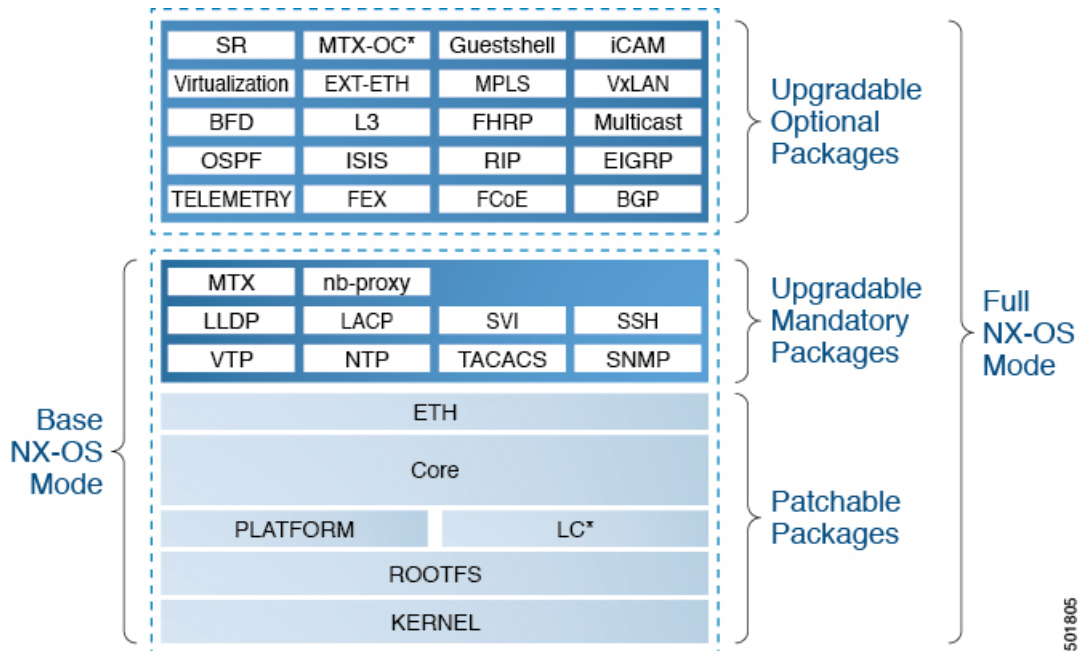

501805



Note The following optional packages are not supported in the Cisco NX-OS Release 9.2(2v):

- SR
- iCAM
- Virtualization
- MPLS
- VxLAN
- Multicast
- FEX
- FCoE

- Base NX-OS mode contains:
 - Upgradable mandatory packages
 - Patchable packages
- Full NX-OS mode contains:
 - Upgradable optional packages
 - Upgradable mandatory packages
 - Patchable packages



Note The default mode is full NX-OS mode.

In base NX-OS mode, basic Layer 2 and Layer 3 features are available. All dynamic routing features (for example, BGP, OSPF, EIGRP, RIP, and ISIS) and other optional feature RPMs are not available by default. You have to install the optional feature RPMs on top of the base image.

In full NX-OS mode, all feature RPMs are installed during boot time when Ethernet plugin is activated by the plugin manager. There is no change in the user behavior as compared to the previous releases.

Using Modular Packages

The Cisco NX-OS software image is traditionally constructed with the packaging that forms a Cisco Linux distribution. It makes upgrading certain packages difficult as each package is big in size.

This section describes a new package management for the Cisco NX-OS software image. Beginning with Cisco NX-OS Release 9.2(1), some NXOS features are considered as optional, for example, BGP and OSPF.

Each modular package has the following important characteristics:

- Upgrade functionality: The modular packages can be independently upgraded. The modular packages should be used from the same release as performing upgrades on these packages across multiple releases is not supported.
- Optionality: The modular packages are optional, for example, these packages can be removed or uninstalled at run time. The removal of the modular packages does not affect bringing-up the system and it does not affect any other functionality of the switches.



Note All APIs exported by the modular package should be used only after the installation of the feature.

RPM and YUM

RPM (RedHat Package Manager) is the package management system used for packaging in the Linux Standard Base (LSB). The RPM command options are grouped into three subgroups for:

- Querying and verifying packages
- Installing, upgrading, and removing packages
- Performing miscellaneous functions

Note that **rpm** is the command name for the main command used with RPM, while **.rpm** is the extension used for the RPM files.

YUM (Yellowdog Updater, Modified) is an open source command-line tool for RPM based Linux systems. It allows users and system administrators to easily install, update, remove, or search software packages on the systems. YUM adds the automatic updates and the package management, including dependency management, to the RPM systems. In addition to understanding the installed packages on a system, YUM works with the repositories that are collections of the packages and they are typically accessible over a network connection.

Booting the NX-OS Image in Base or Full Mode

You can now boot the NX-OS image in base or full mode. The full boot mode installs the complete NX-OS software which is similar to the software of the previous releases. This is the default boot mode. The base boot mode has no optional RPMs installed.

To use the command line option, see the following steps:

- Use the **install reset nxos base** option to install the NX-OS image in the base boot mode using the VSH prompt. After reload, the switch is in the base mode with no optional packages installed.
- Use the **install reset nxos full** option to install the NX-OS image in the full boot mode using the VSH prompt. After reload, the switch is in the full mode with the optional packages automatically installed.

For more information, see Using Install CLIs for Feature RPM Operation section.

Information About RPMs

RPMs can be upgraded or downgraded to a new software version using NXOS install commands or by using YUM commands. An upgradable RPM can be optional or mandatory.

See the following sections for more information about optional and mandatory RPMs.

Format of the RPM

The general format of a RPM is <name>-<version>-<release>.<arch>.rpm. The same format is followed for NXOS feature RPMs.

- Name: package name, for example, BFD
- Version in <x.y.x.b> format: <major.minor.patch.build_number>, for example, 2.0.1.0
- Release: The branch from which the RPM is created, for example, 9.2.2
- Arch: The architecture type of the RPM, for example, lib32_n3400-s

See the following table for more information on the naming convention, for example, bfd-2.0.0.0-9.2.2.lib32_n3400-s.rpm:

Table 2: RPM Naming Convention

RPM Naming Convention	Description
Example: bfd-2.0.0.0-9.2.2.lib32_n3400-s.rpm	
bfd	Indicates the name of the component.
2	Indicates that the RPM is not backward compatible. Configuration loss takes place during an upgrade.

RPM Naming Convention Example: bfd-2.0.0.0-9.2.2.lib32_n3400-s.rpm	Description
0	Indicates the incremental API changes/CLI changes/Schema changes with backward compatibility. It is applicable to the new features on top of the existing capabilities. No configuration is lost during an upgrade.
0	Indicates a bug fix without any functionality change. No configuration is lost during an upgrade.
0	This number tracks how many times the component has changed during the development cycle of a release. This value will be 0 for all the release images.
9.2.2	Indicates the release number or the distribution version for the RPM. It aligns to the NVR format. Since the feature RPM is only applicable to a NXOS release, this field has NXOS release version number present.
lib32_n3400-s	Indicates the architecture type of the RPM.

Optional RPMs and Their Associated Features

The optional RPMs are the RPMs that can be installed to enable the features without affecting the native NXOS behavior or they can be removed using the **install deactivate** command from the switch.

Optional RPMs, for example, EIGRP are not a part of the base software. They can be added, upgraded, and removed as required using either **yum** or **install** CLI commands from the switch.

See the following list of the optional RPMs and their associated features:

Table 3: List of Optional RPMs and Their Associated Features

Package Name	Associated Features
BGP	feature bgp
BFD	feature bfd
Container-tracker	feature container-tracker
EIGRP	feature eigrp
Ext-Eth	<ul style="list-style-type: none"> • feature sla_sender • feature sla_responder • feature sla_twamp-server • feature sflow

Package Name	Associated Features
FHRP	<ul style="list-style-type: none"> • feature hsrp • feature vrrpv3
ISIS	feature isis
OSPF	<ul style="list-style-type: none"> • feature ospf • feature ospfv3
RIP	feature rip
TELEMETRY	feature telemetry

Guidelines for NX-OS Feature RPM Installation

See the following NX-OS system RPM repositories that are present in the Cisco NX-OS Series switches for the RPM management.



Note Avoid manually copying the RPMs to system repositories. Instead use the install or YUM commands.

Table 4: RPM Repositories That Are Present in the Switches

Repository Name	Repository Path	Description
groups-repo	/rpms	Part of the bundled NX-OS image. It is used to keep all the RPMs that are bundled as part of the NX-OS image. All RPMs based in this repository are known as base RPMs.

Repository Name	Repository Path	Description
localdb	/bootflash/.rpmstore/patching/localrepo	Used for RPM persistency. When a user adds a NX-OS feature RPM as part of install add command, the RPM is copied to this location and it is persisted during the reloads. User has the responsibility to clean the repository. To add a RPM to this repository, use install add command. To remove a RPM from this repository, use install remove command. YUM commands can be used to populate the repository too. The maximum space for the repository is 200Mb along with the patching repository for Cisco Nexus 9000 Series switches except Cisco Nexus 3000 Series switches. For Cisco Nexus 3000 Series switches, the maximum space for the repository is 20 Mb only.
patching	/bootflash/.rpmstore/patching/patchrepo	Used for RPM persistency. When a user adds a NX-OS patch RPM to the switch, the patch RPM is copied to this repository.
thirdparty	/bootflash/.rpmstore/thirdparty	Used for RPM persistency when a user adds a third party RPM.

The **groups-repo** and **localdb** repositories hold the NX-OS feature RPMs that should be installed during the system boot or during activation. YUM commands or **install** command can be used for the installation or the removal of these RPMs.

The following rules are applied to the feature RPM installation procedure during boot or install time:

- Only RPMs with the same NX-OS release number should be selected for the installation.
- Base RPMs cannot be added to the **localdb** repository.

Using Install CLIs for Feature RPM Operation

See the following reference table for using install CLIs for the feature RPM operations:

Table 5: Reference for Install CLIs for the Feature RPM Operations

CLI	Description
install reset	<p>This operation removes all the patches, persisted configurations, upgraded packages, third party installed packages, unsaved configurations, and reloads the switch's previous mode (Full/Base) with the default packages.</p> <p>The install reset command also performs write erase operation. The following message is displayed at the prompt:</p> <pre>switch(config)# install reset</pre> <hr/> <p>WARNING!!This operation will remove all patches, upgraded packages, persisted etc configs, third party packages installed, startup configuration(write erase) and reload the switch with default packages.</p> <hr/> <p>Do you want to proceed with reset operation? (y/n)? [n]</p>
install reset nxos base	This operation installs NXOS in base mode by removing all patches, upgraded packages, persisted etc configurations, third party packages installed, startup configuration (write erase), and reloads the switch with the default packages.
install reset nxos full	This operation installs NXOS with full mode by removing all patches, upgraded packages, persisted etc configs, third party packages installed, startup configuration (write erase), and reloads the switch with the default packages (with mandatory and optional RPMs).
install add <>	Adds an RPM file to respective repository and updates the repository (patch/feature/third-party).
install activate <rpm name>	Installs an RPM that is present in the repository.
install commit <rpm name>	Used for the patch RPMs. Makes the patch persist during reload.
install deactivate <rpm name>	Un-installs an RPM.
install remove <rpm name>	Removes an RPM file from the repository and updates the repository.
sh install active	Displays the list of the installed RPMs in the system apart from base rootfs RPMs. (features/patch/third-party).

CLI	Description
sh install inactive	Displays the list of the RPMs that are present in the repository but they are not installed.
sh install packages	Lists all the RPMs that are installed including rootfs RPMs.

Using Install CLIs for Digital Signature Support

Use the following CLI commands to install CLIs for digital signature support:

SUMMARY STEPS

1. switch# **install add bootflash:<keyfile> gpg-key**
2. switch# **install verify package <package-name>**
3. OR switch# **install verify bootflash:<RPM file>**

DETAILED STEPS

	Command or Action	Purpose
Step 1	switch# install add bootflash:<keyfile> gpg-key Example: <pre>install add bootflash:RPM-GPG-KEY-puppetlabs gpg-key [#####] 100% Install operation 304 completed successfully at Thu Jun 19 16:40:28 2018</pre>	Cisco release RPMs are signed with Cisco GPG (GNU Privacy Guard) key. The public GPG key is present at <code>/etc/pki/rpm-gpg/arm-Nexus9k-rel.gpg</code> . To add other public keys from different sources, use the steps in this section.
Step 2	switch# install verify package <package-name>	Verifies the package.
Step 3	OR switch# install verify bootflash:<RPM file> Example: <pre>switch# install verify bootflash:bgp-2.0.0.0-9.2.2.lib32_n3400.rpm RSA signed switch#</pre>	Use step 2 or 3 to verify whether the RPM file is a signed or non-signed file.

Querying All Installed RPMs

Complete the following step to query all the installed RPMs:

SUMMARY STEPS

1. **show install packages**

DETAILED STEPS

	Command or Action	Purpose
Step 1	<pre> show install packages Example: switch# show install packages Boot Image: NXOS Image: bootflash:/nxos.9.2.2.bin ----- Installed Packages attr.x86_64 2.4.47-r0.0 installed Unsigned aufs-util.x86_64 3.14+git0+b59a2167a1-r0.0 installed Unsigned base-files.n3400-s 3.0.14-r89.0 installed Unsigned base-passwd.lib32_x86 3.5.29-r0.1.0 installed Unsigned bash.lib32_x86 4.3.30-r0.0 installed Unsigned bfd.lib32_n3400-s 2.0.0.0-9.2.2 installed Signed bgp.lib32_n3400-s 2.0.0.0-9.2.2 installed Signed binutils.x86_64 2.25.1-r0.0 installed Unsigned bridge-utils.x86_64 1.5-r0.0 installed Unsigned busybox.x86_64 1.23.2-r0.0 installed Unsigned busybox-udhcpc.x86_64 1.23.2-r0.0 installed Unsigned bzip2.x86_64 1.0.6-r5.0 installed Unsigned ca-certificates.all 20150426-r0.0 installed Unsigned cgroup-lite.x86_64 1.1-r0.0 installed Unsigned chkconfig.x86_64 1.3.58-r7.0 installed Unsigned container-tracker.lib32_n3400-s 2.0.0.0-9.2.2 installed Signed containerd-docker.x86_64 0.2.3+gitaa8187dbd3b7ad67d8e5e3a15115d3eef43a7ed1-r0.0 installed Unsigned core.lib32_n3400-s 2.0.0.0-9.2.2 installed Signed coreutils.lib32_x86 8.24-r0.0 installed Unsigned cpio.x86_64 2.12-r0.0 installed Unsigned cracklib.lib32_x86 2.9.5-r0.0 installed Unsigned cracklib.x86_64 2.9.5-r0.0 installed Unsigned createrepo.x86_64 0.4.11-r9.0 installed Unsigned cronie.x86_64 1.5.0-r0.0 installed Unsigned curl.lib32_x86 7.60.0-r0.0 installed Unsigned db.x86_64 6.0.30-r0.0 installed Unsigned dbus-1.lib32_x86 1.8.20-r0.0 installed Unsigned dhcp-client.x86_64 4.3.2-r0.0 installed Unsigned dhcp-server.x86_64 4.3.2-r0.0 installed Unsigned switch# </pre>	Queries all the installed RPMs.

Installing the RPMs Using One Step Procedure

The CLIs for both install and upgrade RPMs are the same. See the following step to install the RPMs using one step procedure:

Procedure

	Command or Action	Purpose
Step 1	<p>install add <rpm> activate</p> <p>Example:</p> <pre>switch# install add bootflash:chef.rpm activate Adding the patch (/chef.rpm) [#####] 100% Install operation 868 completed successfully at Tue May 8 11:20:10 2018 Activating the patch (/chef.rpm) [#####] 100% Install operation 869 completed successfully at Tue May 8 11:20:20 2018</pre>	Installs and activates the RPM.

Example

```
switch#
show install active

Boot Image:
  NXOS Image: bootflash:/nxos.9.2.2.bin

Active Packages:
  bgp-2.0.1.0-9.2.2.lib32_n3400-s
  chef-12.0.0alpha.2+20150319234423.git.1608.b6eb10f-1.el5.x86_64

Active Base Packages:
  lACP-2.0.0.0-9.2.2.lib32_n3400-s
  lldp-2.0.0.0-9.2.2.lib32_n3400-s
  mtX-device-2.0.0.0-9.2.2.lib32_n3400-s
  mtX-grpc-agent-2.0.0.0-9.2.2.lib32_n3400-s
  mtX-infra-2.0.0.0-9.2.2.lib32_n3400-s
  mtX-netconf-agent-2.0.0.0-9.2.2.lib32_n3400-s
  mtX-restconf-agent-2.0.0.0-9.2.2.lib32_n3400-s
  mtX-telemetry-2.0.0.0-9.2.2.lib32_n3400-s
  ntp-2.0.0.0-9.2.2.lib32_n3400-s
  nxos-ssh-2.0.0.0-9.2.2.lib32_n3400-s
  snmp-2.0.0.0-9.2.2.lib32_n3400-s
  svi-2.0.0.0-9.2.2.lib32_n3400-s
  tacacs-2.0.0.0-9.2.2.lib32_n3400-s
  vtp-2.0.0.0-9.2.2.lib32_n3400-s

switch(config)#
```

Installing the RPMs Using Two Steps Procedure

The CLIs for both install and upgrade RPMs are the same. See the following steps to install the RPMs using two steps procedure:

SUMMARY STEPS

1. **install add** *<rpm>*
2. **install activate** *<rpm>*

DETAILED STEPS

	Command or Action	Purpose
Step 1	install add <i><rpm></i> Example: <pre>switch# install add bootflash:bgp-2.0.1.0-9.2.2.lib32_n3400.rpm [#####] 100% Install operation 892 completed successfully at Thu Jun 7 13:56:38 2018 switch(config)# sh install inactive grep bgp bgp-2.0.1.0-9.2.2.lib32_n3400-s</pre>	Installs the RPM.
Step 2	install activate <i><rpm></i> Example:	Activates the RPM.

Example

```
switch#
install activate bgp

[#####] 100%
Install operation 891 completed successfully at Thu Jun  7 13:53:07 2018

switch#
show install active | grep bgp

bgp-2.0.0.0-9.2.2.lib32_n3400

switch# sh install inactive | grep bgp

switch#
```

Upgrading the RPMs Using One Step

The CLIs for both install and upgrade RPMs are the same. See the following steps to upgrade the RPMs:

Procedure

	Command or Action	Purpose
Step 1	<pre>install add <rpm>activate upgrade</pre> <p>Example:</p> <pre>switch(config)# install add bootflash:bgp-2.0.2.0-9.2.2.lib32_n3400-s.rpm activate upgrade</pre> <p>Adding the patch (/bgp-2.0.2.0-9.2.2.lib32_n3400-s.rpm) [#####] 100% Install operation 870 completed successfully at Tue May 8 11:22:30 2018</p> <p>Activating the patch (/bgp-2.0.2.0-9.2.2.lib32_n3400-s.rpm) [#####] 100% Install operation 871 completed successfully at Tue May 8 11:22:40 2018 </p>	Installs the RPM.

Example

```
switch(config)#
show install active
```

Boot Image:
NXOS Image: bootflash:/nxos.9.2.2.bin

Active Packages:
bgp-2.0.2.0-9.2.2.lib32_n3400-s
chef-12.0.0alpha.2+20150319234423.git.1608.b6eb10f-1.e15.x86_64

Active Base Packages:
lACP-2.0.0.0-9.2.2.lib32_n3400-s
lldp-2.0.0.0-9.2.2.lib32_n3400-s
mtx-device-2.0.0.0-9.2.2.lib32_n3400-s
mtx-grpc-agent-2.0.0.0-9.2.2.lib32_n3400-s
mtx-infra-2.0.0.0-9.2.2.lib32_n3400-s
mtx-netconf-agent-2.0.0.0-9.2.2.lib32_n3400-s
mtx-restconf-agent-2.0.0.0-9.2.2.lib32_n3400-s
mtx-telemetry-2.0.0.0-9.2.2.lib32_n3400-s
ntp-2.0.0.0-9.2.2.lib32_n3400-s
nxos-ssh-2.0.0.0-9.2.2.lib32_n3400-s
snmp-2.0.0.0-9.2.2.lib32_n3400-s
svi-2.0.0.0-9.2.2.lib32_n3400-s
tacacs-2.0.0.0-9.2.2.lib32_n3400-s
vtp-2.0.0.0-9.2.2.lib32_n3400-s

Downgrading the RPMs

The downgrade procedure needs a special CLI attribute. See the following step to downgrade the RPMs using the one step procedure:

Procedure

	Command or Action	Purpose
Step 1	<pre>install add <rpm>activate downgrade</pre> <p>Example:</p> <pre>switch(config)# install add bootflash:bgp-2.0.1.0-9.2.2.lib32_n3400-s.rpm activate downgrade</pre> <p>Adding the patch (/bgp-2.0.1.0-9.2.2.lib32_n3400-s.rpm) [#####] 100% Install operation 872 completed successfully at Tue May 8 11:24:43 2018</p> <p>Activating the patch (/bgp-2.0.1.0-9.2.2.lib32_n3400-s.rpm) [#####] 100% Install operation 873 completed successfully at Tue May 8 11:24:52 2018</p>	Downgrades the RPM.

Example

```
switch(config)#
show install active
```

Boot Image:
NXOS Image: bootflash:/nxos.9.2.2.bin

Active Packages:
bgp-2.0.1.0-9.2.2.lib32_n3400-s
chef-12.0.0alpha.2+20150319234423.git.1608.b6eb10f-1.e15.x86_64

Active Base Packages:
lACP-2.0.0.0-9.2.2.lib32_n3400-s
lldp-2.0.0.0-9.2.2.lib32_n3400-s
mtx-device-2.0.0.0-9.2.2.lib32_n3400-s
mtx-grpc-agent-2.0.0.0-9.2.2.lib32_n3400-s
mtx-infra-2.0.0.0-9.2.2.lib32_n3400-s
mtx-netconf-agent-2.0.0.0-9.2.2.lib32_n3400-s
mtx-restconf-agent-2.0.0.0-9.2.2.lib32_n3400-s
mtx-telemetry-2.0.0.0-9.2.2.lib32_n3400-s
ntp-2.0.0.0-9.2.2.lib32_n3400-s
nxos-ssh-2.0.0.0-9.2.2.lib32_n3400-s
snmp-2.0.0.0-9.2.2.lib32_n3400-s

```
svi-2.0.0.0-9.2.2.lib32_n3400-s
tacacs-2.0.0.0-9.2.2.lib32_n3400-s
vtp-2.0.0.0-9.2.2.lib32_n3400-s
switch(config)#
```

Removing the RPMs

See the following steps to remove the RPMs:

SUMMARY STEPS

1. `install remove <rpm>`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><code>install remove <rpm></code></p> <p>Example:</p> <pre>switch(config)# show install inactive grep bgp bgp-2.0.0.0-9.2.2.lib32_n93400 switch(config)# install remove bgp Proceed with removing bgp? (y/n)? [n] y [#####] 100% Install operation 890 Removal of base rpm package is not permitted at Thu Jun 7 13:52:15 2018</pre>	Removes the RPM from the repository.

Information About YUM Commands

See the following sections for more information about YUM commands.



Note YUM commands do not support ctrl+c. Install commands do support ctrl+c. If YUM commands are aborted using ctrl+c, manual cleanup must be performed using `"/isan/bin/patching_utils.py --unlock"`.

Performing Package Operations Using the YUM Commands

See the following sections for performing package operations using the YUM commands:



Note YUM commands are accessed only from the BASH shell on the box and they are not allowed from the NXOS VSH terminal.



Note Make sure that as a sudo user, you have access to the super user privileges.

Finding the Base Version RPM of the Image

Use the **ls /rpms** command to find the base version RPM of the image. The base RPM version is the pre-installed RPM that is archived in the system image.

```
#
ls /rpms

bfd-2.0.0.0-9.2.2.lib32_n3400-s.rpm          lACP-2.0.0.0-9.2.2.lib32_n3400-s.rpm
      nxos-ssh-2.0.0.0-9.2.2.lib32_n3400-s.rpm
bgp-2.0.0.0-9.2.2.lib32_n3400-s.rpm        lldp-2.0.0.0-9.2.2.lib32_n3400-s.rpm
      ospf-2.0.0.0-9.2.2.lib32_n3400-s.rpm
container-tracker-2.0.0.0-9.2.2.lib32_n3400-s.rpm  mtX-device-2.0.0.0-9.2.2.lib32_n3400-s.rpm
      repodata
eigrp-2.0.0.0-9.2.2.lib32_n3400-s.rpm
mtX-grpc-agent-2.0.0.0-9.2.2.lib32_n3400-s.rpm      rip-2.0.0.0-9.2.2.lib32_n3400-s.rpm
ext-eth-2.0.0.0-9.2.2.lib32_n3400-s.rpm          mtX-infra-2.0.0.0-9.2.2.lib32_n3400-s.rpm
      snmp-2.0.0.0-9.2.2.lib32_n3400-s.rpm
fhrp-2.0.0.0-9.2.2.lib32_n3400-s.rpm
mtX-netconf-agent-2.0.0.0-9.2.2.lib32_n3400-s.rpm  svi-2.0.0.0-9.2.2.lib32_n3400-s.rpm
guestshell-2.0.0.0-9.2.2.lib32_n3400-s.rpm
mtX-restconf-agent-2.0.0.0-9.2.2.lib32_n3400-s.rpm  tacacs-2.0.0.0-9.2.2.lib32_n3400-s.rpm
ins_tor_sdk_t2-1.0.0.0-9.2.0.77.lib32_n3400-s.rpm
mtX-telemetry-2.0.0.0-9.2.2.lib32_n3400-s.rpm      telemetry-2.3.4.0-9.2.2.lib32_n3400-s.rpm
ins_tor_sdk_t3-1.0.0.0-9.2.0.77.lib32_n3400-s.rpm  nbproxy-2.0.0.0-9.2.2.lib32_n3400-s.rpm
      vtp-2.0.0.0-9.2.2.lib32_n3400-s.rpm
isis-2.0.0.0-9.2.2.lib32_n3400-s.rpm              ntp-2.0.0.0-9.2.2.lib32_n3400-s.rpm
```

Checking the List of the Installed RPMs

Use the **yum list installed** command to query the feature and third party RPMs and grep a specific RPM. See the following example for feature RPMs:

```
bash-4.2#
yum list installed | grep lib32_n3400-s

bfd.lib32_n3400-s                2.0.0.0-9.2.2          @groups-repo
core.lib32_n3400-s              2.0.0.0-9.2.2          installed
eth.lib32_n3400-s               2.0.0.0-9.2.2          installed
guestshell.lib32_n3400-s        2.0.0.0-9.2.2          @groups-repo
lACP.lib32_n3400-s              2.0.0.0-9.2.2          installed
linecard2.lib32_n3400-s         2.0.0.0-9.2.2          installed
lldp.lib32_n3400-s              2.0.0.0-9.2.2          installed
mtX-device.lib32_n3400-s         2.0.0.0-9.2.2          installed
mtX-grpc-agent.lib32_n3400-s    2.0.0.0-9.2.2          installed
mtX-infra.lib32_n3400-s         2.0.0.0-9.2.2          installed
```



```

mtx-netconf-agent.lib32_n3400-s      2.0.0.0-9.2.2      installed
mtx-restconf-agent.lib32_n3400-s    2.0.0.0-9.2.2      installed
mtx-telemetry.lib32_n3400-s        2.0.0.0-9.2.2      installed
nbproxy.lib32_n3400-s              2.0.0.0-9.2.2      installed
ntp.lib32_n3400-s                  2.0.0.0-9.2.2      installed
nxos-ssh.lib32_n3400-s              2.0.0.0-9.2.2      installed
ospf.lib32_n3400-s                  2.0.0.0-9.2.2      @groups-repo
platform.lib32_n3400-s              2.0.0.0-9.2.2      installed
snmp.lib32_n3400-s                  2.0.0.0-9.2.2      installed
svi.lib32_n3400-s                   2.0.0.0-9.2.2      installed
tacacs.lib32_n3400-s                2.0.0.0-9.2.2      installed
tor.lib32_n3400-s                   2.0.0.0-9.2.0.77   installed
virtualization.lib32_n3400-s        2.0.1.0-9.2.2      @localdb
vtp.lib32_n3400-s                   2.0.0.0-9.2.2      installed
...

```

Getting Details of the Installed RPMs

The `yum info <rpmname>` command lists out the detailed info of the installed RPM.

`yum info bfd`

```

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo

```

```

localdb          | 1.1 kB   00:00 ...
patching         | 951 B    00:00 ...
thirdparty      | 951 B    00:00 ...

```

```

Installed Packages
Name       : bfd
Arch      : lib32_n3400-s
Version   : 2.0.0.0
Release   : 9.2.2
Size      : 6.4 M
Repo      : installed
From repo : groups-repo
Summary   : Cisco NXOS BFD
URL       : http://cisco.com/
License   : Proprietary
Description : Provides BFD support

```

Installing the RPMs

Installing the RPMs downloads the RPMs and copies the respective program to the switches. See the following example for installing the RPMs from a remote server (that is reachable in the network):

```

bash-4.3#
yum install
http://10.0.0.2/modularity/rpms/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm

```

```

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo
| 1.1 kB    00:00 ...
localdb
| 951 B    00:00 ...
localdb/primary
| 886 B    00:00 ...
localdb
| 951 B    00:00 ...
| 951 B    00:00 ...
| 951 B    00:00 ...
Setting up Install Process
bfd-2.0.1.0-9.2.2.lib32_n3400.rpm
| 1.6 MB    00:00
Examining /var/tmp/yum-root-RaANgb/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm:
bfd-2.0.1.0-9.2.2.lib32_n3400
Marking /var/tmp/yum-root-RaANgb/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm to be installed
Resolving Dependencies
--> Running transaction check
---> Package bfd.lib32_n3400 0:2.0.1.0-9.2.2 will be installed
--> Finished Dependency Resolution

```

Dependencies Resolved

Package	Repository	Arch	Version	Size
Installing:				
bfd		lib32_n3400	2.0.1.0-9.2.2	
	/bfd-2.0.1.0-9.2.2.lib32_n3400			6.4 M
Transaction Summary				

```

Install      1 Package

Total size: 6.4 M
Installed size: 6.4 M
Is this ok [y/N]: y
Downloading Packages:
Running Transaction Check
Running Transaction Test
Transaction Test Succeeded
Running Transaction
  Installing : bfd-2.0.1.0-9.2.2.lib32_n3400
                                                    1/1

starting pre-install package version mgmt for bfd
pre-install for bfd complete
starting post-install package version mgmt for bfd
post-install for bfd complete

Installed:
  bfd.lib32_n3400 0:2.0.1.0-9.2.2

```

Complete!

See the following example for installing the RPMs from local bootflash:

```
sudo yum install /bootflash/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm
```

```
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo
```

```
localdb          | 1.1 kB    00:00 ...
patching         | 951 B     00:00 ...
thirdparty      | 951 B     00:00 ...
```

```
Setting up Install Process
Examining /bootflash/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm: bfd-2.0.1.0-9.2.2.lib32_n3400
Marking /bootflash/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm as an update to
bfd-2.0.0.0-9.2.2.lib32_n3400
Resolving Dependencies
--> Running transaction check
---> Package bfd.lib32_n3400 0:2.0.0.0-9.2.2 will be updated
---> Package bfd.lib32_n3400 0:2.0.1.0-9.2.2 will be an update
--> Finished Dependency Resolution
```

Dependencies Resolved

Package Version	Arch Size	Repository
Updating: bfd 2.0.1.0-9.2.2	lib32_n3400 6.4 M	/bfd-2.0.1.0-9.2.2.lib32_n3400

Transaction Summary

Upgrade 1 Package

```
Total size: 6.4 M
Is this ok [y/N]: y
Downloading Packages:
Running Transaction Check
Running Transaction Test
Transaction Test Succeeded
Running Transaction
  Updating   : bfd-2.0.1.0-9.2.2.lib32_n3400
```

1/2

```
starting pre-install package version mgmt for bfd
pre-install for bfd complete
starting post-install package version mgmt for bfd
post-install for bfd complete
Cleanup      : bfd-2.0.0.0-9.2.2.lib32_n3400
```

2/2

```
Updated:
  bfd.lib32_n3400 0:2.0.1.0-9.2.2
```

```
Complete!
```

See the following example for installing the RPM if it is available in a repository:

```
yum install eigrp
```

Upgrading the RPMs

See the following example for upgrading the RPMs from a remote server (that is reachable in the network):

```
bash-4.3#
yum upgrade
http://10.0.0.2/modularity/rpms/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm
```

```
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo
```

```
localdb | 1.1 kB 00:00 ...
patching | 951 B 00:00 ...
thirdparty | 951 B 00:00 ...
```

```
Setting up Upgrade Process
bfd-2.0.1.0-9.2.2.lib32_n3400.rpm
```

```
 | 1.6 MB 00:00
Examining /var/tmp/yum-root-RaANgb/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm:
bfd-2.0.1.0-9.2.2.lib32_n3400
Marking /var/tmp/yum-root-RaANgb/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm as an update to
bfd-2.0.0.0-9.2.2.lib32_n3400
Resolving Dependencies
--> Running transaction check
---> Package bfd.lib32_n3400 0:2.0.0.0-9.2.2 will be updated
---> Package bfd.lib32_n3400 0:2.0.1.0-9.2.2 will be an update
--> Finished Dependency Resolution
```

```
Dependencies Resolved
```

Package	Repository	Arch	Version	Size
Updating:				
bfd		lib32_n3400	2.0.1.0-9.2.2	
		/bfd-2.0.1.0-9.2.2.lib32_n3400		6.4 M

```
Transaction Summary
```

```
Upgrade 1 Package
```

```
Total size: 6.4 M
Is this ok [y/N]: y
```

```

Downloading Packages:
Running Transaction Check
Running Transaction Test
Transaction Test Succeeded
Running Transaction
** Found 1 pre-existing rpmdb problem(s), 'yum check' output follows:
busybox-1.23.2-r0.0.x86_64 has missing requires of busybox-syslog
  Updating      : bfd-2.0.1.0-9.2.2.lib32_n3400                      1/2

starting pre-install package version mgmt for bfd
pre-install for bfd complete
starting post-install package version mgmt for bfd
post-install for bfd complete
  Cleanup      : bfd-2.0.0.0-9.2.2.lib32_n3400                      2/2

Updated:
  bfd.lib32_n3400 0:2.0.1.0-9.2.2

Complete!

```

See the following example for upgrading the RPMs from local bootflash:

```
sudo yum upgrade /bootflash/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm
```

```

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo

localdb          | 1.1 kB      00:00 ...
patching         | 951 B       00:00 ...
thirdparty      | 951 B       00:00 ...

Setting up Upgrade Process
Examining /bootflash/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm: bfd-2.0.1.0-9.2.2.lib32_n3400
Marking /bootflash/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm as an update to
bfd-2.0.0.0-9.2.2.lib32_n3400
Resolving Dependencies
--> Running transaction check
---> Package bfd.lib32_n3400 0:2.0.0.0-9.2.2 will be updated
---> Package bfd.lib32_n3400 0:2.0.1.0-9.2.2 will be an update
--> Finished Dependency Resolution

Dependencies Resolved

-----
Package                               Arch                               Repository
Version                               Size
-----
Updating:
bfd                                   lib32_n3400

```

```
2.0.1.0-9.2.2                                /bfd-2.0.1.0-9.2.2.lib32_n3400
                                                6.4 M
```

```
Transaction Summary
```

```
Upgrade      1 Package
```

```
Total size: 6.4 M
```

```
Is this ok [y/N]: y
```

```
Downloading Packages:
```

```
Running Transaction Check
```

```
Running Transaction Test
```

```
Transaction Test Succeeded
```

```
Running Transaction
```

```
  Updating      : bfd-2.0.1.0-9.2.2.lib32_n3400
```

```
1/2
```

```
starting pre-install package version mgmt for bfd
```

```
pre-install for bfd complete
```

```
starting post-install package version mgmt for bfd
```

```
post-install for bfd complete
```

```
  Cleanup      : bfd-2.0.0.0-9.2.2.lib32_n3400
```

```
2/2
```

```
Updated:
```

```
  bfd.lib32_n3400 0:2.0.1.0-9.2.2
```

```
Complete!
```

See the following example for upgrading the RPMs if it is available in any repository:

```
yum upgrade eigrp
```

Downgrading the RPMs

See the following example for downgrading the RPMs from a remote server (that is reachable in the network):

```
sudo yum downgrade bfd-2.0.0.0-9.2.2.lib32_n3400
```

```
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
```

```
Setting up Downgrade Process
```

```
groups-repo
```

```
localdb          | 1.1 kB    00:00 ...
```

```
localdb/primary  | 951 B    00:00 ...
```

```
| 1.3 kB    00:00 ...
```

```

localdb
                                     2/2
patching
      | 951 B    00:00 ...
thirdparty
      | 951 B    00:00 ...
Resolving Dependencies
--> Running transaction check
---> Package bfd.lib32_n3400 0:2.0.0.0-9.2.2 will be a downgrade
---> Package bfd.lib32_n3400 0:2.0.1.0-9.2.2 will be erased
--> Finished Dependency Resolution

```

Dependencies Resolved

Package	Version	Size	Arch	Repository
Downgrading:				
bfd	2.0.0.0-9.2.2	1.6 M	lib32_n3400	groups-repo

Transaction Summary

Downgrade 1 Package

Total download size: 1.6 M

Is this ok [y/N]: y

Downloading Packages:

Running Transaction Check

Running Transaction Test

Transaction Test Succeeded

Running Transaction

Installing : bfd-2.0.0.0-9.2.2.lib32_n3400

1/2

starting pre-install package version mgmt for bfd

pre-install for bfd complete

starting post-install package version mgmt for bfd

post-install for bfd complete

Cleanup : bfd-2.0.1.0-9.2.2.lib32_n3400

2/2

Removed:

bfd.lib32_n3400 0:2.0.1.0-9.2.2

Installed:

bfd.lib32_n3400 0:2.0.0.0-9.2.2

Complete!

See the following example for downgrading the RPMs from local bootflash:

```
yum downgrade /bootflash/eigrp-2.0.0-9.2.2.lib32_n3400.rpm
```

See the following example for downgrading the RPMs if it is available in any repository:

```
yum downgrade eigrp
```

Deleting the RPMs

Deleting the RPMs de-installs the RPMs and removes any configuration CLI of the feature. Use the **yum erase** *<rpm>* command to delete the RPMs.

```
bash-4.2#
sudo yum erase bfd
```

```
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
Setting up Remove Process
Resolving Dependencies
--> Running transaction check
---> Package bfd.lib32_n3400-s 0:2.0.1.0-9.2.2 will be erased
--> Finished Dependency Resolution
```

```
Dependencies Resolved
```

Package	Arch	Repository	Version	Size
Removing:				
bfd	lib32_n3400-s	@bfd-2.0.1.0-9.2.2.lib32_n3400-s	2.0.1.0-9.2.2	6.4 M

```
Transaction Summary
```

```
Remove      1 Package
```

```
Installed size: 6.4 M
Is this ok [y/N]: y
Downloading Packages:
Running Transaction Check
Running Transaction Test
Transaction Test Succeeded
Running Transaction
  Erasing      : bfd-2.0.1.0-9.2.2.lib32_n3400-s
```

```
1/1
```

```
starting pre-remove package version mgmt for bfd
pre-remove for bfd complete
```

```
Removed:
  bfd.lib32_n3400-s 0:2.0.1.0-9.2.2
```


Complete!

Support for YUM Groups

The support for YUM groups is part of the package management. It simplifies the management of the packages for the administrators and it provides greater flexibility.

The administrators can group a list of packages (RPMs) into a logical group and they can perform various operations. YUM supports the following group commands:

- `grouplist`
- `groupinfo`
- `groupinstall`
- `groupremove`
- `groupupdate`

YUM groups can be broadly classified as L2, L3, routing, and management.

Using the `grouplist` Command

In Linux, number of packages are bundled to particular group. Instead of installing individual packages with yum, you can install particular group that will install all the related packages that belongs to the group. For example to list all the available groups, use the **`yum grouplist`** command:

```
bash-4.2#
sudo yum grouplist

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
Setting up Group Process
groups-repo

localdb           | 1.1 kB      00:00 ...
patching          | 951 B       00:00 ...
thirdparty        | 951 B       00:00 ...
groups-repo/group | 951 B       00:00 ...

Installed Groups:
  L2
  L3
  management
Available Groups:
  routing
Done

bash-4.3$
```

Using the groupmembers Command

Use **yum groupinfo** command to display the description and the contents of a package group. The command lists out the feature members of the group.

```
bash-4.2#
sudo yum groupinfo l2

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
Setting up Group Process
groups-repo

localdb                | 1.1 kB    00:00 ...
patching               | 951 B     00:00 ...
thirdparty             | 951 B     00:00 ...
                       | 951 B     00:00 ...

Group: L2
Mandatory Packages:
  lacp
  lldp
  svi
  vtp
```

Using the groupinstall Command

This command is for both install & upgrade of the members RPM. If the member is not installed, it will install the highest version available. If the member is already installed and higher RPM is available, it will upgrade that member.

```
bash-4.2#
sudo yum groupinstall routing

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo

localdb                | 1.1 kB    00:00 ...
patching               | 951 B     00:00 ...
thirdparty             | 951 B     00:00 ...
                       | 951 B     00:00 ...
Setting up Group Process
```

```

Package ospf-2.0.0.0-9.2.2.lib32_n3400-s already installed and latest version
Resolving Dependencies
--> Running transaction check
---> Package bgp.lib32_n3400-s 0:2.0.0.0-9.2.2 will be installed
---> Package eigrp.lib32_n3400-s 0:2.0.0.0-9.2.2 will be installed
---> Package isis.lib32_n3400-s 0:2.0.0.0-9.2.2 will be installed
---> Package rip.lib32_n3400-s 0:2.0.0.0-9.2.2 will be installed
--> Finished Dependency Resolution

```

Dependencies Resolved

Package	Arch	Repository	Version	Size
Installing:				
bgp	lib32_n3400-s	groups-repo	2.0.0.0-9.2.2	2.4 M
eigrp	lib32_n3400-s	groups-repo	2.0.0.0-9.2.2	428 k
isis	lib32_n3400-s	groups-repo	2.0.0.0-9.2.2	1.2 M
rip	lib32_n3400-s	groups-repo	2.0.0.0-9.2.2	214 k
Transaction Summary				

Install 4 Packages

Total download size: 4.2 M

Installed size: 19 M

Is this ok [y/N]: y

Downloading Packages:

Total

132 MB/s | 4.2 MB 00:00

Running Transaction Check

Running Transaction Test

Transaction Test Succeeded

Running Transaction

Installing : rip-2.0.0.0-9.2.2.lib32_n3400-s

1/4

starting pre-install package version mgmt for rip

pre-install for rip complete

starting post-install package version mgmt for rip

post-install for rip complete

Installing : isis-2.0.0.0-9.2.2.lib32_n3400-s

2/4

starting pre-install package version mgmt for isis

pre-install for isis complete

starting post-install package version mgmt for isis

post-install for isis complete

Installing : eigrp-2.0.0.0-9.2.2.lib32_n3400-s

3/4

starting pre-install package version mgmt for eigrp

pre-install for eigrp complete

starting post-install package version mgmt for eigrp

post-install for eigrp complete

Installing : bgp-2.0.0.0-9.2.2.lib32_n3400-s

Using the groupupdate Command

```

                                4/4
starting pre-install package version mgmt for bgp
pre-install for bgp complete
starting post-install package version mgmt for bgp
post-install for bgp complete

Installed:
  bgp.lib32_n3400-s 0:2.0.0.0-9.2.2          eigrp.lib32_n3400-s 0:2.0.0.0-9.2.2
                                isis.lib32_n3400-s 0:2.0.0.0-9.2.2          rip.lib32_n3400-s
0:2.0.0.0-9.2.2

Complete!

```

Using the groupupdate Command

Use the **yum groupupdate** command to update any existing installed group packages.

```

bash-4.3#
yum groupupdate routing

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo

localdb           | 1.1 kB      00:00 ...
localdb/primary   |  951 B      00:00 ...
localdb           | 1.9 kB      00:00 ...
patching
thirdparty        |  951 B      00:00 ...

Setting up Group Process
Resolving Dependencies
--> Running transaction check
----> Package bgp.lib32_n3400-s 0:2.0.0.0-9.2.2 will be updated
----> Package bgp.lib32_n3400-s 0:2.0.1.0-9.2.2 will be an update
----> Package eigrp.lib32_n3400-s 0:2.0.0.0-9.2.2 will be updated
----> Package eigrp.lib32_n3400-s 0:2.0.1.0-9.2.2 will be an update
----> Package isis.lib32_n3400-s 0:2.0.0.0-9.2.2 will be updated
----> Package isis.lib32_n3400-s 0:2.0.1.0-9.2.2 will be an update
----> Package ospf.lib32_n3400-s 0:2.0.0.0-9.2.2 will be updated
----> Package ospf.lib32_n3400-s 0:2.0.1.0-9.2.2 will be an update
----> Package rip.lib32_n3400-s 0:2.0.0.0-9.2.2 will be updated
----> Package rip.lib32_n3400-s 0:2.0.1.0-9.2.2 will be an update
--> Finished Dependency Resolution

Dependencies Resolved

```

Package	Arch	Repository	Size	Version
Updating:				
bgp	lib32_n3400-s			
2.0.1.0-9.2.2		localdb		2.4 M
eigrp	lib32_n3400-s			
2.0.1.0-9.2.2		locald		428 k
isis	lib32_n3400-s			
2.0.1.0-9.2.2		local		1.2 M
ospf	lib32_n3400-s			
2.0.1.0-9.2.2		localdb		2.8 M
rip	lib32_n3400-s			
2.0.1.0-9.2.2		localdb		214 k
Transaction Summary				
<hr/>				
Upgrade	5 Packages			
Total download size: 7.0 M				
Is this ok [y/N]: y				
Downloading Packages:				
<hr/>				
Total				
269 MB/s 7.0 MB 00:00				
Running Transaction Check				
Running Transaction Test				
Transaction Test Succeeded				
Running Transaction				
Updating : eigrp-2.0.1.0-9.2.2.lib32_n3400-s				
1/10				
starting pre-install package version mgmt for eigrp				
pre-install for eigrp complete				
starting post-install package version mgmt for eigrp				
post-install for eigrp complete				
Updating : ospf-2.0.1.0-9.2.2.lib32_n3400-s				
2/10				
starting pre-install package version mgmt for ospf				
pre-install for ospf complete				
starting post-install package version mgmt for ospf				
post-install for ospf complete				
Updating : rip-2.0.1.0-9.2.2.lib32_n3400-s				
3/10				
starting pre-install package version mgmt for rip				
pre-install for rip complete				
starting post-install package version mgmt for rip				
post-install for rip complete				
Updating : isis-2.0.1.0-9.2.2.lib32_n3400-s				
4/10				
starting pre-install package version mgmt for isis				
pre-install for isis complete				
starting post-install package version mgmt for isis				
post-install for isis complete				
Updating : bgp-2.0.1.0-9.2.2.lib32_n3400-s				
5/10				
starting pre-install package version mgmt for bgp				
pre-install for bgp complete				
starting post-install package version mgmt for bgp				
post-install for bgp complete				

Using the grouperase Command

```

Cleanup      : bgp-2.0.0.0-9.2.2.lib32_n3400-s
              6/10
Cleanup      : isis-2.0.0.0-9.2.2.lib32_n3400-s
              7/10
Cleanup      : rip-2.0.0.0-9.2.2.lib32_n3400-s
              8/10
Cleanup      : ospf-2.0.0.0-9.2.2.lib32_n3400-s
              9/10
Cleanup      : eigrp-2.0.0.0-9.2.2.lib32_n3400-s
              10/10

Updated:
  bgp.lib32_n3400-s 0:2.0.1.0-9.2.2      eigrp.lib32_n3400-s 0:2.0.1.0-9.2.2
  isis.lib32_n3400-s 0:2.0.1.0-9.2.2    ospf.lib32_n3400-s 0:2.0.1.0-9.2.2
  rip.lib32_n3400-s 0:2.0.1.0-9.2.2

Complete!

```

Using the grouperase Command

Use the **yum grouperase** command to delete the groups or all the RPM members of the group.

```

bash-4.3$
sudo yum grouperase routing

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
Setting up Group Process
groups-repo

localdb           | 1.1 kB    00:00 ...
patching          | 951 B     00:00 ...
thirdparty        | 951 B     00:00 ...
                  | 951 B     00:00 ...

Resolving Dependencies
--> Running transaction check
---> Package bgp.lib32_n3400-s 0:2.0.0.0-9.2.2 will be erased
---> Package eigrp.lib32_n3400-s 0:2.0.0.0-9.2.2 will be erased
---> Package isis.lib32_n3400-s 0:2.0.0.0-9.2.2 will be erased
---> Package ospf.lib32_n3400-s 0:2.0.0.0-9.2.2 will be erased
---> Package rip.lib32_n3400-s 0:2.0.0.0-9.2.2 will be erased
--> Finished Dependency Resolution

Dependencies Resolved


```

Package	Arch	Repository	Version	Size
Removing:				

bgp	lib32_n3400-s	@groups-repo	11 M	2.0.0.0-9.2.2
eigrp	lib32_n3400-s	@groups-repo	2.0 M	2.0.0.0-9.2.2
isis	lib32_n3400-s	@groups-repo	5.7 M	2.0.0.0-9.2.2
ospf	lib32_n3400-s	@groups-repo	15 M	2.0.0.0-9.2.2
rip	lib32_n3400-s	@groups-repo	1.0 M	2.0.0.0-9.2.2

Transaction Summary

Remove 5 Packages

Installed size: 34 M

Is this ok [y/N]: y

Downloading Packages:

Running Transaction Check

Running Transaction Test

Transaction Test Succeeded

Running Transaction

Erasing : isis-2.0.0.0-9.2.2.lib32_n3400-s

1/5

starting pre-remove package version mgmt for isis

pre-remove for isis complete

Erasing : ospf-2.0.0.0-9.2.2.lib32_n3400-s

2/5

starting post-remove package version mgmt for isis

post-remove for isis complete

starting pre-remove package version mgmt for ospf

pre-remove for ospf complete

Erasing : eigrp-2.0.0.0-9.2.2.lib32_n3400-s

3/5

starting post-remove package version mgmt for ospf

post-remove for ospf complete

starting pre-remove package version mgmt for eigrp

pre-remove for eigrp complete

Erasing : rip-2.0.0.0-9.2.2.lib32_n3400-s

4/5

starting post-remove package version mgmt for eigrp

post-remove for eigrp complete

starting pre-remove package version mgmt for rip

pre-remove for rip complete

Erasing : bgp-2.0.0.0-9.2.2.lib32_n3400-s

5/5

starting post-remove package version mgmt for rip

post-remove for rip complete

starting pre-remove package version mgmt for bgp

pre-remove for bgp complete

Removed:

bgp.lib32_n3400-s 0:2.0.0.0-9.2.2

isis.lib32_n3400-s 0:2.0.0.0-9.2.2

rip.lib32_n3400-s 0:2.0.0.0-9.2.2

eigrp.lib32_n3400-s 0:2.0.0.0-9.2.2

ospf.lib32_n3400-s 0:2.0.0.0-9.2.2

Complete!

Finding Repositories

This command lists the repositories that the switch has along with the number of RPMs it has to those repositories.

```
bash-4.3#
yum repolist all

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo

localdb          | 1.1 kB    00:00 ...
patching         | 951 B    00:00 ...
thirdparty      | 951 B    00:00 ...
repo id         | 951 B    00:00 ...
repo name
status
groups-repo
  Groups-RPM Database      enabled: 37
localdb
  Local RPM Database      enabled: 6
patching
  Patch-RPM Database      enabled: 0
thirdparty
  Thirdparty RPM Database  enabled: 0
open-nxos
  open-nxos                disabled
repolist: 43
```

Finding the Installed YUM Version

See the following example for listing the installed YUM version:

```
yum --version

3.4.3
  Installed: rpm-5.4.14-r0.0.x86_64 at 2018-06-02 13:04
  Built    : Wind River <info@windriver.com> at 2018-04-27 08:36
  Committed: Wind River <info@windriver.com> at 2018-04-27

  Installed: yum-3.4.3-r9.0.x86_64 at 2018-06-02 13:05
  Built    : Wind River <info@windriver.com> at 2018-04-27 08:36
  Committed: Wind River <info@windriver.com> at 2018-04-27
```


Mapping the NX-OS CLI to the YUM Commands

See the following table for mapping the NX-OS CLI to the YUM commands:

Table 6: Patching Command Reference


NX-OS CLI Commands	YUM Commands
show install inactive	yum list --patch-only available
show install active	yum list --patch-only installed
show install committed	yum list --patch-only committed
show install packages	yum list --patch-only
show install pkg-info	yum info --patch-only
show install log	<p>yum history --show-patch-log</p> <p>where log_cmd:</p> <ul style="list-style-type: none"> • opid= - Log that is specific to an operation ID. • last - Shows the latest operation log. • reverse – Shows the log in reverse order. • detail – Show detailed log. • from= - Shows logging from a specific operation ID.
clear install log	<p>yum history --clear-patch-log=</p> <p>where clear_log_cmd:</p> <ul style="list-style-type: none"> • all - Clears the complete log. • - Clears the logs above this operation ID.
install add	yum install --add bootflash:/
install remove	yum install --remove
install remove inactive	yum install --remove all
install activate	<p>yum install --no-persist --nocommit</p> <p>Note By default, all packages are activated and committed.</p>
install deactivate	<p>yum erase --nocommit</p> <p>Note By default, all packages are de-activated and committed.</p>

NX-OS CLI Commands	YUM Commands
install commit	yum install --commit
Install commit	yum install --commit all

Configuring an FTP server and Setting up a Local FTP YUM Repository

For setting up a local FTP YUM repository, you have to first create an FTP server, create a local FTP YUM repository, and configure the Cisco NX-OS switch to reach the FTP server as outlined in the following illustration.

Figure 2: Configuring an FTP server and Setting up a Local FTP YUM Repository

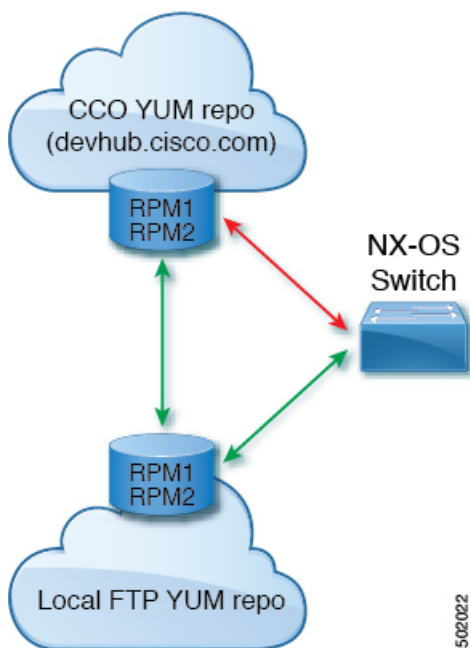

Note Visit <https://devhub.cisco.com/artifactory/open-nxos/9.2.1/> for Cisco **open-nxos** repository.

Creating an FTP Server on Red Hat Enterprise Linux 7 (RHEL7) Virtual Machine

Complete the following steps to create an FTP server on Red Hat Enterprise Linux 7 (RHEL7) Virtual Machine (VM):

SUMMARY STEPS

1. `yum install vsftpd`

2. `systemctl start vsftpd`
3. `systemctl status vsftpd`
4. `firewall-cmd --zone=public --permanent --add-port=21/tcp`
5. `firewall-cmd --zone=public --permanent --add-service=ftp`
6. `firewall-cmd --reload`
7. `wget ftp:// <ip of FTP server> /test.txt`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<code>yum install vsftpd</code>	Installs vsftpd, an FTP server.
Step 2	<code>systemctl start vsftpd</code>	Starts the FTP Server.
Step 3	<code>systemctl status vsftpd</code>	Checks the status of the FTP Server.
Step 4	<code>firewall-cmd --zone=public --permanent --add-port=21/tcp</code>	Allows access to the FTP services from the external systems and opens port 21.
Step 5	<code>firewall-cmd --zone=public --permanent --add-service=ftp</code>	Adds the FTP service.
Step 6	<code>firewall-cmd --reload</code>	Reloads the server.
Step 7	<code>wget ftp:// <ip of FTP server> /test.txt</code>	Hosts a file in the FTP server (for example, test.txt) and attempts Wget of that file. Note Note that <code>/var/ftp/</code> is the default home directory of the FTP server.

Creating a Local FTP YUM Repository

Complete the following steps to synchronize the external repository RPMs to the FTP server and create a local FTP YUM repository:

SUMMARY STEPS

1. `cat /etc/yum.repos.d/local.repo`
2. `bash-4.3# yum repolist`
3. `nohup reposync -r <repo-name mentioned in the local.repo> -p <directory path to sync>&`
4. `tail -f nouhup.out`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<code>cat /etc/yum.repos.d/local.repo</code> Example: <code>bash-4.3#</code> <code>cat /etc/yum.repos.d/local.repo</code>	Creates a repository file under <code>/etc/yum.repos.d/</code> , for example, creates local.repo repository and adds the base URL.

	Command or Action	Purpose
	<pre>[localrepo] name=localrepo baseurl= https://devhub.cisco.com/artifactory/open-nxos/7.0-3-I2-1/x86_64/ enabled=1 gpgcheck=0 sslverify=0</pre>	
Step 2	<p>bash-4.3# yum repolist</p> <p>Example:</p> <pre>bash-4.3# yum repolist Loaded plugins: fastestmirror, langpacks Loading mirror speeds from cached hostfile * base: mirror.dhakacom.com * extras: mirror.dhakacom.com * updates: mirror.dhakacom.com repo id repo name status base/7/x86_64 CentOS-7 - Base 9,911 extras/7/x86_64 CentOS-7 - Extras 313 localrepo localrepo 687 updates/7/x86_64 CentOS-7 - Updates 711 repolist: 11,622</pre>	Checks the reachability of the repository.
Step 3	<p>nohup reposync -r <repo-name mentioned in the local.repo> -p <directory path to sync>&</p> <p>Example:</p> <pre>nohup reposync -r localrepo -p /var/ftp/ &</pre> <p>This command creates a directory with the name local.repo inside /var/ftp/ and downloads all the packages from devhub.cisco.com to the directory.</p>	Synchronizes all the packages from the external repository to the FTP server home directory.
Step 4	tail -f nouhup.out	Checks the status of the synchronization.

Configuring a Switch to Reach an FTP Server

Complete the following steps to configure a switch to reach an FTP server:

SUMMARY STEPS

1. **run bash sudo su**
2. **ip netns exec management ping <ip_address>**
3. **cat /etc/yum/repos.d/ftp.repo**
4. **ip netns exec management bash**
5. **yum repolist**
6. **yum list available**

DETAILED STEPS

	Command or Action	Purpose
Step 1	run bash sudo su	Logs in as a sudo user.
Step 2	ip netns exec management ping <ip_address>	Checks the reachability of the FTP server address from the switch using the ping command.
Step 3	cat /etc/yum/repos.d/ftp.repo Example: <pre>bash-4.3# cat /etc/yum/repos.d/ftp.repo [ftp] name=ftp baseurl=ftp://10.232.44.34/localrepo/ enabled=1 gpgcheck=0 sslverify=0</pre>	Creates a repository file on the switch with the FTP server address as the URL.
Step 4	ip netns exec management bash	Uses the Bash shell prompt.
Step 5	yum repolist Example: <pre>bash-4.3# yum repolist Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching, : protect-packages groups-repo 1.1 kB 00:00 ... localdb 951 B 00:00 ... patching 951 B 00:00 ... thirdparty 951 B 00:00 ... thirdparty/primary 758 B 00:00 ... thirdparty 1/1 repo id repo name status groups-repo Groups-RPM Database 37 localdb Local RPM Database 0 patching Patch-RPM Database 0 thirdparty Thirdparty RPM Database 1 ftp ftp 686 repolist: 724</pre>	Checks the reachability of newly created repository.
Step 6	yum list available	Lists the available packages in the new repository.

Creating User Roles for Install Operation

The **install** command is only available to the users of admin role. The **install** command can be available to a user by RBAC. See RBAC configuration guidelines for the same.

